

FOTILE

RANGE HOOD

Operation and Installation Manual | AMG9033

Please read carefully about the user manual before using the product.
And keep it well after reading, for future reference.

Any needs, please contact FOTILE service center.
Some pictures in this manual are sketch map, only
for reference. If there are some discrepancies,
please subject to real object.


WWW.FOTILEGLOBAL.COM

Dear user, thank you for choosing the Fotile product range meticulously manufactured for you by Fotile. Please read through this Operation and Installation Manual before use (hereinafter referred to as the “manual”) to help you familiarize yourself with information concerning safety, operation, and maintenance of this range hood, and enable you to enjoy the new joy of cooking.

Please be sure to read this manual carefully before use, and follow the requirements set out in the manual during use. The operation instruction in this manual is very important for the product to be kept in a good working condition. In case of any product failure due to improper use, you will lose the right to free warranty, and any direct or indirect free warranty application will be rejected by our regional authorized service centers. In addition, it is important to both of us that you are suggested to contact Fotile’s local authorized service center when in need of maintenance during or after the warranty period.

Our authorized service center will provide you with professional spare parts and technical support of Fotile, so as to give high-quality and fast maintenance support to your product and offer you the most relaxing and attentive service.

If you need service, please provide the product model and serial number on the product nameplate. Refer to diagram A below to locate the nameplate on your product.

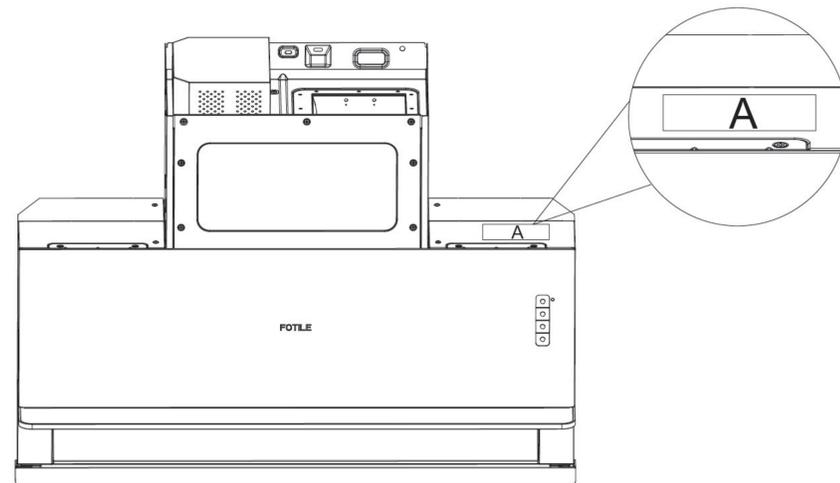

Contents

Warnings and Safety Instructions	1
Method of Use	4
Main Technical Parameters	4
Operation Instruction	5
Description of Function Buttons	6
Instructions on Integrated Control of Range Hood and Hob ----	7
Cleaning and Maintenance	8
Identification and Troubleshooting of Common Faults	9
Installation	11
Packing List	11
Installation Warnings	12
Product Dimensions	13
Installation Recommendations	13
Installation Steps	16
Commissioning after Installation	19
Explosive View	20

Product features and parameters are subject to change at any time without notice and may differ slightly from this manual. Visit our official website at www.fotileglobal.com for the latest information.

Warnings and Safety Instructions

Special Instructions:

Please use the product in strict accordance with the regulations of this manual. Our company will assume no responsibility for any loss of property or personal damage caused by improper use of the product.

Warning:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

For safety use, groups with diminishing physical, sensory, or mental capabilities or lacking experience/knowledge (including children under 8 years) should not use this product, unless under the supervision or direction of the people in charge of their safety (for EU market).

Children shall be supervised to ensure that they do not play with the product, and children are not allowed to clean and repair the product without permission.








Note: The accessible part may become very hot during operation.




- a. Please dump and clean the accumulated oil regularly. Please wipe the outer surface of the range hood after each use.
- b. For comfortable use, please clean the outer surface and oil cup of the range hood frequently.
- c. Please clean the range hood as specified in the Instructions to avoid the risk of causing fire.




Strictly execute


 ground connection	The plug must be inserted into a power socket which has been installed appropriately and grounded reliably to ensure safety. The grounding wire shall not be connected to a gas pipe, water pipe, lightning rod, telephone line, etc. Poor grounding may cause electric shock or other accidents.
	As this range hood is heavy and has a complex installation procedure, its installation should be performed by installation and maintenance professionals according to the manual. Such dangers as electric shock, detachment or fire may be caused if installation of screws or fixtures is not completed in accordance with this manual.
	Before using this product, please unpack it to check for damage. Do not install and use it in case of any obvious damage, and contact the Fotile authorized service center immediately.

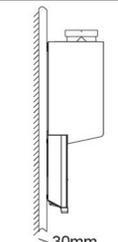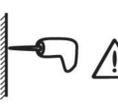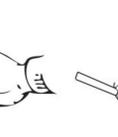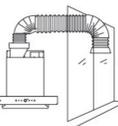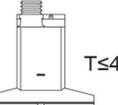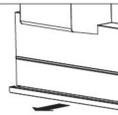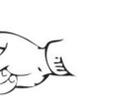	Please follow the safety guide of heating equipment manufacturer, and the safety standards issued by fire control and other administrative departments.
	The wall on which the range hood is installed should have sufficient support strength. For hollow walls, the thickness of the solid layer of the hollow plate must be greater than 30 mm; for drywalls, the range hood shall be fixed onto the wooden pillar at the back; mounting holes can be drilled directly into concrete walls. The appliance must be firmly installed onto the wall.
	Be careful not to damage power cables or other hidden equipment such as gas or water pipes when cutting or drilling walls or ceilings.
	This product is for daily household use only. Do not use it for commercial purposes or in other special environments (e.g. outdoors); do not use it for discharging hazardous or explosive substances or gases. If this product is used in special circumstances, Fotile will assume no responsibility.
	When the range hood and gas stove are used at the same time, make sure that the doors and windows are not fully closed to guarantee a good air circulation in the room.
	If the cooking pan is on fire, turn off the range hood immediately (continued operation of the range hood will fuel the fire). Please extinguish the fire with effective methods; for example, cover the open flame with a metal lid, close the main gas valve immediately, and keep combustibles away from the flame.
	Make sure that the exhaust duct of the exhaust type range hood is connected to the outdoors to discharge the exhaust gas, so as to avoid fire hazard and ensure fresh air.
	The temperature of the operating environment of the range hood shall not exceed 40°C.
	Please follow the method specified in the manual to clean the range hood to avoid the risk of fire.
	Please clean the oil cup timely to avoid overflowing when the oil reaches the very scale in the oil cup. Please don't use the waste oil.
	To avoid electric shock, the range hood must be powered off before being moved for installation, cleaning or repairing. Be sure to wear protective gloves during installation, cleaning or repair to protect hands from being injured by the sharp edges of metal plates in the range hood.

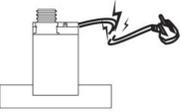	A separately controlled power socket is recommended for the range hood. If the range hood is to remain unused for a long time, please power it off.
	If the power cable becomes damaged, please contact the Fotile authorized service center for replacement to avoid danger.
	If anything abnormal occurs during operation, please turn off the power switch of the range hood, unplug the power plug, or cut off the main power, and call Fotile authorized service center immediately. Continuous operation in abnormal conditions may cause dangers such as electric shock or fire.
	Children are not allowed to use the range hood alone, or do not put the range hood in a place where the infant can reach it, otherwise burns, electric shock or other accidental injuries may occur.
	To avoid risk of suffocation, children are not allowed to play with plastic packaging bags or boxes: keep the packaging away from children, as it is not a plaything. Children must be supervised strictly, to ensure that they do not play with the product.

⚠ Don'ts

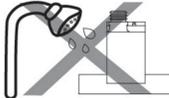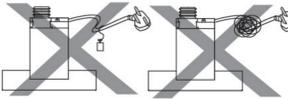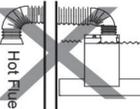	There will be a risk of fire if the range hood is not cleaned as specified in this manual.
	Do not modify, stretch, knot, or squeeze the power cable or put it under weight, otherwise accidents such as electric shock or fire may occur due to breakage of the power cable.
	Do not modify the internal wiring of the range hood without permission, otherwise human injury may be resulted from possible abnormal operation. Improper repair may lead to electric shock, fire or other dangers.
	Do not discharge the exhaust gas of the range hood into the hot flue used to discharge the smoke from burning gas or other fuels. The relevant air emission regulations must be complied with.
	Do not use the gas stove without cookware, otherwise the range hood above may get damaged.
	Do not touch the lamp bulb when it is turned on or has just been turned off, otherwise you may suffer burns.

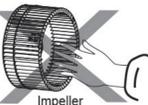	To avoid injury, do not put your hands or other articles into the rotating blades when the range hood is working.
	Electrical parts such as motor, switch and connector must not be damped by water. Do not clean the range hood with water. Do not use the range hood after it becomes wet as accidents such as electric leakage and electric shock may occur.
	Do not touch the power plug or electrical parts, or operate the power switch with wet hands as electric shock is likely to occur.

-  a. Warranty services can only be provided by agencies or personnel authorized by FOTILE. Please do not dismantle or repair this product by yourself. Otherwise, the warranty services will not be guaranteed.
- b. Please keep the actual voltage and frequency consistent with those specified in the Instruction to avoid any potential damage to this product.
- c. When the range hood is used in combination with any non-electrical device, the indoor negative pressure must not exceed 4Pa (4 × 10⁻⁵ bar) (for German market).
- d. Tempered glass is used in this product. Due to the tempering principle, there is an extremely small probability that the glass may explode. In case the glass explodes due to reasons other than improper usage, our company will provide this accessory free of charge. As the probability of the tempered glass breakage may significantly increase under the following circumstances, please do not: knock on the glass (particularly four corners of the glass) with a cooker or other hard objects; hit the glass when opening the cupboard door near the range hood; and expose the glass to an environment that is too cold or too hot, or one that drastically alternates between hot and cold.

Method of Use

Main Technical parameters

Electrical parameters

Model	Voltage/frequency	Total input power	Motor power	LED lamp power
AMG9033	220~240V/50Hz	261W	258W	10V/3W


Exhaust Performance parameter

Model	AMG9033	Product size	897mm(L)×322mm(W) ×726mm(H)	
Maximum static(Pa)	860			
Gear	Auto Turbo	Strong	Weak	
Air volume(m³/h)	1330	1160	770	
Noise(dB(A))	58	55	45	

- Notes: a.Auto speed has built-in auto turbo mode, flow and noise in table are the maximum value on auto turbo mode.
 b.The indicated noise value is sound pressure level, and the sound power level are 57 dB(Weak-mode) , 67 dB(Strong-mode), 70dB(Auto Turbo-mode).
 c. Air volume is tested in accordance with IEC 61591-2010 standard, and noise tested in accordance with IEC 60704-3-2006 standard.
 d. Such parameters as air volume and noise may have a deviation of less than 5%.

Operation instruction

- Let's get familiar with the control screen of the range hood

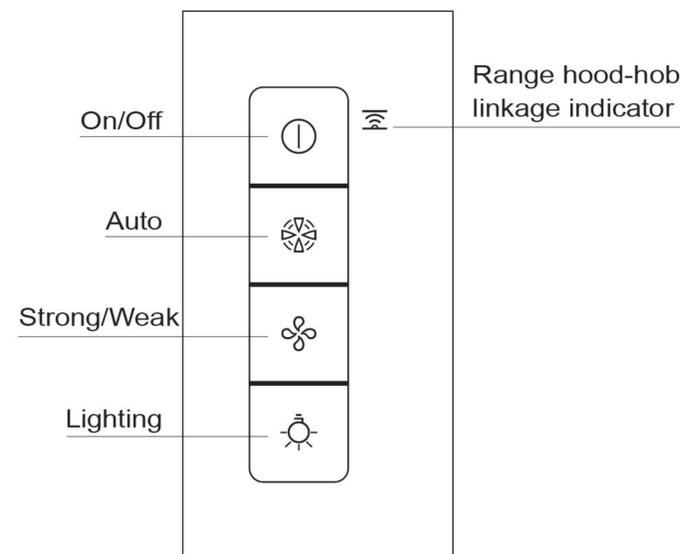

Description of Function Buttons

- On/Off button

Press once to light up . If there is no other button operation within 2 minutes, the range hood will shut off automatically.

When the fan is on, press once, will flash and start the delay state, and the fan and LED lamp will be turned off in 2 minutes. In the delay state, press again to turn off the fan and LED lamp.

In the delay state, press the air volume button or activate the range hood-hob linkage function to end the delay state and start the corresponding functional status.

If only the LED lamp is on, press once to turn off the LED lamp and the range hood.

- Lighting button

Press once to light up and turn on the range hood. Press once to light up and turn on the LED lamp, and press again to turn off the LED lamp.

- "Auto" button

Press once to light up and turn on the range hood. Press once to light up and have the range hood operated in the automatic cruise mode.

Notes: Brightness change of prompts automatic adjustment of gear according to the flue resistance.

- "Strong/Weak" button

Press once to light up and turn on the range hood. Press once to light up and have the range hood operated in the Strong mode, press again to switch to the Weak mode with "Weak" lit up, and press once again to turn off the fan.

Instructions on integrated control of range hood and hob



If you have purchased FOTILE Range Hood AM9033, and Gas Hob which have ganged function at the same time ,you can enjoy their ganged function !

The specific use method is as follows:

- Code-matching connection (code-matching connection between range hood and gas hob is required before they are linked together):
 - Plug in the range hood. Install the gas hob battery (power supply), and make sure that all the knobs are closed.
 - Press ① Power button shortly to turn on the range hood, and then immediately press 🔦 Lighting button for more than 5 seconds, 🔦 range hood-hob linkage indicator will flash. When the hob is ignited for cooking, a beep and the long lit 🔦 indicate that the code matching is completed.
 - Cancel linkage function (release linkage): when the hob is turned off, shortly press ① Power button to turn on the range hood, and press 🔦 Lighting button for 5 seconds, 🔦 range hood-hob linkage indicator will flash, and then immediately shortly press ① Power button to turn off the range hood. Thus, the linkage is released. Then, the linkage indicator will be off when the range hood is on.

⚠ Caution: If the electronic control panel of your range hood or hob is repaired or replaced, please perform code matching again as instructed above!

- After code matching is successful, the ganged function of the range hood and the gas hob can be realized:
 - Once the gas hob is ignited, the range hood will be automatically turned on and work in the Auto mode, and the LED lamp will be on at the same time.
 - The range hood will be turned off automatically 2 minutes after the gas hob is closed.

⚠ Caution: To ensure the normal range hood-gas hob linkage function:

- After successful code matching, the first time the hob is ignited should be 30 seconds later;
- The ignition interval of the hob should be greater than 30 seconds;
- Code matching and release of linkage function should be performed within 1 hour after the range hood is powered on. If code matching and release of linkage function cannot be triggered, please unplug the range hood, wait for 2 minutes and plug it in again, and then proceed as described above.

Off Function in Case of Fire

- During the use of the range hood, when the pot catches fire accidentally and the fire is sucked into the range hood, resulting in excessive temperature in the range hood, the range hood will be turned off automatically, the whole display will light up and the buzzer will indicate the alarm status.
- In the alarm status, you can press any button to exit the alarm and resume the normal use of the range hood.

Cleaning and Maintenance

⚠ Warning:

- There will be a risk of fire if the range hood is not cleaned as specified in this manual.
- To avoid electric shock, ensure the power cable is unplugged before cleaning and maintaining the range hood.
- Make sure that no water gets into the electrical parts such as the motor or control buttons during cleaning.
- Do not put your hand into the fan operating area during operation of the fan.
- Do not use such solvents as gasoline and benzene or such corrosive chemicals as strong alkali and strong acid for cleaning the range hood.


For comfortable use, please clean the surface and oil cup of the range hood frequently. Cleaning the surface and oil cup of the range hood frequently will facilitate its normal use.

Cleaning the surface of the range hood

⚠ Warning: When cleaning, please do not use such rough items such as cleaning balls, brushes or coarse cloth to protect the surface of machine body from scratches.


- Clean with neutral soap or neutral detergent, and dry the surface of machine body with a soft cloth after cleaning.
- Use neutral detergent to clean any stubborn dirt on the surface of range hood. Drop detergent onto the dirty area and leave it for a while, wipe off the dirt with a soft cloth, remove the detergent with a slightly damp towel, and then wipe the surface of the range.
- Do not allow stains to remain on the surface of the range hood for too long.
- If the stainless steel surface is accidentally stained with saline solution, disinfectant, bleaching powder or other detergents (most of the solvents contain harmful chemical components), immediately wipe it with wet cloth and then wipe it dry with a dry cloth.

Routine Cleaning

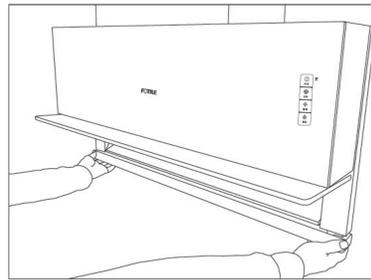

Oil cup cleaning

1. Prepare neutral detergent and soft cloth (soft brush);
2. Take out the oil cup as shown in the figure: hold both ends of the bottom of the oil cup with both hands and take the oil cup out horizontally;
3. After cleaning, install the oil cup in the reverse order.

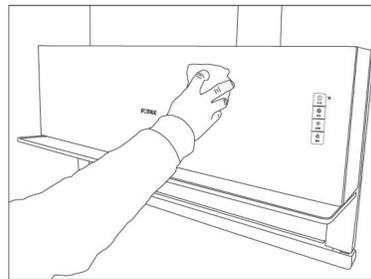

Cleaning of panel, smoke baffle and air inlet

1. Prepare neutral detergent and soft cloth (soft brush);
2. Clean the panel, smoke baffle and air inlet.

Warning

To avoid surface corrosion, do not scrub the decorative shaft on the outside of the smoke baffle with strong acid or strong alkaline detergent. It is recommended to scrub with neutral soap or neutral detergent.

Suggestion: Wipe the outer surface of the range hood after use.

Identification and Troubleshooting of Common Faults

If you find anything unusual during use, please stop using it, unplug the power plug and check the contents:

Fault Symptoms	Possible Reason	Repair Method
After the switch is turned on, both the range hood and the LED lamp fail to work	Not powered on	Check whether the power plug is properly plugged in
		Check whether the socket has power
Motor rotates but the LED lamp is not on	LED lamp damaged	The after-sales service personnel shall replace the LED lamp
Noise of mechanical vibration	Loose screws	Check whether the screws on the surface of the range hood are tight



Fault Symptoms	Possible Reason	Repair Method
Poor suction	Installation distance between the range hood and the stove surface is too large	Lower the installation height of the range hood (this operation must be carried out by a maintenance professional)
	There is too much ventilation and convection in the doors and windows around the range hood	Reduce ventilation or close some doors or windows
	The check valve is stuck (not fully opened)	Clean or replace the outlet housing
Too much noise	Sinking deformation of the exhaust duct surface	Re-install the exhaust duct

Disclaimer

1. Replace the LED lamp and contact Fotile authorized service center.
2. If the range hood still does not function normally after the above troubleshooting, please contact the Fotile authorized service center.
3. The following information shall be provided during the warranty period. :
 - a) Date of purchase
 - b) Product model
 - c) Serial number (please see contents page for specific location)
 - d) Relevant vouchers for purchase
4. Personnel from non-Fotile authorized service center are not allowed to repair the range hood to avoid serious consequences. Otherwise, the product will not enjoy warranty service.
5. Free warranty will not be provided in the following circumstances:
 - a. Damage resulting from improper handling, installation, use, maintenance and safe-keeping conducted by the customer.
 - b. Failure and damage caused by using the product beyond the normal operating conditions (damage caused in the case that the voltage is higher than 264V or lower than 206V)
 - c. The product installed, dismantled or repaired by customer or any party other than Fotile's authorized service staff or agency.
 - d. Discrepancy between the information on the purchase voucher and the warranty card and the product.
 - e. Product damage caused by a force majeure event (such as natural disaster and war, etc.)
 - f. Failure or damage caused due to the user's failure to comply with the Operation Instructions.

Installation

Packing List

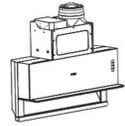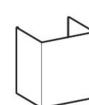	Complete Appliance	1		Outlet housing	1
	Oil cup	1		Upper gasket	1
	Hook	1		Cross recessed countersunk head wood screw ST4.5x60	6
	Cross recessed pan head thread forming screw M4x18	8	Cover accessories list (Optional)		
	Cross recessed pan head tapping screw ST2.9x19	4		Fan cover	1
	Cross recessed truss head thread forming screw M4x6	2		Decorative cover	1
	Expansion pipe φ10x60	6		Decorative cover hook	1
	Cross recessed truss head tapping screw ST3.9x9.5	4		Expansion Pipe φ10X60	2
	Product instruction manual	1		Wooden Screw 4.5x60	2
	Warranty card	1		Cross recessed pan head self-tapping screw ST2.9x19 galvanized	2
				Cross recessed pan large flat head self-tapping lock screw M4X8 galvanized	2

Installation Warnings

Precautions before Installation:

★Special Note: In order to ensure the safe and correct use of this product, the installation and maintenance must be carried out by the service professionals authorized by Fotile. If the product does not function normally due to the installation or repair by customer or any party other than Fotile's authorized service staff, even during the warranty period, it is not within the scope of free warranty.


Please read all the instructions carefully prior to installation. Pay special attention to the following matters:

1. If you are decorating your kitchen, please do not leave the range hood exposed: the surface of the range hood will be corroded and lose luster due to building materials, dust, paint, coatings and the gases they volatilize. It is suggested to install the range hood after the kitchen is decorated.
2. As this range hood is heavy and has a complex installation procedure, it must be installed according to the instructions in the manual by installation and maintenance professionals authorized by Fotile.
3. When cleaning items around the range hood (such as suspended ceiling and cupboard) that may touch the range hood, please wear protective gloves and take other protective measures to prevent injuries or scratches.
4. Please be careful not to damage wires and other hidden equipment when drilling holes in the wall. The power supply cannot be switched on during installation, and the power should be turned off in the main power box.
5. A dedicated power socket which is reliably grounded must be used for the range hood. Electric shock, plug and socket heating and fire may easily occur when the power cable is connected in the middle, or if extension lines or multiport wiring devices are used. Please ensure that the operation is carried out by a professional electrician and in strict accordance with the power regulations of all applicable countries and regions: before wiring, please turn off the power supply and take reasonable measures to prevent the power supply from being automatically connected.
6. If the gas stove needs to be moved before installing the range hood, please close the main gas valve first.
7. The wall on which the range hood is installed should be sufficiently strong.
8. In order to ensure safety and smooth installation, during the installation of the expansion tube, there must be tight coordination between the expansion tube and the hole in the wall. It is strictly prohibited to drill too much, so as to prevent the expansion tube from getting loose and accidentally falling.
9. To avoid fire hazards and keep the air fresh, the exhaust duct of the exhaust type range hood must be connected to the outdoor to discharge the exhaust gas.
10. Please do not discharge the exhaust gas into the wall, loft or garage.
11. It is not permitted for the exhaust gas discharged from the range hood to be discharged into the hot flue for burning gas or other fuel.
12. Try to ensure the fuselage remains horizontal during installation.
13. Confirm there are no abnormalities found in the trial operation upon installation. Please read the manual carefully and keep it for future reference.

Wall mounting:

The wall onto which the range hood is to be installed should be solid. For the hollow wall, the solid layer of the polypropylene hollow sheet should have a thickness of more than 30mm. For the concrete wall, mounting holes can be directly punched. The complete range hood must be firmly mounted on the wall.

Product Dimensions

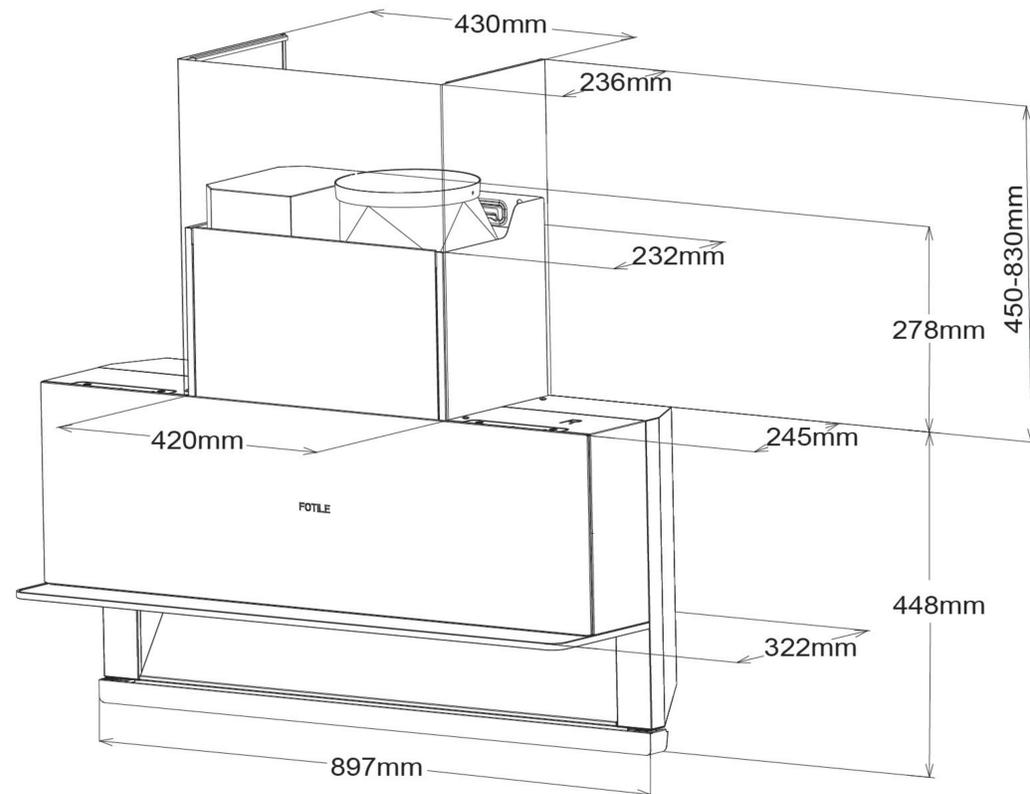


Installation Recommendations

Installation position

- The range hood can only be installed in domestic kitchens, please do not use it in other situations.
- The range hood must be installed above the cooking range and kept level.
- The temperature of the surrounding environment of the range hood cannot exceed 40°C.
- The installation wall shall be noncombustible, and it is strictly forbidden to install on such flammable walls as those made of wooden wall.

Range hood and cabinet installation diagram (unit:mm)

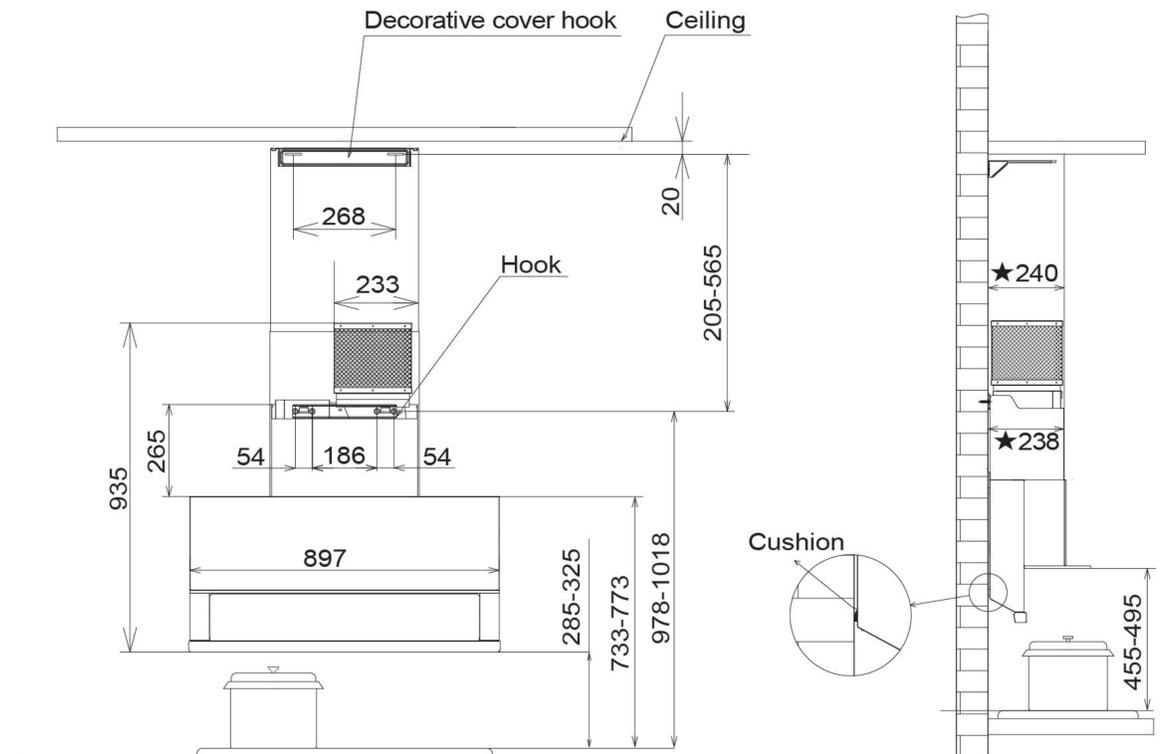

1. The recommended spacing between both sides of the range hood and the cupboard is ≥ 5 .
2. Please note that spacing needs to be reserved between the upper part of the range hood and the bottom of the cupboard for installation or disassembly.
3. The installation height can be adjusted against the user's height. If the user is tall, the installation height should be increased appropriately, and vice versa. However, it would be better not to exceed the recommended height range to prevent the low installation from affecting the line of sight in cooking or the high installation from weakening the effect of oil fume suction.
4. The installation height of the range hood is a recommended value, and the cupboard and range hood matching diagram is for reference only. When the installation height of the product (i.e., the distance between the supporting surface of cookware on the hob and the lowest part of the range hood) is lower than 600mm, all parts below 600mm are non-flammable parts of the range hood or parts working under safe and extra-low voltage, and the deformation of these parts will not affect the protection against the touch of live parts. The greater installation distance (if any) specified in the gas hob installation instructions should be considered.

■ Precautions before Installation

- Warning: In order not to cause damage to the range hood, please make sure that no sundries enter the exhaust outlet.

1. To estimate the position of the exhaust duct from the range hood to the outside, refer to the installation diagram.
2. A straight short exhaust duct will make the smoke exhaust of the range hood more effective.
3. Try to avoid using an exhaust duct that is too long and has many bends, which will affect the smoke exhaust effect of the range hood.
4. The connection between the exhaust duct and the wall hole shall be tightly sealed with pipe adhesive tape. The exhaust duct must also be firmly connected to the exhaust hood.
5. If the hole in the wall is too small, the smoke exhaust effect shall be affected. To ensure safety, it is recommended the hole is expanded to the original size of the exhaust duct.

- Tool preparation

The following tools are required for installation of this range hood


- | | |
|--|--------------------------|
| (1) Electric impact drill (with drill Φ 10) | (2) Phillips screwdriver |
| (3) Wire pliers | (4) Tape measure |
| (5) Spirit level | (6) Glass cement gun |

Installation Steps

1. Open the packing box, take out the main body and count the packing lists.

2. Confirm the position for fixing the hook of main body:


Confirm the installation position of the range hood, draw a center line, and then accurately determine the installation positions of the hook of main body and decorative cover hook on the wall with the bearing surface of the cooking appliance of the stove as the reference point, and make hole signs.

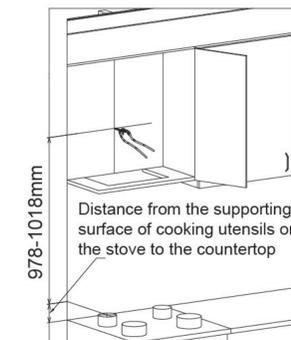

3. Fix the hook


Use the electric drill to drill Φ 10mm holes (4 main body hook holes and 2 decorative cover hook holes), embed expansion tubes (Φ 10 \times 60mm), use the level ruler to ensure that the hooks are horizontal, and then use hook screws (ST4.5 \times 60mm) to fix the hooks of main body and the decorative cover hooks.

Note: the wall on which the range hood is installed shall have sufficient support strength, and the thickness of the solid layer of the hollow wall and hollow plate must be 30mm or more.

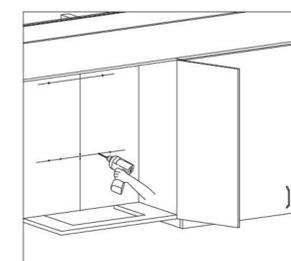


4. Install outlet housing:

Place the outlet housing and the sealing rings at the air outlet of the main body, and use 8 screws (M4×18mm) to fix the outlet housing and the sealing rings.

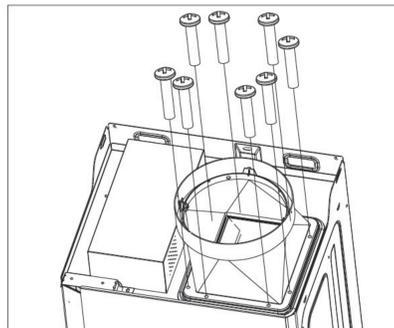


5. Hook the machine:

Lift the main body, hang the hook holes at the upper part of the back of the range hood at the hooks, use the level ruler to confirm that the range hood is horizontal, and use the screws (ST4×6mm) to fix the fan frame and the hooks.

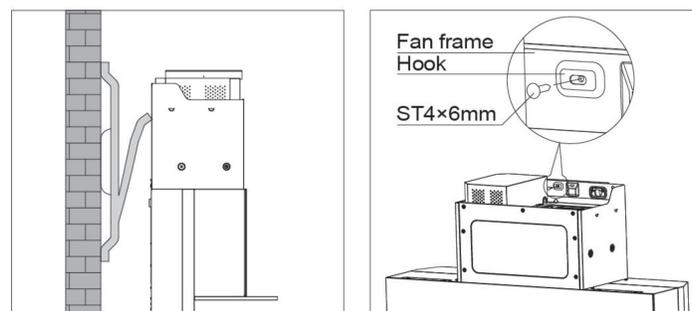


6. Insert the recirculation kit into the outlet housing, and seal the outlet housing to the bottom of the kit with aluminum foil tape.

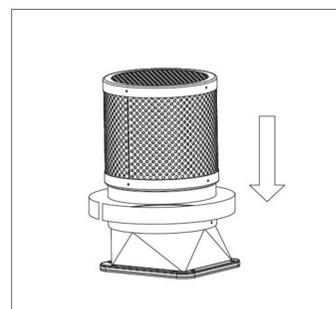


7. Insert the power cable plug of the range hood into the power socket, start the range hood.

8. Tear the films: tear off the protective films of the fan cover and the decorative cover; Cautions: wear protective gloves.

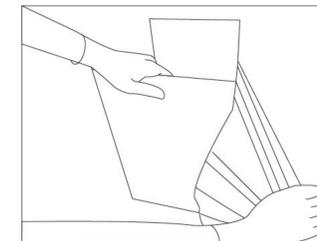

9. Install the fan cover and the decorative cover :

Put the decorative cover into the outer cover and pick them up at the same time, firstly, hang the decorative cover on the decorative cover hooks, then push the decorative cover and the fan cover inwards along the decorative cover hooks at the same time, when the fan cover slides down slowly, clamp the upper locking tab of the fan cover into the fan frame, and insert the lower edge into the gap between the top plate and the fan frame.

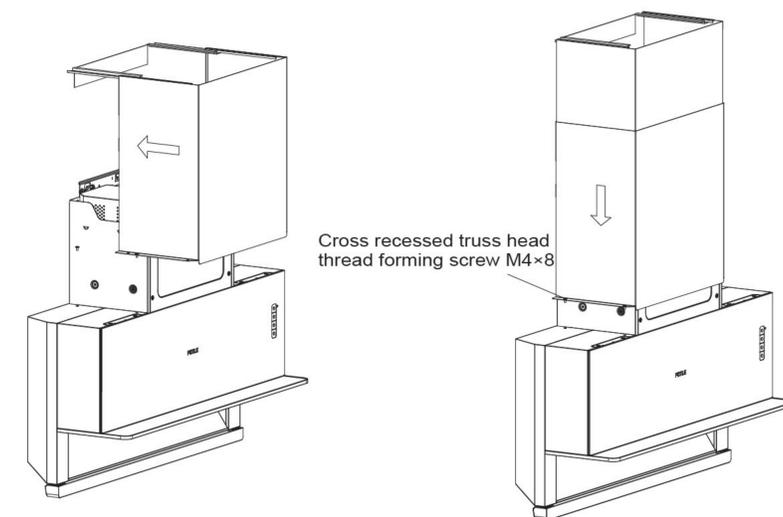

Commissioning after Installation

1. Slightly press the "On/Off, ".
2. Slightly press the "Lighting" button .
3. Slightly press the "High/Low" button  or "Auto" button  to check whether the motor rotates normally. In case of any of the following conditions, shut it down and power off immediately, and check whether the abnormality is caused by improper installation (if it is determined that the range hood malfunctions, please call Fotile authorized service center).
 - (1) The main body vibrates severely.
 - (2) The expansion tube becomes loose.
 - (3) The impeller does not rotate.
 - (4) There is an obvious friction sound when the impeller rotates.
 - (5) The motor produces an abnormal sound.

■ Slightly press On/Off button  to stop the fan.


- (1) If the power supply cord is damaged, it must be replaced by professionals from the manufacturer or its repair department or similar department to avoid any hazard.
- (2) The room must be well ventilated when the range hood is used in combination with the gas stove or other fuel stoves.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Explosive View

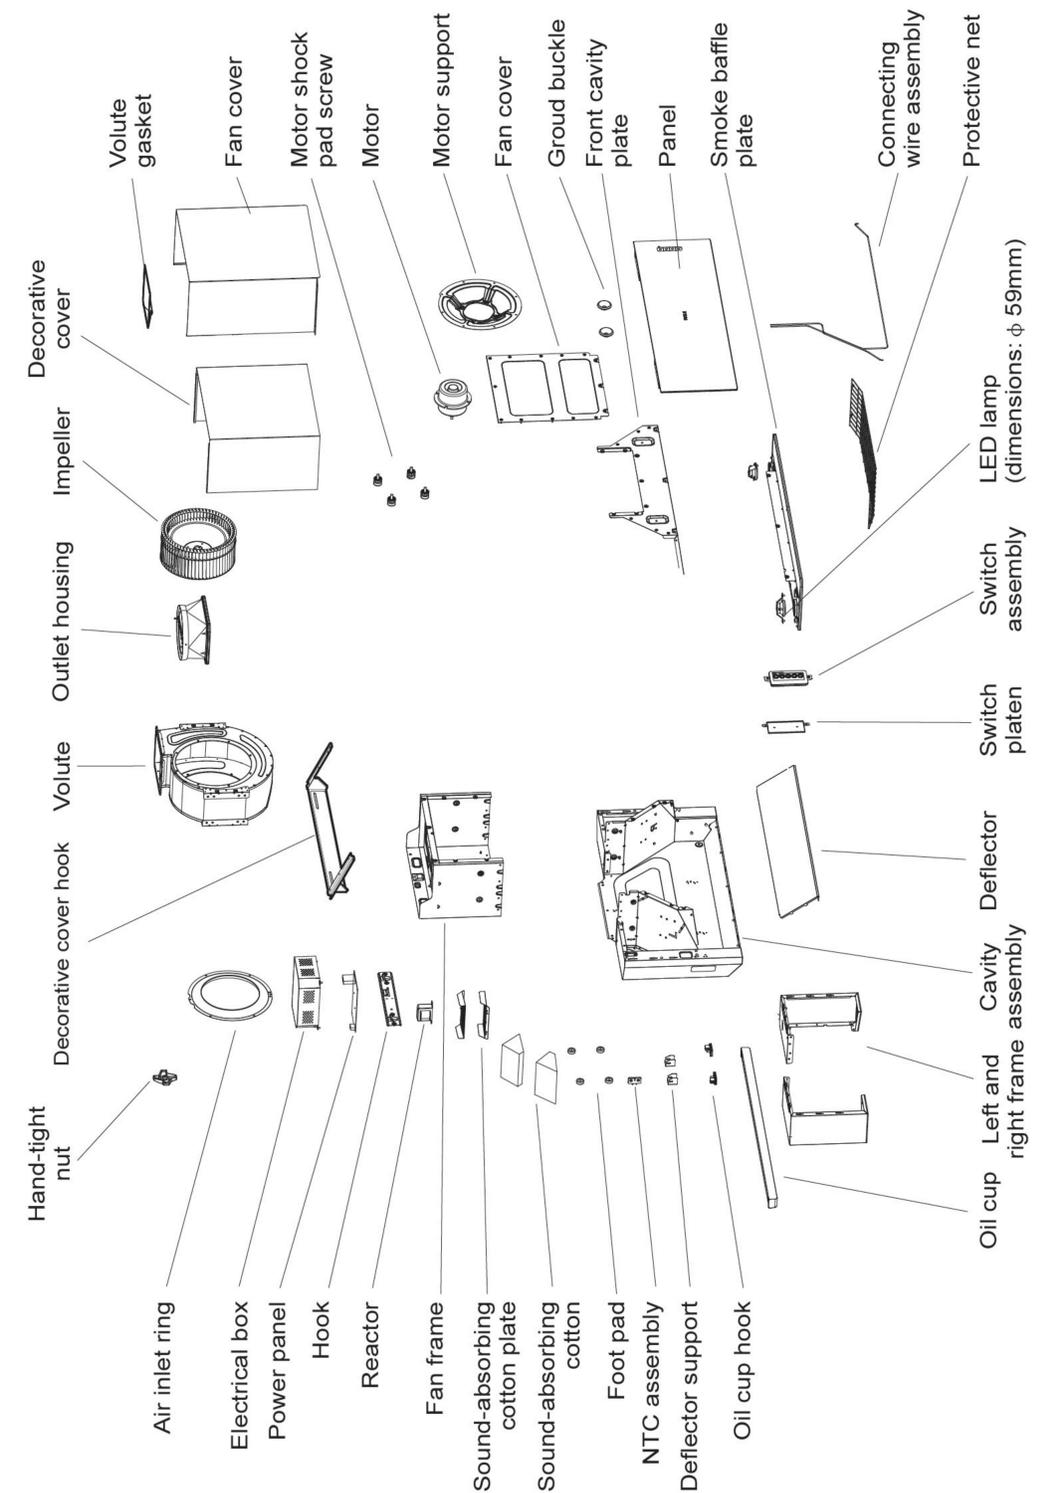

FOTILE

吸油烟机
使用安装说明书 | AMG9033

使用产品之前，请仔细阅读本说明书。请妥善保管，以备参阅。

如有任何需要，请联系方太授权的服务中心。本说明书部分图片为示意图，仅供参考，若图片与实物不符，以实物为准。


WWW.FOTILEGLOBAL.COM

尊敬的用户，您好！感谢您选购方太公司为您精心制造的方太系列产品，使用前请通读本《使用安装说明书》（以下简称说明书），此说明书将有利于您熟悉油烟机安全信息、操作和保养维修等，并让您享受到全新的下厨乐趣。

请您在使用前务必认真阅读说明书，并遵从说明书要求进行使用。本说明书的操作说明对于维持产品的良好工作状况十分重要，若因使用不当造成产品故障，您将失去免费保修的权利，任何直接或间接的免费保修申请将不被本公司各地授权的服务中心所接受。同时我们建议您在质量保修期内及保修期后，如有需要维修时请与方太公司当地授权的服务中心联系，这对您和我们都是非常重要的。

我们授权的服务中心将为您提供方太公司专业的零部件及技术支持，使您的产品得到优质快捷的维修保障，同时让您得到最轻松细心的服务。

如果您需要服务，您将需要提供产品铭牌上的产品型号和序列号。

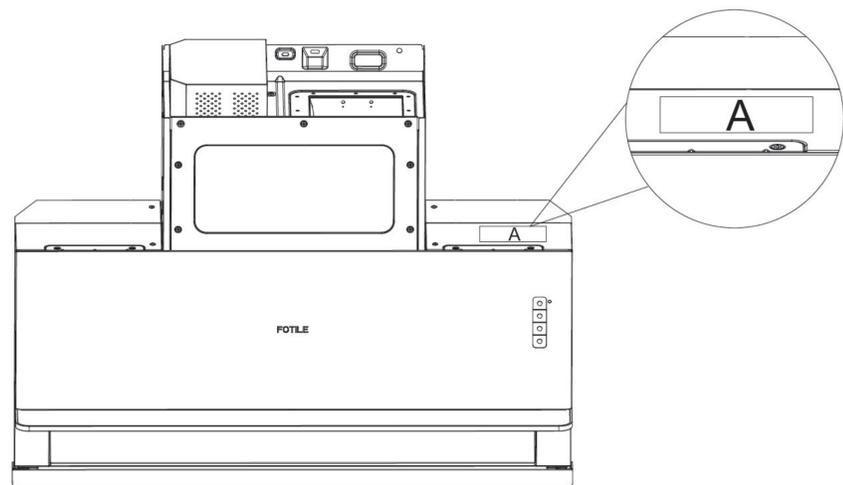

目录

警告和安全说明	1
使用方法	4
主要技术参数	4
使用说明	4
关于吸油烟机与灶具一体控制的说明	6
清洁保养	7
常见故障的识别与处理	9
安装	10
装箱清单	10
安装警告	11
产品尺寸	12
安装建议	12
安装步骤	14
安装后的调试	17
部件分解图	18

产品特征和参数会在无通知情况下随时更改，并且可能与此说明书略有不同。请访问我们的官网 www.fotileglobal.com，获取最新信息。

警告和安全说明

特别说明:

请严格按照本说明书规定使用, 由于本产品不当使用造成的任何财产损失、人身损害, 本公司不承担责任。

警告:

此产品不适用于(包括儿童在内)身体、感知或精神能力减弱或缺乏经验或知识的人群, 除非在对其安全负责的人监督或指导如何安全使用此产品的情况下。

此产品不适用于(包括8岁以下儿童)身体、感知或精神能力减弱或缺乏经验或知识的人群, 除非在对其安全负责的人监督或指导如何安全使用此产品的情况下(针对欧盟市场)。


孩童应受监管, 确保其不玩弄此产品, 且孩童不应私自清洁和维修此产品。





注意: 操作中可触及部分可能会变得很烫。







- a. 请定期倒去积油: 每次使用吸油烟机后, 请擦拭吸油烟机外表面。
- b. 为了更加舒适地使用, 请经常对吸油烟机外表面和油杯进行清洁。
- c. 如果不按说明书规定的方法清洗, 吸油烟机有起火的危险。

严格执行

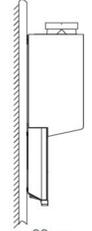 接地	插头必须插在合理安装并接地的电源插座上, 以确保安全。接地线不得与煤气管、自来水管、避雷针、电话线等连接。接地不良可能会引起触电或其他事故。
	由于本吸油烟机的安装程序比较复杂, 且重量较重, 应由专业安装维修人员按照说明书进行安装。未按说明书要求安装螺钉或固定装置可能会导致触电、脱落、起火等危险。
	使用此新产品之前请开封检查此产品是否受损, 如果发现此产品有明显的损坏, 请勿安装使用, 请您立即联系方太授权的服务中心。
	请遵照加热设备厂家的安全指南, 同时要遵照消防等管理部门颁布的安全标准进行。
 >30mm	安装吸油烟机的墙壁要有足够的支撑强度, 对于中空墙壁, 中空板实心层的厚度必须大于30mm以上, 对于混凝土墙壁可直接打安装孔。整机必须牢固安装在墙壁上。
	当在墙壁、天花板上进行切割或者钻孔时, 请注意不要损坏电线以及其他隐藏的设备。

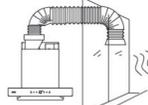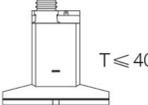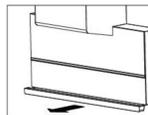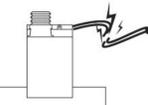	本产品仅供家庭日常使用, 请不要用于商业用途或在其它特殊环境中使用(例如: 室外); 也不能用来排出有危险的或者容易爆炸的物质或者气体。如您在特殊环境中使用本产品, 方太将不承担责任。
	吸油烟机和燃气灶同时使用时, 请保证房间内良好的空气流通(不适用于内循环油烟机)。
	油锅着火时, 请立即关闭吸油烟机(吸油烟机的运行会助燃火势)。采用有效的灭火方法灭火。例如, 用金属的盖子将明火盖住, 立即关闭燃气总阀门, 并使易燃物远离明火。
	出风管必须确保排到室外。为了避免火灾的发生并保持空气清新, 请将废气排到室外。请不要将废气排到墙内、阁楼、车库中。(只适用于有出风管的吸油烟机)
	吸油烟机使用环境的温度不能超过40°C。
	请按照本说明书规定的方法清洗油烟机, 否则吸油烟机有起火的危险。
	当油杯内的储油达到油杯容积的三分之二时, 请及时清理, 防止溢出。油杯中所收集的废油请勿食用!
	在移动吸油烟机进行安装、清洁或者修理前, 务必切断电源, 以免触电; 在进行安装、清洁或修理时, 应佩戴防护手套, 以防被吸油烟机内金属板快口伤手。
	安装完成后, 插头应在能够到的位置。吸油烟机若长期不用, 请切断电源。
	如果电源线损坏, 请联系授权服务提供商或合格技术人员进行更换, 以避免危险。
	出现异常现象时, 关闭吸油烟机电源开关, 拔下电源插头或者切断总电源, 马上致电方太授权的服务中心。异常状态下连续运转易发生触电、火灾等危险。
	请不要让儿童自己单独使用, 或放到婴儿能够接触到的地方, 否则有可能导致烧伤、触电或者其他意外伤害。
	请勿让儿童玩耍塑料薄膜和包装箱, 这可能会产生窒息事故, 所以请让包装材料远离儿童, 包装材料不是玩具。孩童应严格监管以确保他们不会玩耍产品。

禁止

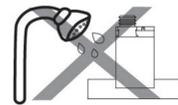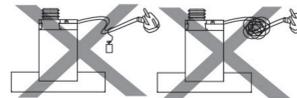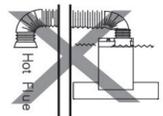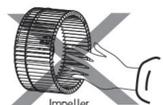	如果不按本说明书规定的方法清洗油烟机，吸油烟机有起火的风险。
	请不要对电源线进行改制、拉伸、结扣以及施加重物、挤压等，否则易导致电源线破损而发生触电和火灾等事故。
	禁止私自改动吸油烟机内部布线，否则有可能会发生异常动作导致人体受伤。不当修理可能发生触电、火灾等危险。
	吸油烟机排出的废气不能排放到用于排出燃烧燃气或其他燃料的烟雾使用的热烟道中。必须遵守相关空气排放的规定。
	禁止在没有锅具的情况下使用燃气灶，否则会损害上方的吸油烟机。禁止在吸油烟机底下直接使用明火。
	请勿触摸已经开启或者刚关闭不久的灯泡，以免烫伤。
	吸油烟机运行时不要将手或其他物品伸入叶轮中以免造成伤害。
	严禁电机、开关、接插件等电气部件沾水；禁止用水冲洗吸油烟机。吸油烟机被水淋湿后，请不要使用；如果使用会导致漏电、触电等事故。
	请不要用潮湿的手触摸电源插头、电器部件以及操作电源开关，否则易发生触电事故。



- 保修服务须由方太公司授权的服务机构或人员执行。如私自拆机维修，产品将不享受保修。
- 为避免任何可能对产品的损害，请确保实际电压和频率与本说明书中阐明的一致。
- 当吸油烟机与使用非电能的设备同时使用时，室内负压不得超过4Pa (4 x 10⁻⁵ bar) (针对德国市场)。
- 本公司产品上使用了钢化玻璃，玻璃的钢化机理决定这种玻璃存在极小概率的自爆。一旦发生非使用不当的自爆，我公司承诺免费提供该配件。钢化玻璃在以下情况，发生破裂的几率可能会大大提高，请避免发生：例如用炊具或其他硬物敲击玻璃，特别是敲击玻璃四个角部；打开油烟机周围橱柜门时撞击到玻璃；玻璃处于过冷和过热、冷热交替严重的环境等情况。

使用方法

主要技术参数

电参数

型号	电压/频率	整机输入功率	电机功率	LED灯功率
AMG9033	220~240V/50Hz	261W	258W	10V/3W


外排性能参数

型号	AMG9033	产品尺寸	897mm(L)×322mm(W) ×726mm(H)		
最大静压值 (Pa)		860			
档位		自动巡航档	强档	弱档	
风量 (m³/h)		1330	1160	770	
噪音 (dB(A))		58	55	45	

- 说明：
- 自动档内置自动巡航增压模式，所示风量值、噪音值为该模式下的最大风量值、噪音值。
 - 指示噪声值为声压级，声功率级为57 dB（弱档）、67 dB（强档）和70 dB自动巡航档。
 - 按照IEC 61591-2010标准对风量进行测试，按照IEC 60704-3-2006标准对噪声进行测试。
 - 风量和噪声等参数可能存在5%以内的偏差。

使用说明

■ 让我们熟悉一下吸油烟机的控制屏幕

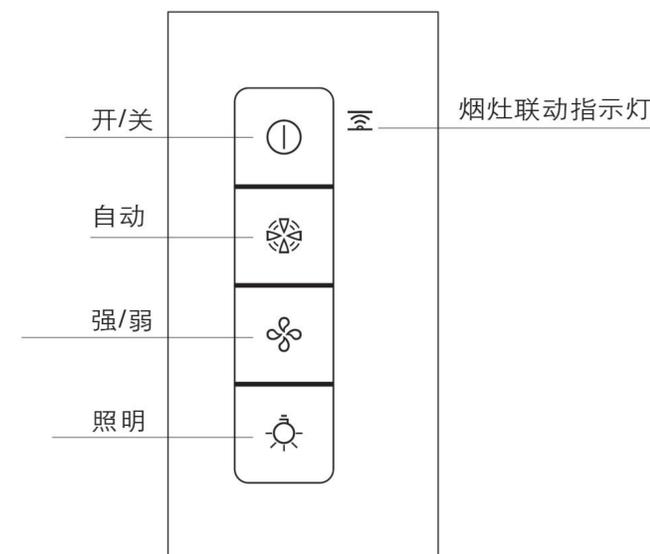

功能按键说明

■ 开/关键

按一次 ， 亮，2分钟内无其他按键操作，吸油烟机自动关闭；
 风机开启状态下，按一次 ， 闪烁，进入延时状态，2分钟后风机和照明灯关闭；
 延时状态下，再按 ，风机和照明灯关闭；
 延时状态下，按风量键或触发烟灶联动功能，则退出延时进入对应功能状态；
 若只有照明灯开启，按一次 ，照明灯关闭，吸油烟机关闭。

■  照明键

按一次 ， 亮，吸油烟机开启后，按一次 ， 亮，照明灯打开；再按 ，关闭照明灯。

■  自动键

按一次 ， 亮，吸油烟机开启后，按一次 ， 亮，吸油烟机进入自动巡航模式运行。
 说明： 亮度变化提示随烟道阻力大小自动调节档位。

■  强/弱档键

按一次 ， 亮，吸油烟机开启后，按一次 ， 亮，吸油烟机在强档运行；
 再按切换到弱档， 弱亮，再按风机关闭。

关于吸油烟机与灶具一体控制的说明



如同时购买了方太吸油烟机AMG9033和本公司具有烟灶联动功能的灶具，那么您可以享用我们的吸油烟机和灶具联动功能！

具体使用方法如下：

- 对码连接(实现联动之前需要进行吸油烟机和燃气灶具的对码连接)
 - 吸油烟机插电，燃气灶具电池(电源)安装好，同时确保所有旋钮都处于关闭状态；
 - 短按  电源键，吸油烟机开启后，即刻按住  照明键5秒以上， 烟灶联动指示图标开始闪烁后，灶具点火，当听到“嘀”一声，同时  长亮，表示对码完成；
 - 取消联动功能(解除联动)：灶具关闭状态下，短按油烟机  电源键，吸油烟机开启后，再长按  照明键5秒， 烟灶联动指示图标开始闪烁后，即刻短按油烟机  电源键，吸油烟机关闭，即可解除联动。解除联动后油烟机开机状态联动图标熄灭。

⚠ 注意：如果您的吸油烟机或灶具的电控板维修或更换，请重新对码，操作方法同上述！
- 对码成功后，可以实现吸油烟机与燃气灶具的联动功能；
 当燃气灶具点火后，吸油烟机自动开启，运行在自动档模式，同时照明灯亮；
 当燃气灶具关闭后，吸油烟机2分钟后自动关机。

⚠ 注意：为保证烟灶联动功能正常运行：

 - 对码成功后，首次灶具点火时间需间隔30秒；
 - 两次灶具点火间隔需大于30秒。
 - 对码和解除功能，需在油烟机通电后的1小时之内进行；如果无法触发对码和解除功能，请拔下油烟机插头，等待2分钟后重新插上，再按上文操作进行。

意外着火关机功能

- 在吸油烟机使用过程中，当锅内意外着火并吸入吸油烟机内，导致吸油烟机内温度过高时，吸油烟机会自动关闭，同时显示屏全部点亮，蜂鸣器提示进入报警状态。
- 报警状态下，按任意按键退出报警后即可正常使用。

清洁保养

⚠ 警告：

- 如果不按本说明书规定的方法清洗，吸油烟机有起火的危险。
- 为避免触电，在清洁和保养吸油烟机之前，请确保电源线已拔下。
- 在清洁过程中，确保没有水进入电机或控制按钮等电气部件。
- 风机运行时请勿将手伸入风机运行区域。
- 请勿使用汽油、苯等溶剂或强碱、强酸等腐蚀性化学品来清洗吸油烟机。



为了更加舒适地使用，请经常对吸油烟机表面和油杯进行清洗。经常清洁吸油烟机表面及油杯将有利于吸油烟机的正常使用。

清洁吸油烟机表面

⚠ 警告：清洗时请勿使用清洁球、刷子或粗布等粗糙物品，以免划伤机身表面。

1. 用中性肥皂或中性洗涤剂清洗，清洗后用软布擦干机身表面。
2. 使用中性洗涤剂清洗吸油烟机表面的顽固污垢。将清洁剂滴在脏污区域，静置一会儿，用软布擦去污渍，再用微湿的毛巾擦去清洁剂，然后擦拭机身表面。
3. 不要让污渍在吸油烟机表面保留时间过长。
4. 如不小心将盐水、消毒剂、漂白粉以及其他洗涤剂滴到不锈钢面板上（大多数溶剂含有有害的化学成分），应立即用湿布擦拭，然后用干布擦干。

清洗油杯

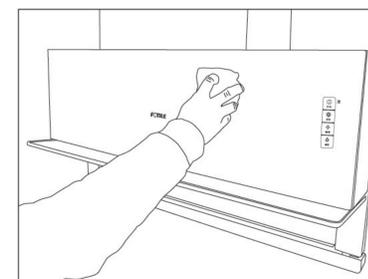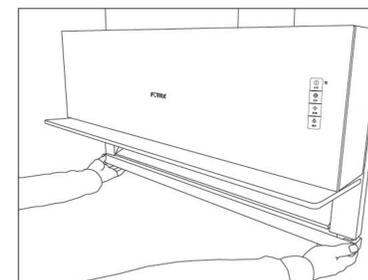

油杯清洁

1. 请准备好中性洗涤剂和软布（软刷）；
2. 取出油杯，油杯拆卸方式如图示：双手握住油杯底部两端，将油杯沿水平方向取出；
3. 清洁完毕后，按相反次序安装好油杯即可。

面板，挡烟板及进风口清洁

1. 请准备好中性洗涤剂和软布（软刷）；
2. 清洁面板，挡烟板及进风口。

⚠ 警告 请勿使用强酸或强碱性清洗剂擦洗挡烟板外侧的装饰轴，以免引起表面的腐蚀，建议使用中性皂或者中性洗涤剂进行擦洗。

建议 ● 每次使用吸油烟机后，请擦拭吸油烟机外表面一次。

常见故障的识别与处理

如果在使用过程中发现异常，请停止使用，拔出电源插头，并检查以下项目：

故障现象	可能原因	检修方法
打开开关后，吸油烟机不工作，LED灯不亮	未通电	检查电源插头是否插好
		检查插座是否有电
电机转动但LED灯不亮	LED灯损坏	由售后服务人员更换LED灯
有机械振动噪声	螺钉松动	检查吸油烟机表面的螺钉是否拧紧
吸油烟效果差	吸油烟机与灶面的安装距离太大	降低吸油烟机的安装高度（必须由专业维修人员来安装）
	吸油烟机周围门窗通风对流太强	减少通风或关闭一些门窗
	止逆阀卡住（未完全打开）	清洗出风罩或更换出风罩
噪声太大	出风管表面凹陷变形	重新安装出风管

免责声明

- 更换LED照明灯，请联系方太授权的服务中心。
- 如果上述故障排除后吸油烟机仍不能正常工作，请联系方太授权的服务中心。
- 保修期内需提供以下信息：
 - 购买日期
 - 产品型号
 - 序列号（具体位置见目录页）
 - 相关购买凭证
- 非方太授权的服务中心人员不得维修吸油烟机，以免造成严重后果。否则，产品将不享受保修服务。
- 以下情况恕不提供免费保修：
 - 因客户操作、安装、使用、维护、保管不当而造成的损坏。
 - 因未在正常工作条件下使用本产品而造成的故障或损坏（因电压高于264V或低于206V而造成的损坏）。
 - 由客户或任何第三方（非方太授权服务人员或机构）对产品进行安装、拆解或维修的。
 - 购货凭证及保修卡信息与产品不相符的。
 - 因不可抗力（如自然灾害、战争等）造成的产品损坏。
 - 不根据“使用说明书”的规定使用，造成产品故障或损坏的。

安装

装箱清单

	主机	1		出风罩	1
	油杯	1		上密封垫	1
	主机挂钩	1		十字槽沉头木螺钉 ST4.5×60 镀彩锌	6
	十字槽盘头自攻锁紧螺钉 M4×18	8	装饰罩组件清单（选配）		
	十字槽盘头自攻螺钉 ST2.9×19 镀锌	4		风机外罩	1
	十字槽大扁头自攻锁紧螺钉 M4×6 镀锌	2		装饰罩	1
	膨胀管 φ10×60	6		装饰罩挂钩	1
	十字槽大扁头自攻螺钉 ST3.9×9.5 镀锌	4		膨胀管 φ10×60	2
	产品使用说明书	1		十字槽沉头木螺钉 ST4.5×60 镀彩锌	2
	保修卡	1		十字槽盘头自攻螺钉 ST2.9×19 镀锌	2
				十字槽大扁头自攻锁紧螺钉 M4×8 镀锌	2

安装警告

安装前注意事项:

★特别提示: 为保证本产品的安全、正确使用, 必须由方太授权的专业服务人员来安装和维护。如果因客户或非方太授权的服务人员安装或维修导致产品无法正常运行, 即使在保修期内, 也不在免费保修范围内。


安装前请仔细阅读本说明书, 特别注意以下事项:

1. 如果您正在对您的厨房进行装修, 请勿将吸油烟机暴露在外。因为建筑材料、灰尘、油漆、涂料以及它们所挥发的气体, 会对吸油烟机表面产生腐蚀, 使其失去光泽。建议在厨房装修完毕以后再安装吸油烟机。
2. 由于本吸油烟机的安装程序复杂, 且重量较重, 因此需要专业安装维修人员按照说明书进行安装。
3. 吸油烟机可能有非常锋利的边, 在移动吸油烟机进行安装清洁或者修理时, 请佩戴防护手套, 以免磕伤或划伤。
4. 在墙壁上钻孔时, 请注意不要损坏电线以及其他隐藏的设备。安装时不能接通电源, 应在主电源箱中关闭电源。
5. 吸油烟机应使用专用电源插座, 并且, 专用电源插座应有可靠接地。因电源线中途连接使用延长线以及多口配线器时易发生触电, 插头插座发热以及火灾。请确保由专业的电工来操作并且要严格按照所有适用的国家和地方的电力法规; 在接线以前, 请先关闭电源并采取合理措施防止电源自动接通。
6. 如果在安装吸油烟机前, 需要移动燃气灶, 则在移动燃气灶之前, 请先关闭燃气总阀门。
7. 安装吸油烟机墙壁要有足够的强度。
8. 为确保安全和安装顺利, 安装膨胀管时, 膨胀管与墙孔的配合一定要紧密, 严禁钻孔过大, 以免膨胀管松动, 造成意外跌落!
9. 为了避免火灾的发生, 请将废气排到室外。
10. 请不要将废气排到墙内, 阁楼车库中。
11. 吸油烟机排出的废气不能排放到排出燃烧燃气或其他燃料的烟雾使用的热烟道中。
12. 安装时须尽量保证机身左右水平。
13. 安装完毕, 经试运转无异常现象后, 确认合格。请用户注意仔细阅读、妥善保存本说明书。

墙面安装:

安装吸油烟机的墙壁要有足够的支撑强度, 对于中空墙壁, 中空墙壁实心层的厚度必须大于30mm以上, 对于混泥土墙壁可直接打安装孔。整机必须牢固安装在墙壁上。

产品尺寸图

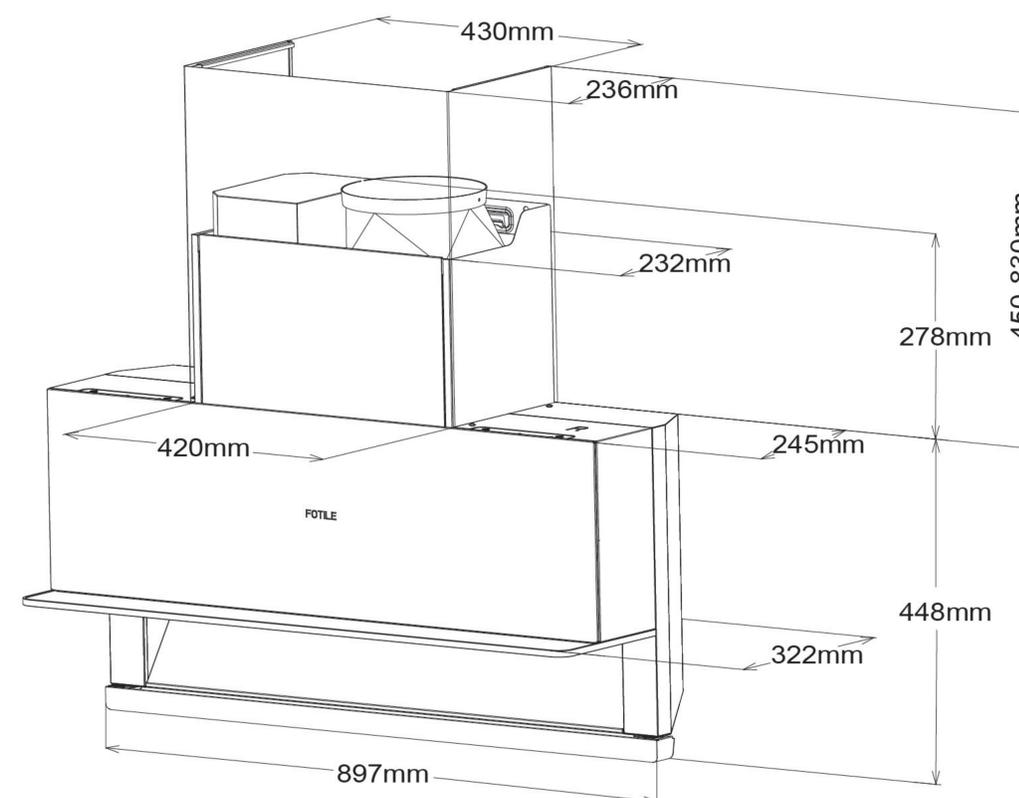


产品基本尺寸

安装建议

■ 安装位置

- 该吸油烟机只能安装于家庭厨房; 请勿在其他场合使用该吸油烟机。
- 吸油烟机必须安装在炉灶的上方, 吸油烟机必须保持水平。
- 吸油烟机周围环境的温度不能超过40°C。
- 安装墙面材料应为不可燃物, 严禁安装在木质等易燃墙面上。

■ 吸油烟机与橱柜安装示意图 (单位: mm)

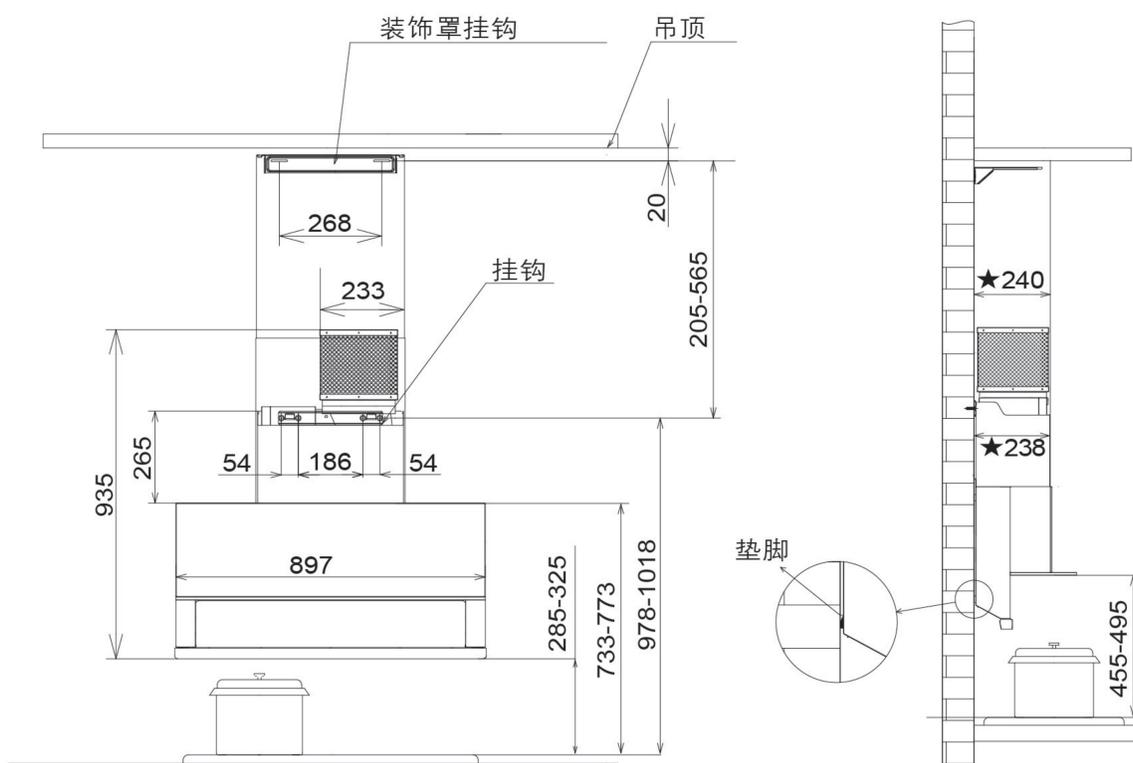

安装示意图
(★表示到墙的距离)



1. 整机两侧与橱柜的间隙建议尺寸 ≥ 5 .
2. 吸油烟机上部与橱柜底部可能需要预留间隙才能安装或拆卸, 请予以注意:
3. 可根据用户身高调整安装高度, 一般身高较高, 需将安装高度适当加高, 反之亦然。但不建议超过推荐高度范围, 以防止过低安装影响烹饪视线, 过高安装影响吸油烟效果。
4. 吸油烟机的安装高度为推荐值, 图示橱柜与吸油烟机搭配示意仅供参考: 当产品的安装高度 (即炉灶上烹饪器具的支撑面与吸油烟机最低部位的距离) 低于600mm时, 低于600mm部分的所有部件均为吸油烟机的不易燃部件或工作在安全特低电压下的部件, 且这些部件变形时, 不会影响对触及带电部件的防护。如燃气炉灶安装说明规定了较大的安装距离, 则对此应予考虑。

■ 安装前的准备工作

● 警告: 为了不对吸油烟机造成损害, 请确保不要让杂物等进入排风口。

1. 估算吸油烟机通到室外的出风管的位置参见安装示意图。
2. 一个直线的较短的出风管将使得吸油烟机的排烟更加顺畅。
3. 尽量避免使用过长以及有较多弯道的出风管, 这些管道将影响吸油烟机的排烟效果。
4. 出风管与墙孔的连接处使用管道胶带严格进行密封。必须确保出风管与出风罩连接牢固。
5. 墙洞过小会影响排烟效果, 在保证安全的前提下建议扩孔至原配出风管尺寸。

● 工具准备

安装本吸油烟机需要以下工具

- | | |
|-----------------------------|-----------|
| (1) 冲击电钻 (带 $\phi 10$ mm钻头) | (2) 十字螺丝刀 |
| (3) 钢丝钳 | (4) 卷尺 |
| (5) 水准仪 | (6) 玻璃胶枪 |


安装步骤

1. 打开包装箱拿出主机, 清点装箱清单:
2. 确认固定主机挂钩的位置:
确认油烟机安装位置, 画一条中心线, 然后以炉灶烹饪器具的支撑面为基准点在墙壁上准确确定主机挂钩和装饰罩挂钩的安装位置并做好打孔标志。




3. 固定挂钩

用电钻打 $\Phi 10$ mm孔 (主机挂钩4个, 装饰罩挂钩2个), 并埋设好膨胀管($\Phi 10 \times 60$ mm), 用水平尺确保挂钩水平后用挂钩螺钉(ST4.5 $\times 60$ mm)固定好主机挂钩和装饰罩挂钩。
注意: 安装吸油烟机的墙壁要有足够的支撑强度, 对于中空墙壁、中空板实心层的厚度必须大于30mm以上。

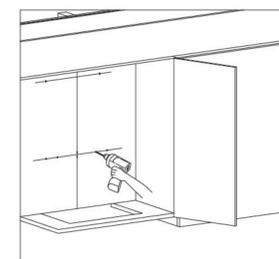


4. 安装出风罩：

将出风罩及密封圈放在主机出风口处，用8颗出风罩螺钉（M4×18mm）固定好。

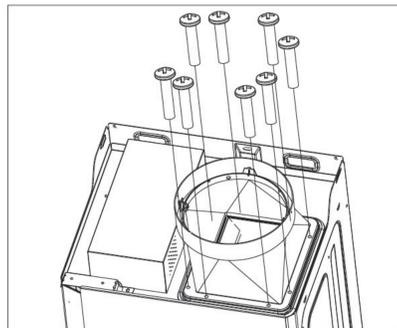


5. 挂机：

抬起主机，将油烟机背部上部挂钩孔挂入挂钩，用水平尺确认油烟机水平，并用风机架螺钉（ST4×6mm）将风机架与挂钩固定；

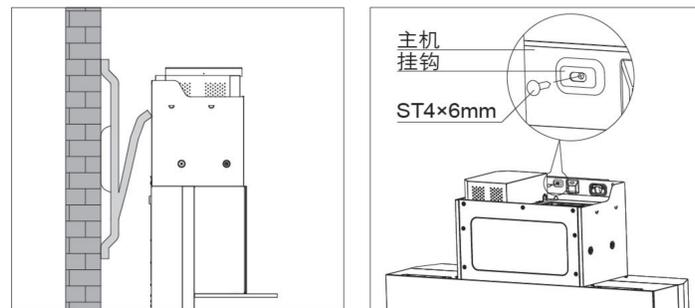


6. 将内循环滤筒插入出风罩内，再用铝箔胶带把内循环滤筒跟出风罩密封固定。

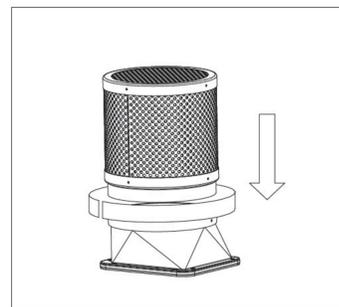


7. 将油烟机电源线插头插入电源插座，启动油烟机。

8. 撕膜：撕掉风机外罩和装饰罩的保护膜；注意：带上防护手套；

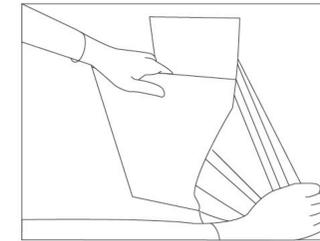

9. 安装风机外罩和装饰罩

把装饰罩放入外罩里并同时拿起，先把装饰罩挂在装饰罩挂钩上，然后同时将装饰罩、风机外罩沿装饰罩挂钩推入，风机外罩缓缓滑下，将风机外罩上部卡扣卡入风机架，下沿插入面板与风机架的间隙内。

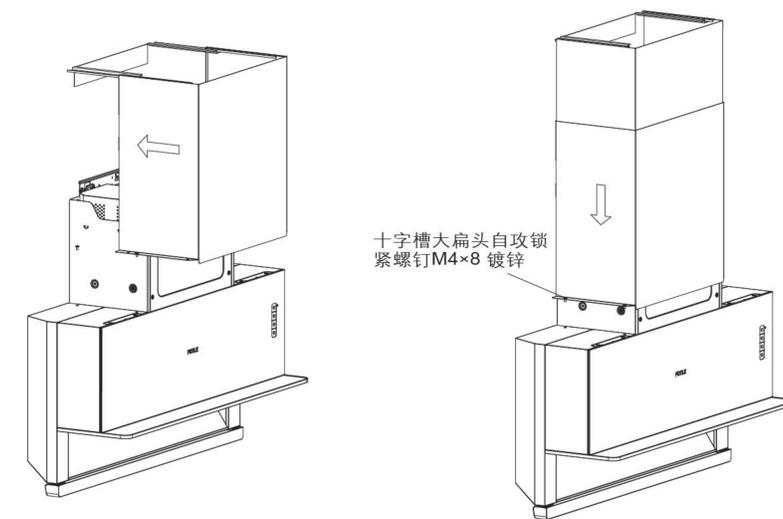

安装后的调试

1. 装上油杯;
2. 将主机电源插入电源插座;
3. 轻触  键, 吸油烟机开启后, 再轻触  键, 检查照明是否正常;
4. 轻触  键, 吸油烟机开启后, 再轻触  或  键, 检测电机转动是否正常, 如出现下列异常情况, 应立即切断电源, 停止运转, 并检查是否安装缘故 (若确定吸油烟机发生故障, 请致电方太授权的服务中心):
 - (1) 机体震动剧烈
 - (2) 膨胀管松动
 - (3) 叶轮不转动
 - (4) 叶轮转动时明显的摩擦声
 - (5) 电机出现异常声响

此产品的正确处置



此标记表示, 在欧盟, 此产品的处置不应与其他家庭垃圾一同进行。为防止未经控制的废物处置可能对环境或人类健康造成危害, 须对其进行可靠回收, 以促进物质资源的可持续再利用。对使用过的设备进行退还, 请使用回收系统, 或联系销售该产品的零售商。此类人员可对此产品进行环保安全的回收利用。

部件分解图

