

WWW.FOTILEGLOBAL.COM

方太始终认为，只有始终专注于厨房行业，才能创造出先进的厨房技术，提供专业的厨房问题解决方案。目前，方太厨具产品率先应用人性化、新颖的功能和技术。此外，方太已“嵌入式”、“综合服务”为关键词设计出一个新的生活方式：时尚、健康、便捷、愉悦的全新生活方式。方太不断推动厨房技术的发展，以她的专业带给您高品质的生活。

如有任何需要，请联系方太服务中心。本手册中部分图片为示意图，经供参考，如有不符之处，以实物为准。



“二维码”浏览[www.go.gov.sg/tg-safety-tips](http://www.go.gov.sg/tg-safety-tips)，了解更多关于烹饪器具使用和维护钢化玻璃的信息和 product 安全提示。

FOTILE



GAS STOVE

 
User Manual | GHG78211/GHG78215

Please read carefully about the user manual before using the product.  
And keep it well after reading, for future reference.



Honorable guest, thank you for your choice of FOTILE products. Please read through the manual to be familiar with the correct operation norms and enjoy the cooking.

FOTILE promise is, make our home better. It is our duty to let you satisfy with FOTILE products. Please read the user manual carefully before using it, and operate it complying with the manual requests. The manual description is important to keep the product a good working condition. And you will lose the free warranty right if the product is failed to use due to your improper use, thus any direct or indirect free warranty certificate will be rejected by FOTILE authorized service center. Meanwhile, we suggest you contact FOTILE service center when the product need to be repaired no matter within or exceed the warranty period. FOTILE star-level service goal is to make customers fully satisfied by our tireless efforts.



| Gas type | Gas pressure | Model    | Heat input    |               | Total          |
|----------|--------------|----------|---------------|---------------|----------------|
|          |              |          | Left          | Right         |                |
| TG/G110  | 8mbar        | GHG78211 | 4.75kW        | 4.75kW        | 9.5kW          |
| TG/G110  | 10mbar       | GHG78215 | 4.5kW         | 4.5kW         | 9.0kW          |
| G30      | 30mbar       | GHG78215 | 5.0kW(363g/h) | 5.0kW(363g/h) | 10.0kW(726g/h) |

# CONTENTS

|                                 |   |
|---------------------------------|---|
| Warning and Safety Instructions | 1 |
|---------------------------------|---|

|       |                             |   |
|-------|-----------------------------|---|
| Usage | Specification and Structure | 3 |
|       | Ignition Operation          | 4 |
|       | Fire Adjustment             | 5 |

|                          |   |
|--------------------------|---|
| Cleaning and Maintenance | 7 |
|--------------------------|---|

|   |   |
|---|---|
| Normal Malfunction and Trouble Shooting | 9 |
|---|---|

|              |                      |    |
|--------------|----------------------|----|
| Installation | Packing List         | 10 |
|              | Installation Methods | 10 |



## Warning and Safety Instructions




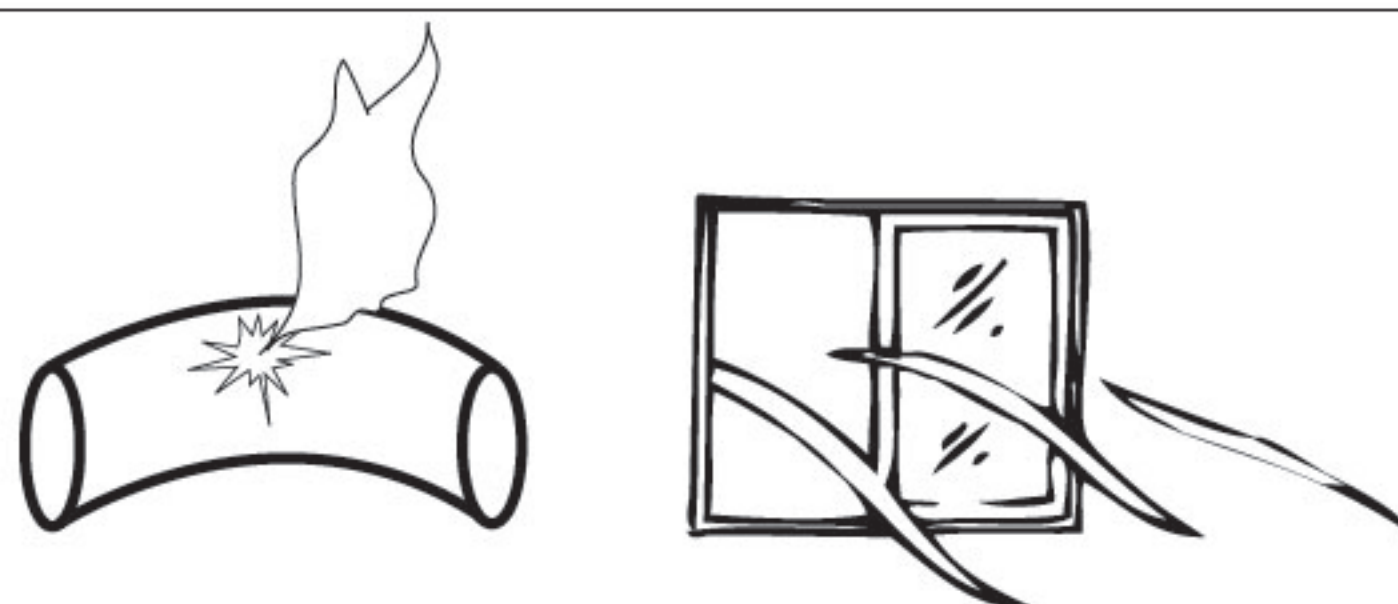


### Special version:


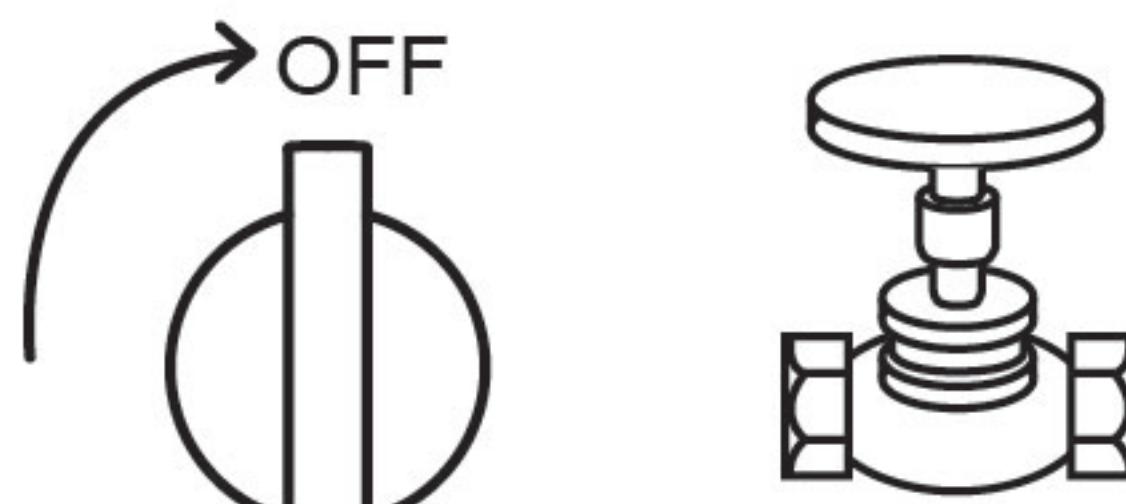
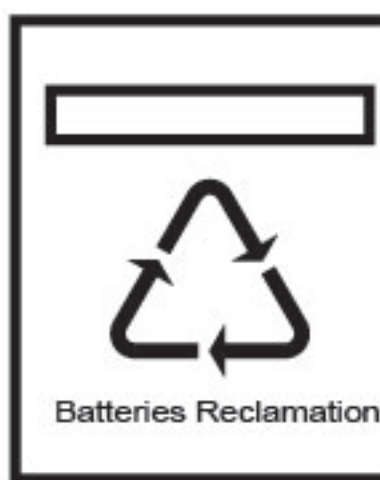


Please properly use the appliance, strictly complying with the user manual. FOTILE company will not bear responsibility for property loss and personal injury due to improper use.

**Warning:** it may cause people danger, serious injury or fire, if you ignore the following contents and improperly operate.


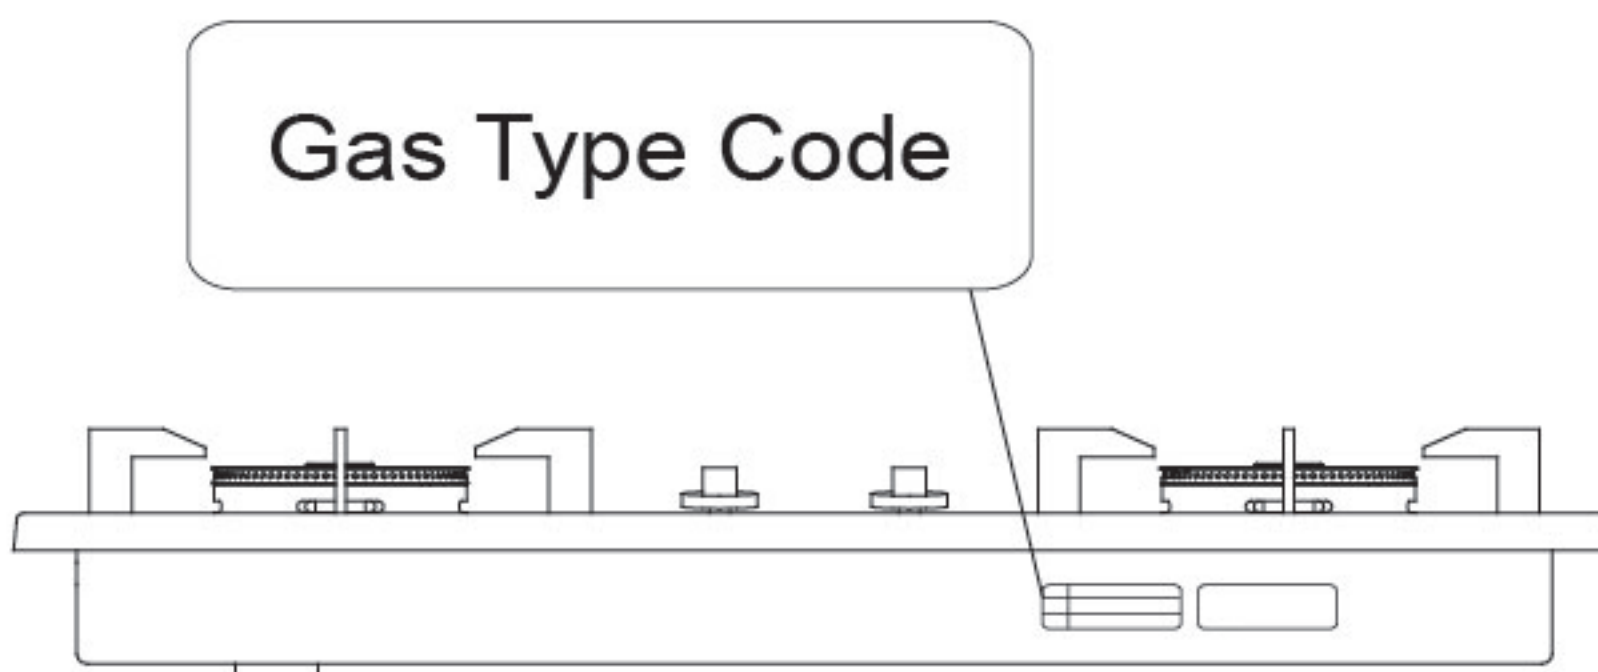


Prohibit the use of rim based or convexbased vessels on the hotplate.

### Strictly Execute




|   |   |
|---|---|
|    | The gas stove can be used only in family kitchen. Please donot do not install it in the bath room, bed room, basement or places that are flammable, explosive and corrosive.  |
|   | Such works as gas stove installation, refitting, removal, dismantle, repair should be done by certificated companies and operated by professional people.   |
|  | To prevent carbon monoxide poisoning, after installation and before usage, please make a leakage test. Keep the room ventilated when daily use.   |
|  | If there is gas leak, please turn off the switch knob and general gas valve soon, open the window, contact FOTILE service center to repair it. At this time, don't touch the power switch or ignite, and don't use mobile phone, fixed-line telephone, etc, to prevent explosion. |
|  | Please don't let the gas stove working at strong wind disturb environment, because it will influence the normal burning, even failed to work.   |
|  | If there happens burning due to over high oil temperature, please cover the source of fire with large size metal items, like irony pot cover(please don't use water), and close the general gas valve.  |


|   |  |
|---|--|
|  | Please periodically replace grease resistant gas rubber hose. Suggest the hose should not be used for more than one and half year. Don't place the hose on the stove or near the stove panel.        |
|  | Please don't go out or go to bed when gas stove is working. Please turn off the knobs and general gas valve after usage and repeatedly check whether they are turned off before you sleep or go out. |
|  | Used batteries must be placed into appointed used batteries reclamation bin or recyclable garbage can.   |
|  | If you don't use the gas stove for a long time or going to move it, please clean up the dirt, dismantle the rubber hose and envelop the hose joint and gas interface with screw cap.                 |
|  | Please keep the product plastic package away from the infants, to avoid suffocation, etc.  |

### Forbidden

|   |  |
|---|--|
|  | Please don't dismantle, refit gas stove personally and privitely to avoid gas leak. We suggest fix gas leak alarm.   |
|  | Please confirm the gas type is the same with nameplate indicate before use. It is forbidden to change into other gas type, especially the man-made gas which contains CO.  |
|  | The gas stove is for heating cook utensil, don't use it for drying towels, clothes, etc.   |
|  | Please don't turn on the gas stove for heating when there is no pan or there is no food in the pan. It may damage the range hood which is above the stove, even will burn the grease inside of the range hood and cause fire accident. |



|   |  |
|---|--|
|  | Please don't touch the stove that is off work for a short while, to avoid scalding.          |
|  | Please don't place and install any inflammable and explosive substance around the gas stove. |
|  | Please don't place any acidic or alkaline substance on the stove(vinegar, lemon juice, etc). |



 The glass used in FOTILE products is tempered glass, and the tempering mechanism of glass decides that there is extremely small probability for tempered glass self explosion. Once it happens self explosion not due to improper use, we promise to replace the tempered glass free.

- Prior to installation, ensure that the local distribution conditions (nature of the gas and gas pressure) and the adjustment of the appliance are compatible.
- The adjustment conditions for this appliance are stated on the label (or data plate).
- This appliance is not connected to a combustion products evacuation device. It shall be installed and connected in accordance with current installation regulations. Particular attention shall be given to the relevant requirements regarding ventilation.


## Usage

### Specification and Structure

GHG78211/GHG78215

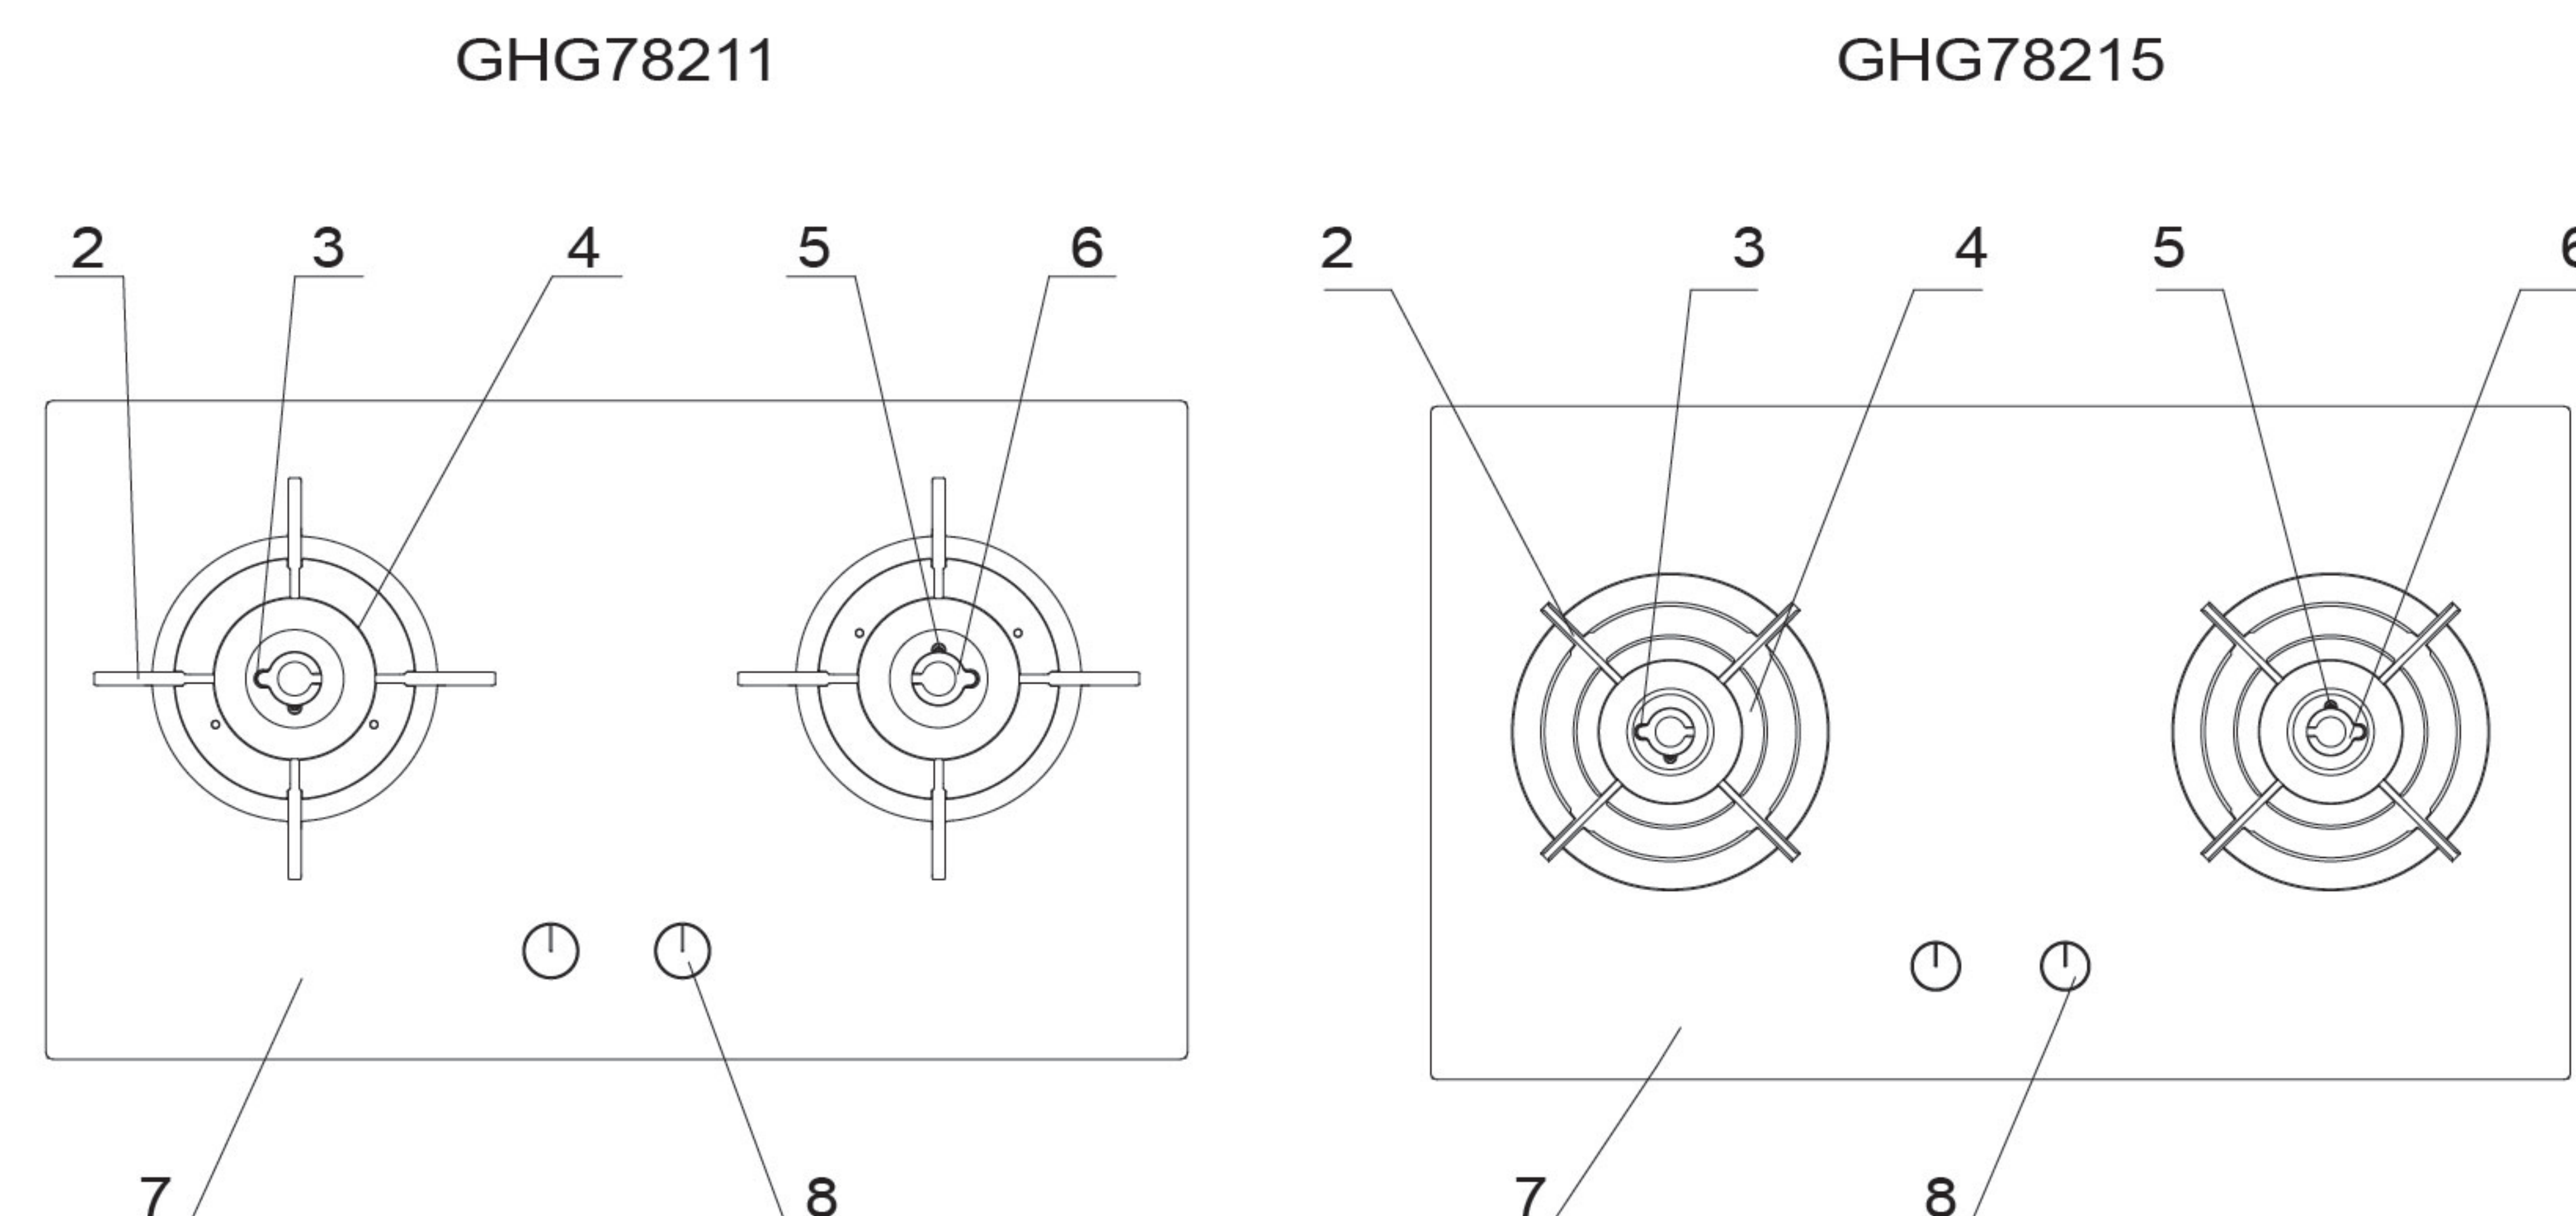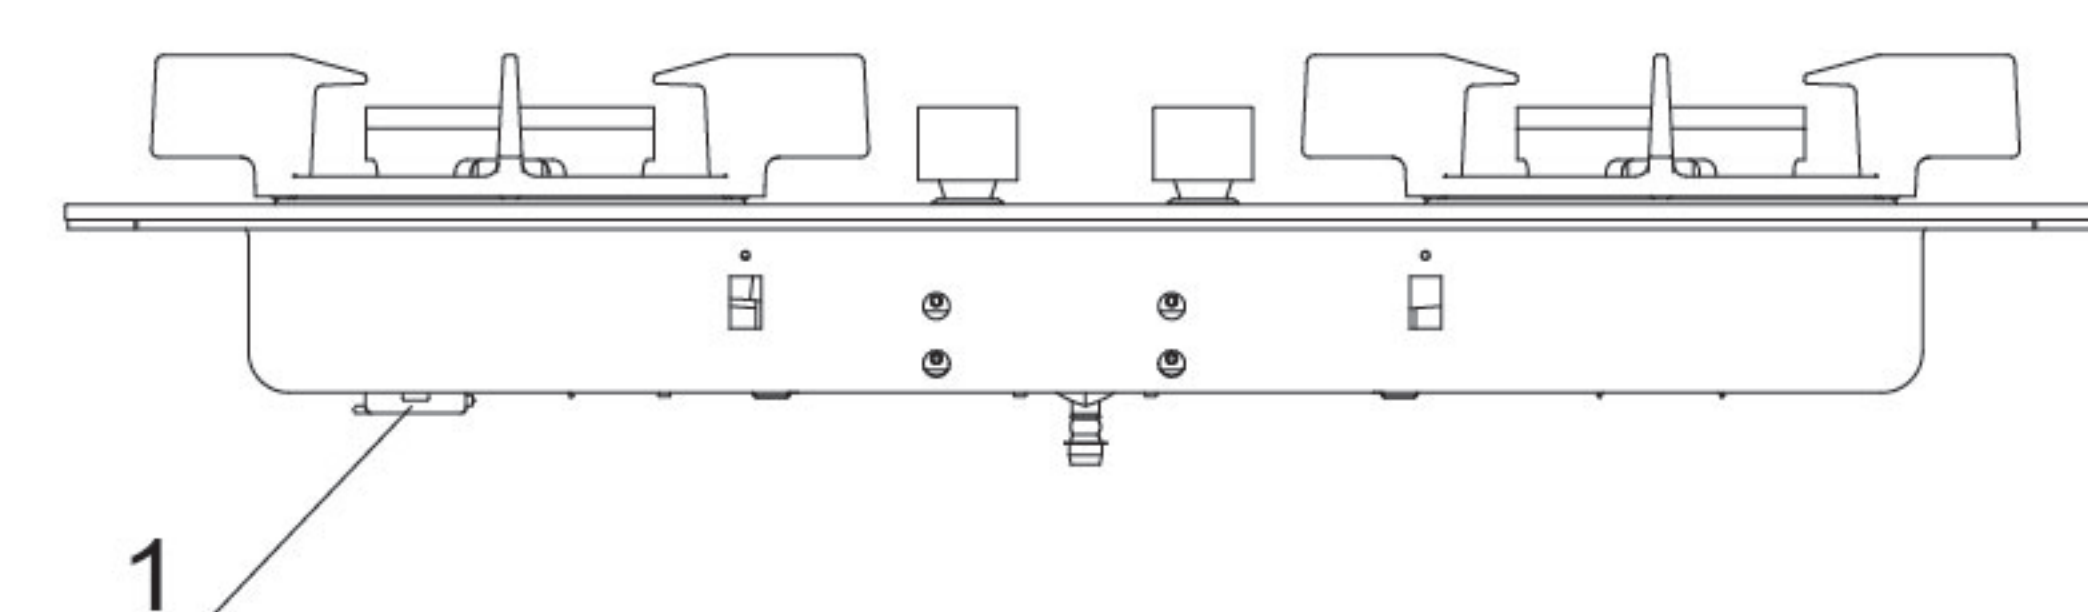

- Battery box
- Pan support
- Ignition pin
- External Flame Cap
- Thermocouple
- Internal Flame Cap
- Panel
- Knob

-  a.Be careful the pot (pan) is too heat to cause fire when cooking with vegetable oil and animal fat oil. When cooking with such kind of oil, please don't leave it alone after you put the food into the pot (pan).
- b.The stove will heat when using, please keep it off heating items. Such metal objects as knife, fork, spoon and cover, should not be placed on the stove to prevent heat conduction.

### Ignition Operation

There is the operation methods for FOTILE gas stove knob,please refer to Fig.1.


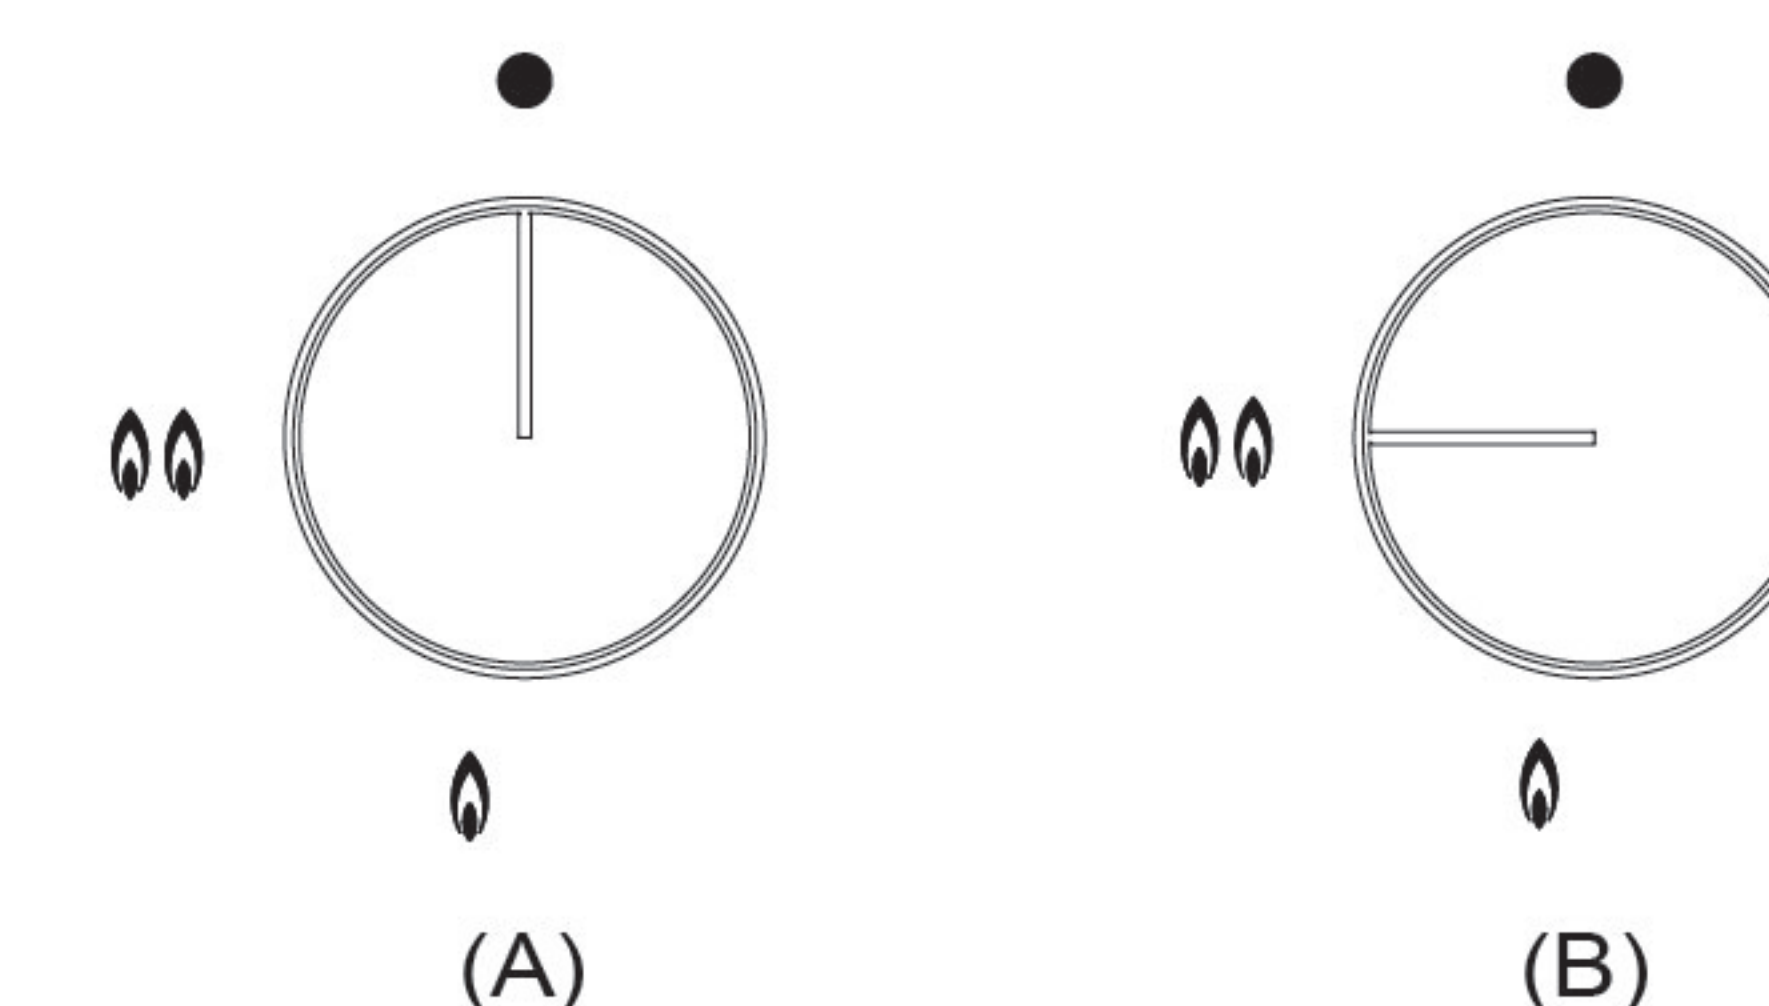


Fig. 1

First of all, check whether the knob is in the “●” position (refer to Fig. 1A). Then turn on the gas switch, press the stove knob until it cannot be pressed and contrarotate 90 degrees (refer to Fig. 1B), to confirm the flame is lighting up. If the flame extinguishes after your hand leaves the knob, then please return the knobs to “●” position, and repeat the above operations.




Fire Adjustment

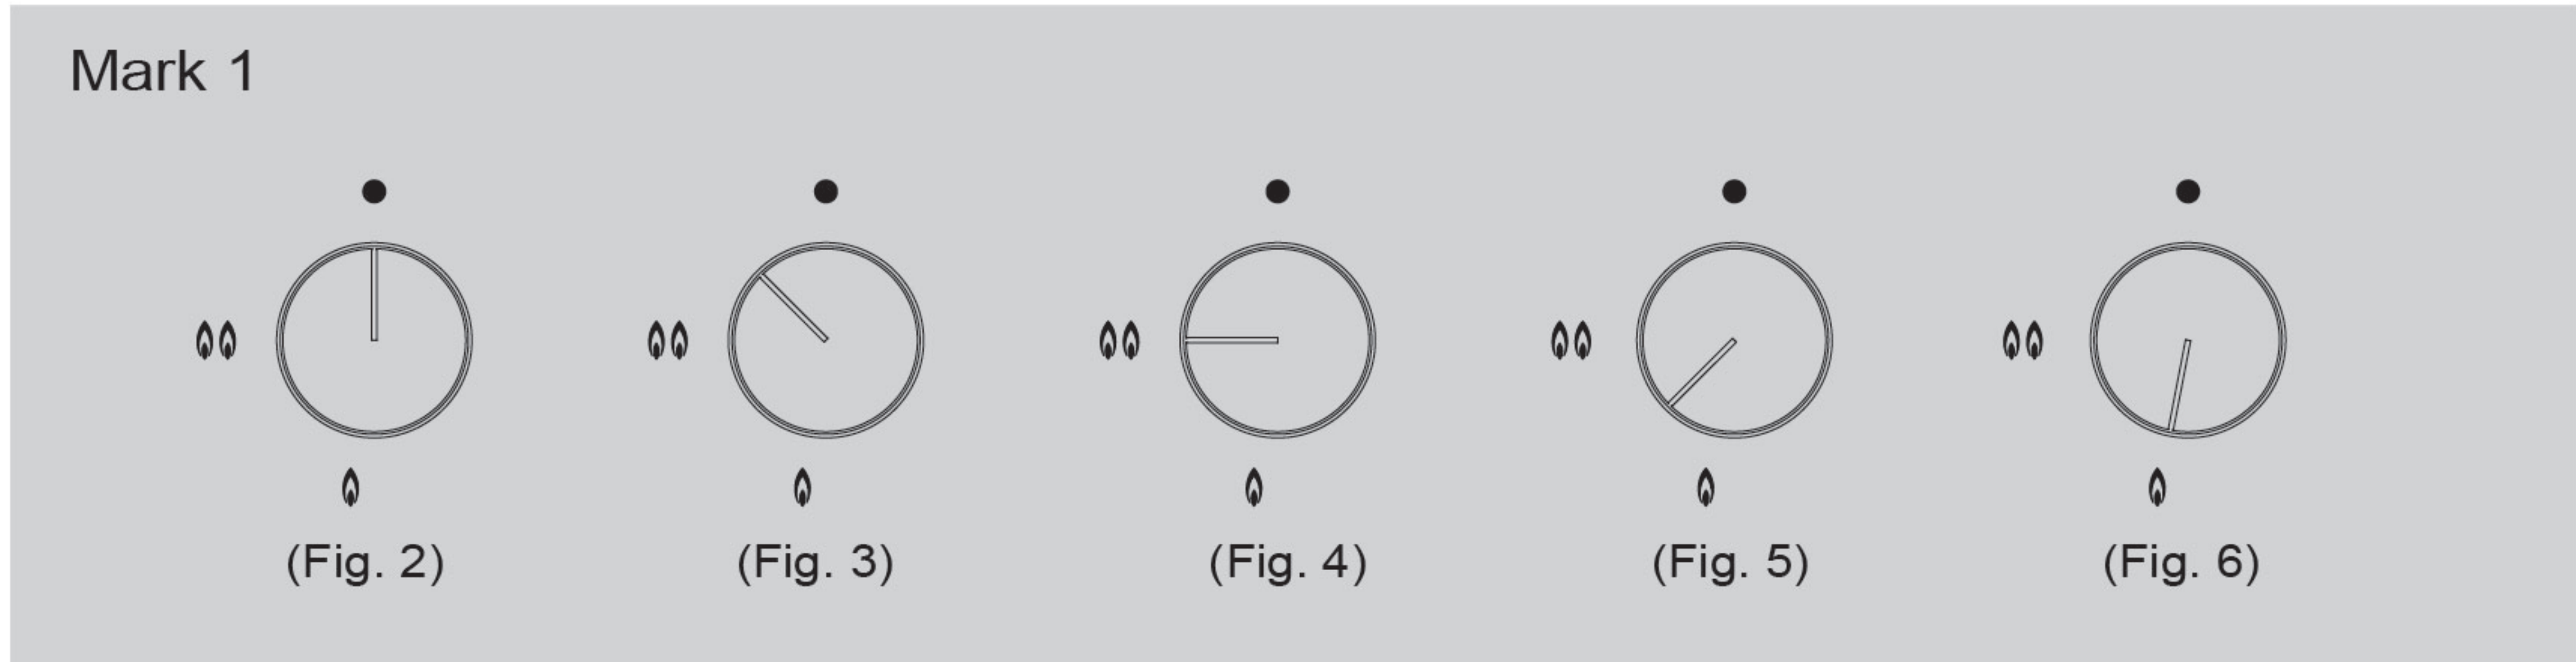

After ignition, please comply with the methods in Fig. 3, 4, 5 and 6 to turn the stove knob. You can adjust big or small fire according to the demands.

If you need to stop stove working, please clockwise turn the knob to "●" position, then the fire will be extinguished (refer to Fig. 2). Then close the general gas valve.

- 


a.The flame failure device can prevent the gas leak accident caused by fire extinguishing, which is due to wind blow or soup overbrim. But it can't avoid gas leak due to other reasons.






b.All FOTILE gas stoves are with flame failure device.Press down the knob when igniting,and anticlockwisely turn to "●" position(refer to Fig. 4).It is ok if the flame will not extinguish after you loosen your hand, which means the flame failure device is working now. When cooking, if the overbrimed food or blowing wind extinguish the flame accidentally, the device will close the gas valve automatically to avoid the gas leak.

c.In the event of the burner flames being accidentally extinguished, turn off the burner control and do not attempt to re-ignite the burner for at least 1 min.

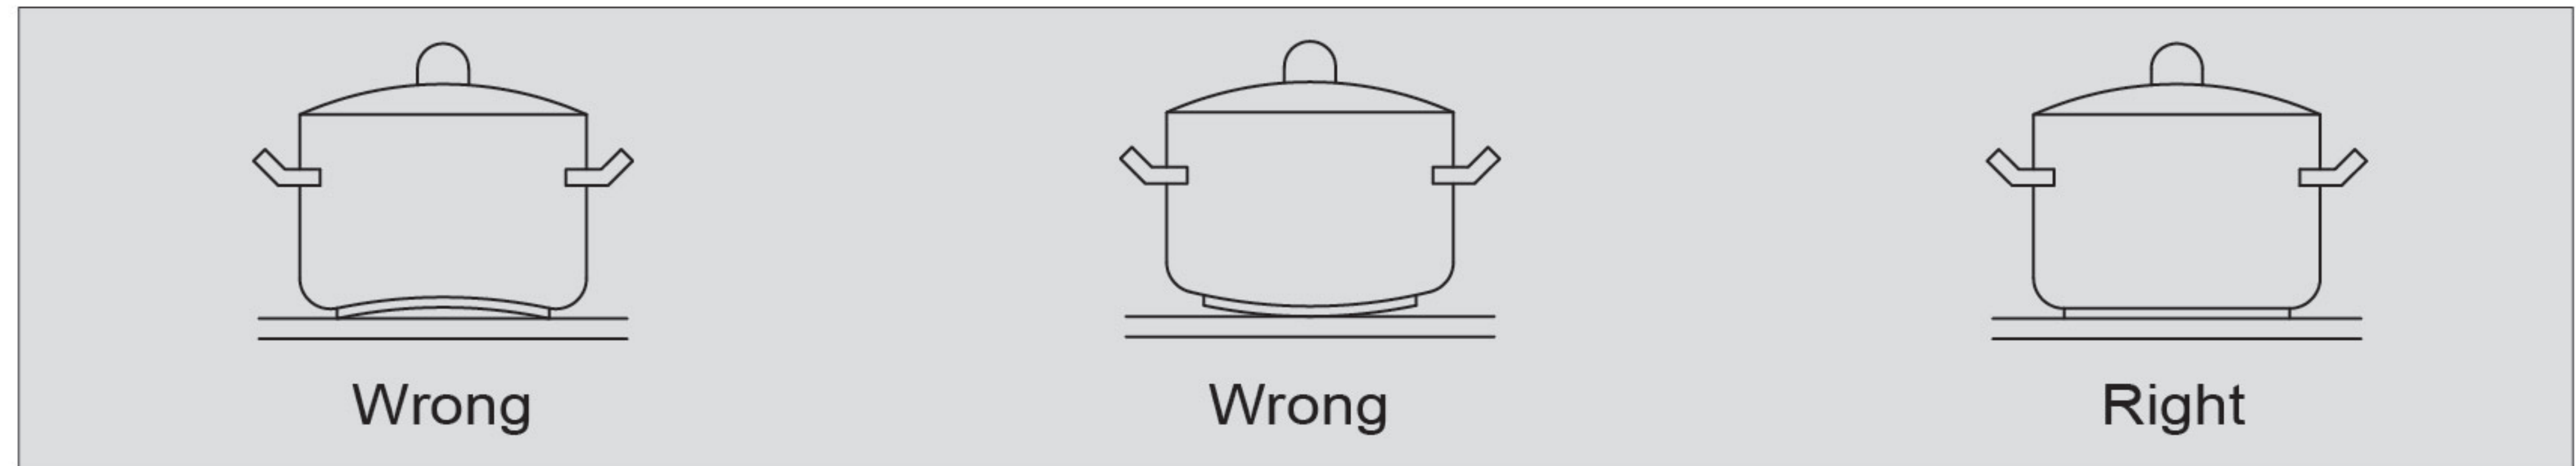Selection of pans


- Please choose the proper pan, and you will enjoy better cooking experience.
1. Please make sure the diameter of the pan used is equal to or more than cook area.
  2. To avoid rubbing the surface,using clean and bottom-slick pan.
  3. To get best cooking results, the bottom of porcelain enamel steel pan shall be 2-3mm thick, the bottom of stainless steel filled pan shall be 4-6mm thick.
  - 4.Warning the user against the use of cooking vessels on the hotplate that overlap its edges.
  - 5.The use of inappropriate hob guards can cause accidents.



|   |  |
|---|--|
|  | Do not place anything, e.g. flame tamer, asbestos mat, between pan and pan support as serious damage to the appliance may result.  |
|  | Do not remove the pan support and enclose the burner with a wok stand as this will concentrate and deflect heat onto the hotplate. |
|  | Do not use large pots or heavy weights which can bend the pan support or deflect flame onto the hotplate.                          |
|  | Locate pan centrally over tahe burner so that it is stable and does not overhang the appliance.                                    |
|  | Use only a wok support supplied or recommended by the manufacturer of the appliance.   |

| Support     | Minimum | Maximum |
|-------------|---------|---------|
| Pan support | 120mm   | 200mm   |
| Wok support | 200mm   | 270mm   |


Gas cooker can support pots as small as 120mm diameter only when used with the Mini Pan Support provided.

- 

The use of a gas cooking appliance results in the production of heat, moisture and products of combustion in the room in which it is installed. Ensure that the kitchen is well ventilated especially when the appliance is in use: keep natural ventilation holes open or install a mechanical ventilation device (mechanical extractor hood). Prolonged intensive use of the appliance may call for additional ventilation, for example opening of a window, or more effective ventilation, for example increasing the level of mechanical ventilation where present.





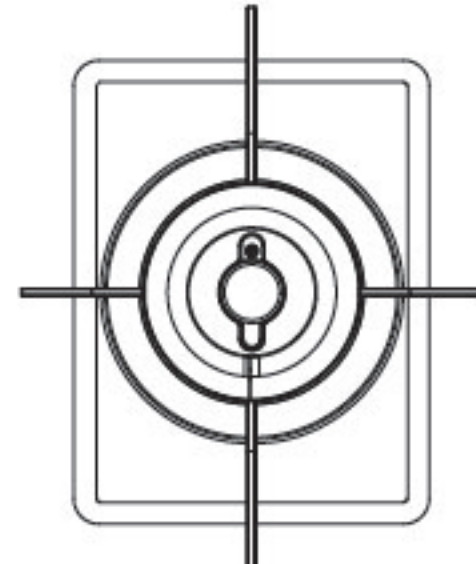


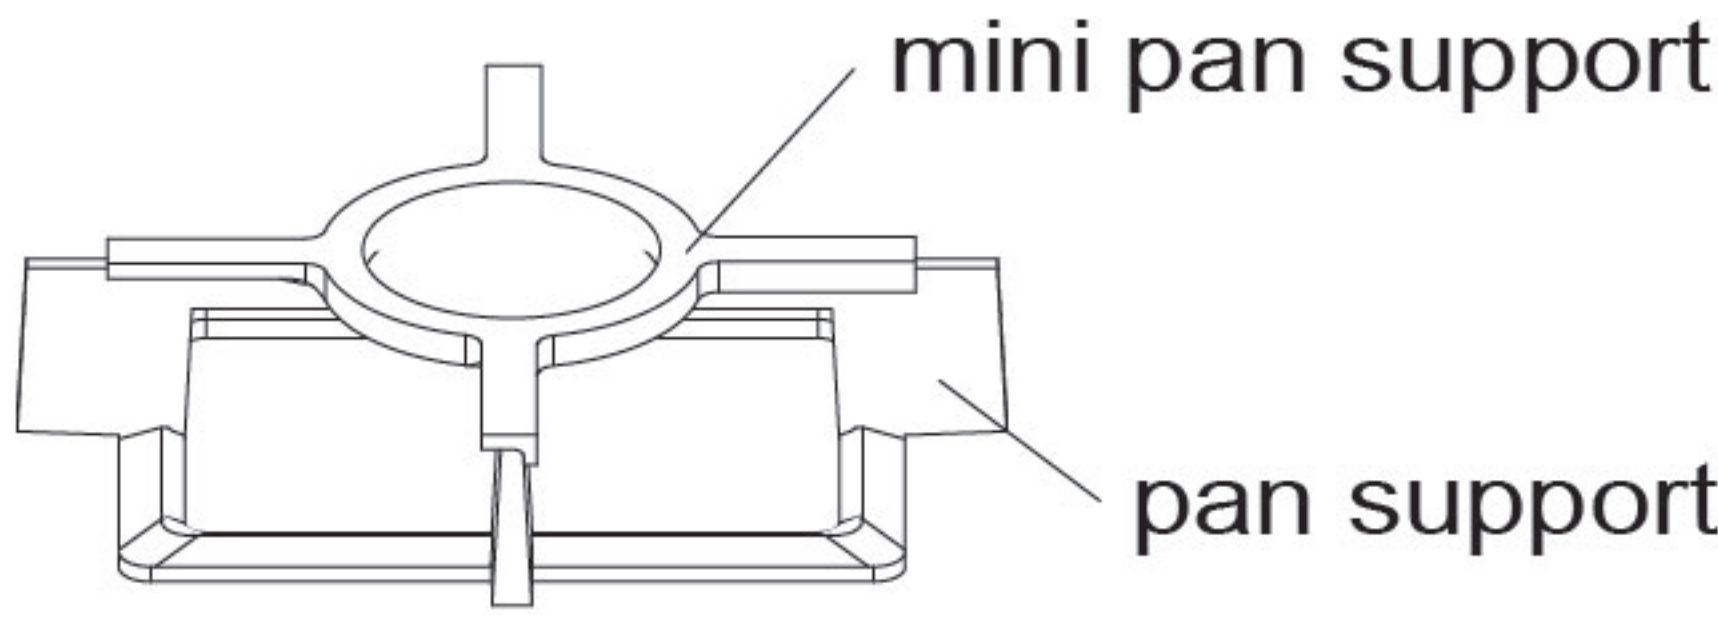

Use of mini-pan support


To ensure that the small pan can be stabilized on a pan support, this product is equipped with an additional mini-pan support. Please refer to the installation method on the right to install it.




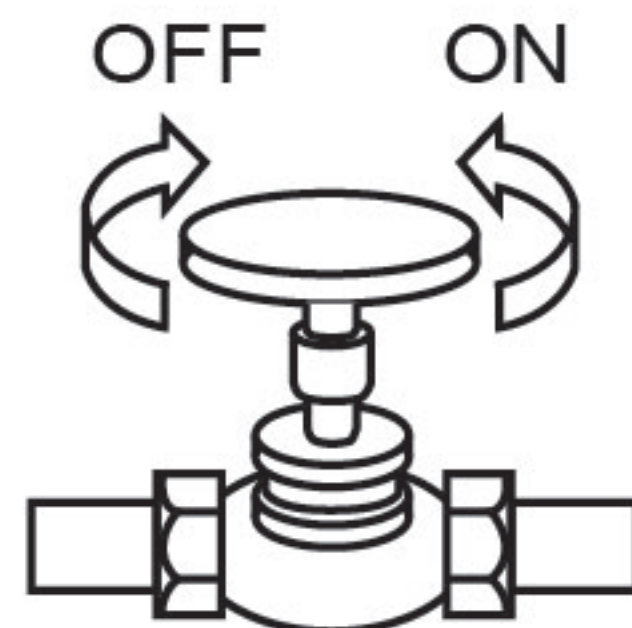




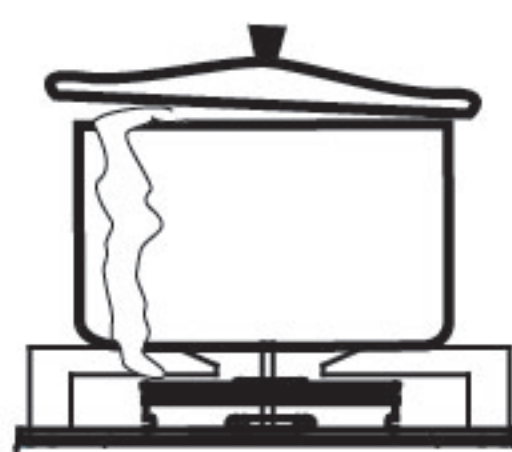

Cleaning and Maintenance
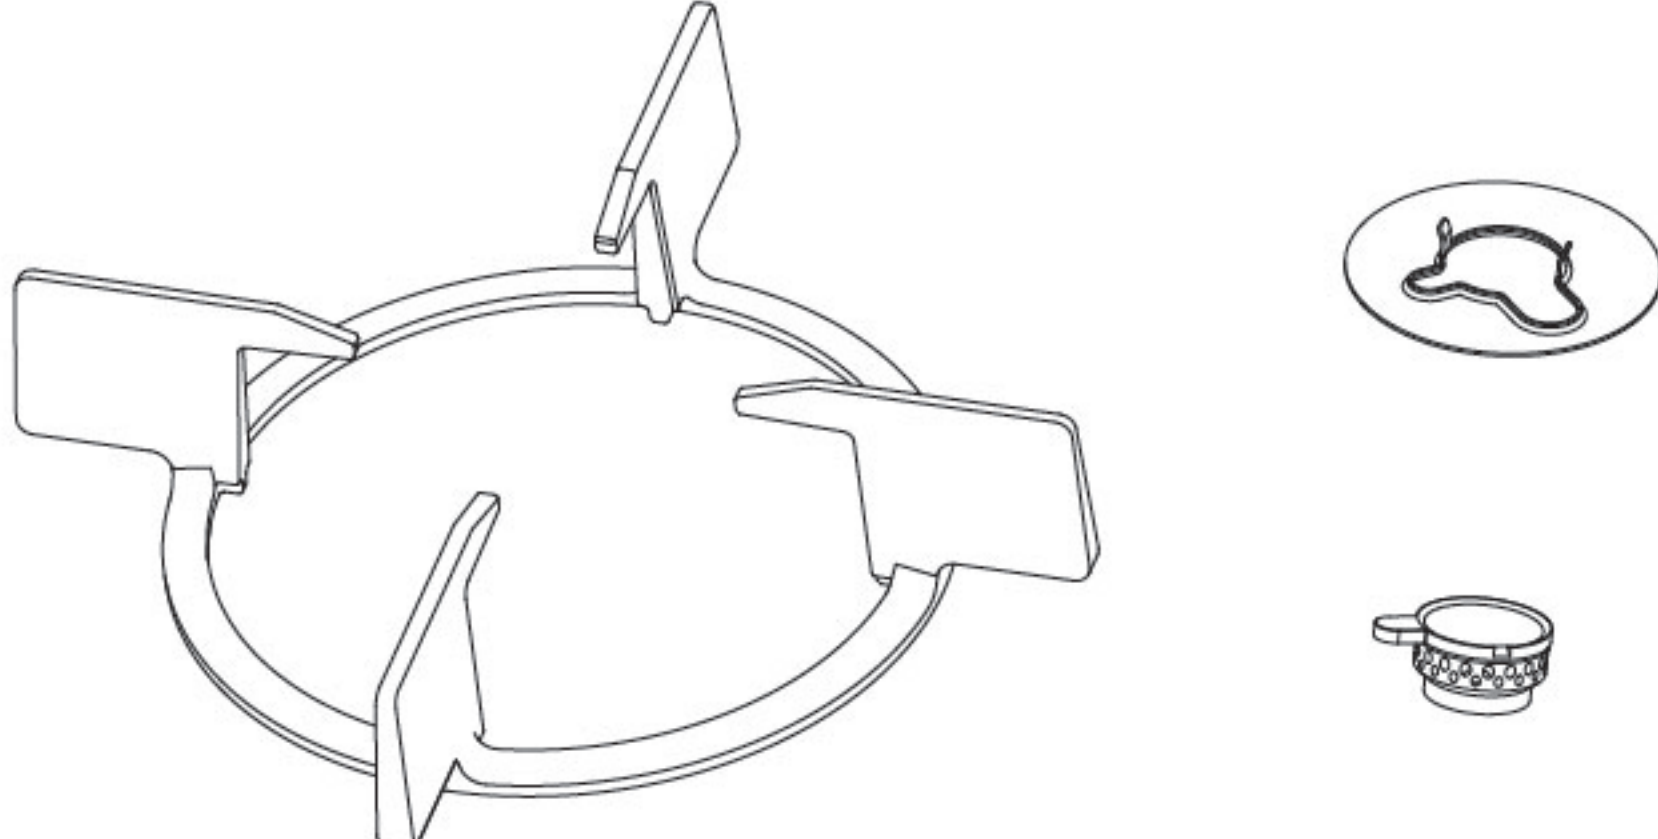
| ⚠ Notice   |   |  |
|--|---|--|
|                                     |    |                       |
| Before cleaning and maintaining the stove, switch off the general gas valve and wait for it cooling down thoroughly. | When you maintain the following, make sure not to disassemble the safety device or gas duct parts.  | Please contact FOTILE service center if there is abnormality.  |
| ■ Check  |   |  |
|                                     | The gas link rubber hose must be reliable and avoid any cracks; once you find gas leak, please stop using at once and replace it in time.       |                         |
|  |   | Burners, flame caps and pan supports shall be correctly positioned.                                      |
|                                   | Please don't stack the inflammable around the gas stove.  |                       |
|  |   | The flame should not be irregular.   |
|                                   | Never let the spillage block the burner. Make sure there is no food residue, foreign matter and water touch the ignition and thermocouple head. |                       |
|  |   | Check the position of the interface between the stove and gas pipe to avoid gas leak frequently by suds. |

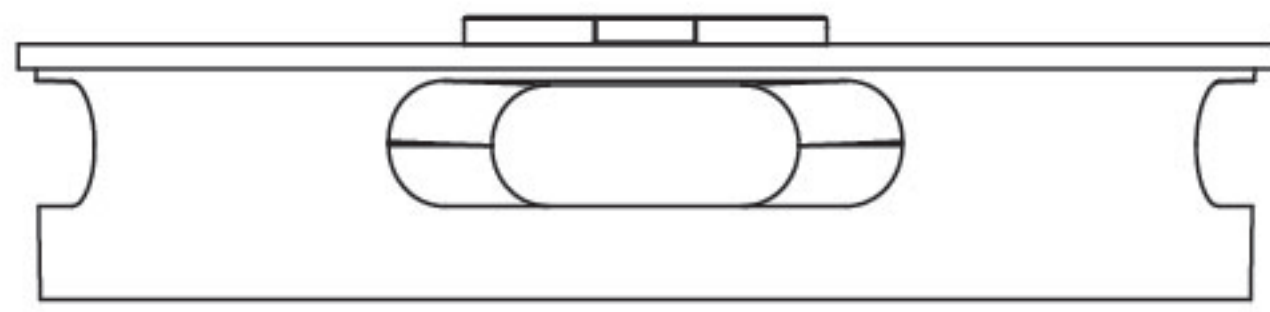
 Please don't wipe the stainless steel panel with sharp material like steel wire ball, etc. It will greatly shorten the stove lifespan.

| ■ Maintenance  |  |
|--|--|
|  <p>1.Before cleaning, please take down the pan supports and flame caps.</p>  |  <p>Warm water                      Neutral</p> <p>2. Movable parts of burner like copper flame cap must be washed with warm water and neutral cleanser frequently. Remove the nugget and dry it, then use the stove.</p> |
|  <p>Neutral</p> <p>3.Please use neutral cleanser which is without corrosiveness, to clean the stainless steel panel and burner. Never use chlorine-base cleanser to clean glass.</p>  |  <p>4.Make sure that there is no carbon in the firehole, and no jam.</p>  |
|  <p>Graininess Cleanser    Aculeated Articles (Knife etc.)    Clean Ball</p> <p>5.Please don't use such aculeated articles as graininess abluent (putty-powder), clean ball, knife, etc. to clean the residua stubborn besmirsch in the burners. Otherwise, it will make the kitchen countertop go wrong or fray the assembly surface, then influence stove lifespan.</p> |  <p>6.After cleaning, dry them well and install them correctly.</p>   |



Normal Malfunction and Trouble Shooting







| Malfunctions                      | Possible reasons  | How to solve   |
|-----------------------------------|---|--|
| It won't fire                     | Forget to open the general gas valve  | Close the stove knob and open the general gas valve, then ignites  |
|                                   | There is air mixed in the gas pipe  | Ignite repeatedly until the air is absolutely ducted   |
|                                   | Rubber hose bend or stave   | Unbend or replace the rubber hose  |
|                                   | The ignition pin electrode and electrical insulator are not clean and become damp   | Clean it with dry cloth  |
|                                   | Safety valve is not opened  | Press and rotate the knob to "00" position, make sure the stove is ignited and keep pressing the knob for 3 to 4 seconds |
|                                   | Electron spark is weak, battery power is not enough, loose contact of battery positive and negative charges or opposite fix the battery | Replace the battery or refix the battery   |
|                                   | Ignitor failure or ignition pin electrode is not in the right place   | Please contact the FOTILE service center   |
| Gas leak                          | Rubber hose is chapped or uncorked  | Please contact the FOTILE service center to replace the rubber hose  |
|                                   | The joint haven't well connected with rubber hose or other hoses  | Correctly connect and check the gas tightness in the hose joint  |
| Unstable flame                    | Run out of the liquefied gas  | Replace a new liquefied gas cylinder   |
| long and short flame,yellow flame | Not cover the flame cap correctly, there is carbon in the firehole or being jammed with dirt  | clean the firehole and wipe off the dirt, to make sure the right position of flame cap                                   |
| Incidentally, there is red fire   | Under a certain climate, the gas is with much humidity.   | The calcium in the water make the red fire, don't worry  |



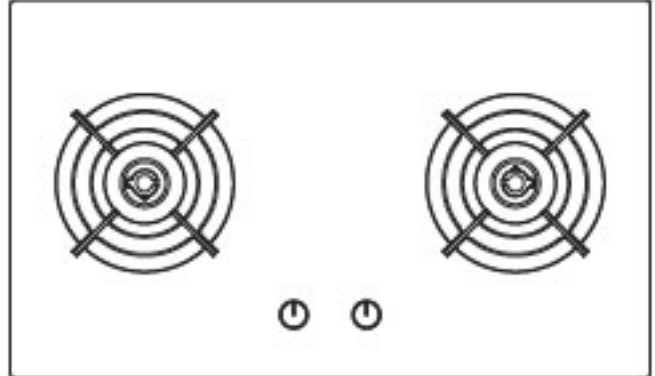

If the gas stove still can't work after getting rid of the above malfunctions, please contact FOTILE service center .

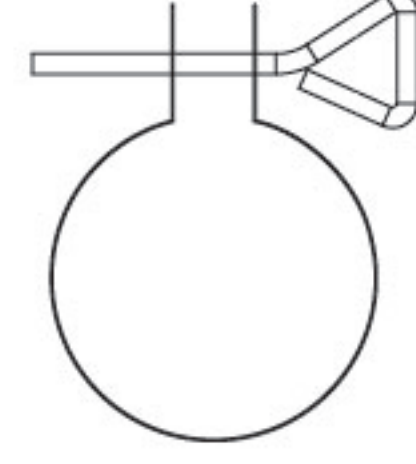Installation

Packing List

|   |                    |   |   |                                     |   |
|---|--------------------|---|---|-------------------------------------|---|
|  | Complete Appliance | 1 |  | D battery(suggest alkaline battery) | 1 |
|  | User Manual        | 1 |  | Rubber Hose Buttons                 | 2 |
|  | Warranty Card      | 1 |  | Screm                               | 4 |


Installation Methods

| ⚠️ Attention:  |  |
|--|--|
| <div></div> <div>Execute Strictly</div> <div>Please don't install the gas stove above the kitchen appliance in poor ventilation environment. Please make sure the gas pipe, which is connected with gas stove, can't touch any active parts in the cabinet.</div> | <div></div> <div>Execute Strictly</div> <div>Before installation, please check whether your family use gas type is the same as the gas type printed in stove nameplate. Any doubts, please contact FOTILE distributor or service center soon.</div> |

- 1.The stove should be installed into durable and horizontal kitchen countertop. For the hole size on the countertop, please refer to the installation diagram Fig 7. Make sure the distance from the inflammable matters must be greater than 150mm, and from noncombustible matters greater than 50mm.
- 2.If there are other suspenders above the stove except the range hood, the distance from stove surface to suspenders must be at least 1000mm.
- 3.Please cut out a blowhole with size of about more than 15000mm<sup>2</sup> (equivalent to 3 circular holes with diameter of 80mm) in the kitchen cabinet facade and stove underpart, to keep the ventilation inside and outside the kitchen appliance, otherwise, it will cause the explosion due to gas leak and deposition. Please pay attention to the following two points when using the gas stove:




- (1)Keep natural ventilation or install a mechanical ventilation device (such as range hood).
- (2)Intensive use of the gas stove for a long time may require additional ventilation, such as opening windows or improving the existing level of mechanical ventilation.
- 4.The battery box is on the left side at the stove bottom, and please install a D type battery following its polarity direction.
- 5.Gas rubber hose installation: (recommended rubber hose length: 1-2 meters)
  - (1)Buckle the rubber hose button to the hose, then hitch the hose to stove's air inlet, till the red mark, and tightly constrict the rubber hose button.
  - (2)Leak test: smear the joint part with tenuous and neutral cleanser (liquid soap), and open the general gas valve. If there is air bubble, please close the general gas valve, and repeat steps (1) and (2) until there is no air bubble and air leak.
- 6.Pressure regulator installation  
Install the pressure regulator with the arrow pointing in the direction toward the bottom of the cooktop base and in a position where you can reach the regulator access cap.

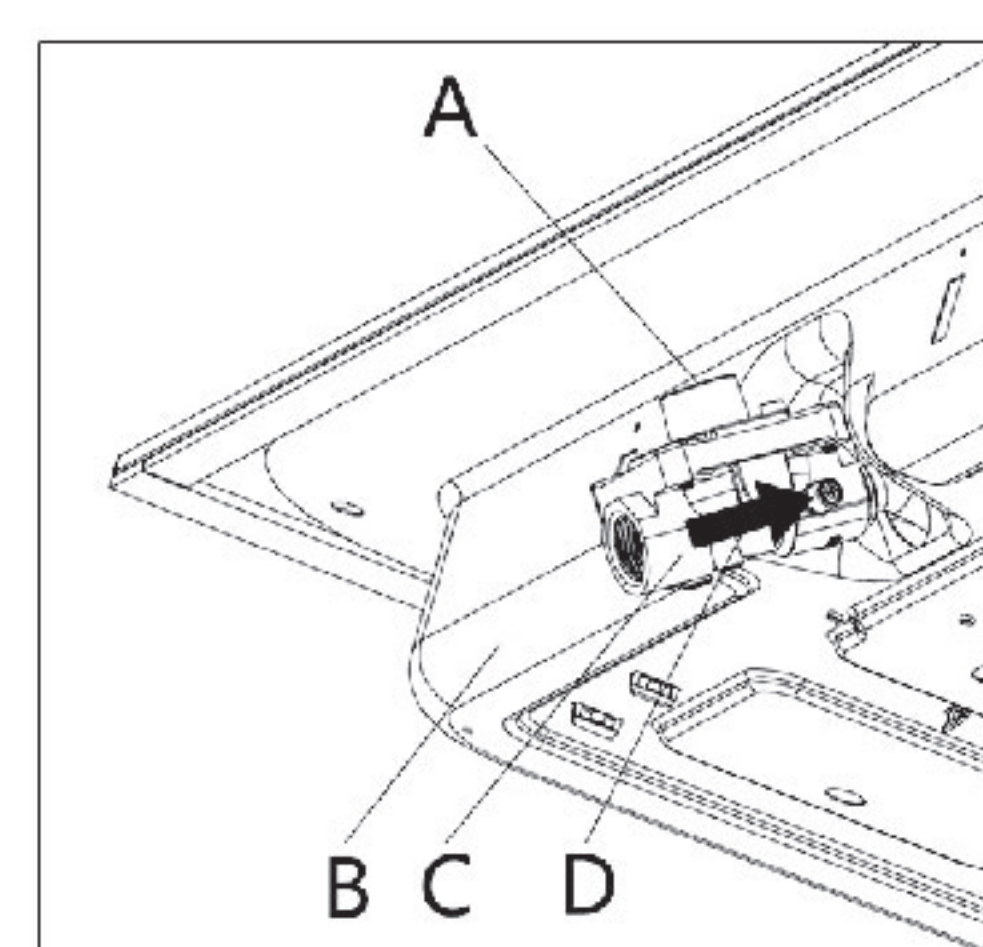

- A. Access cap  
B. Rear of cooktop  
C. Gas pressure regulator  
D. Up arrow. The arrow is on the bottom of the pressure regulator.

## Gas connection

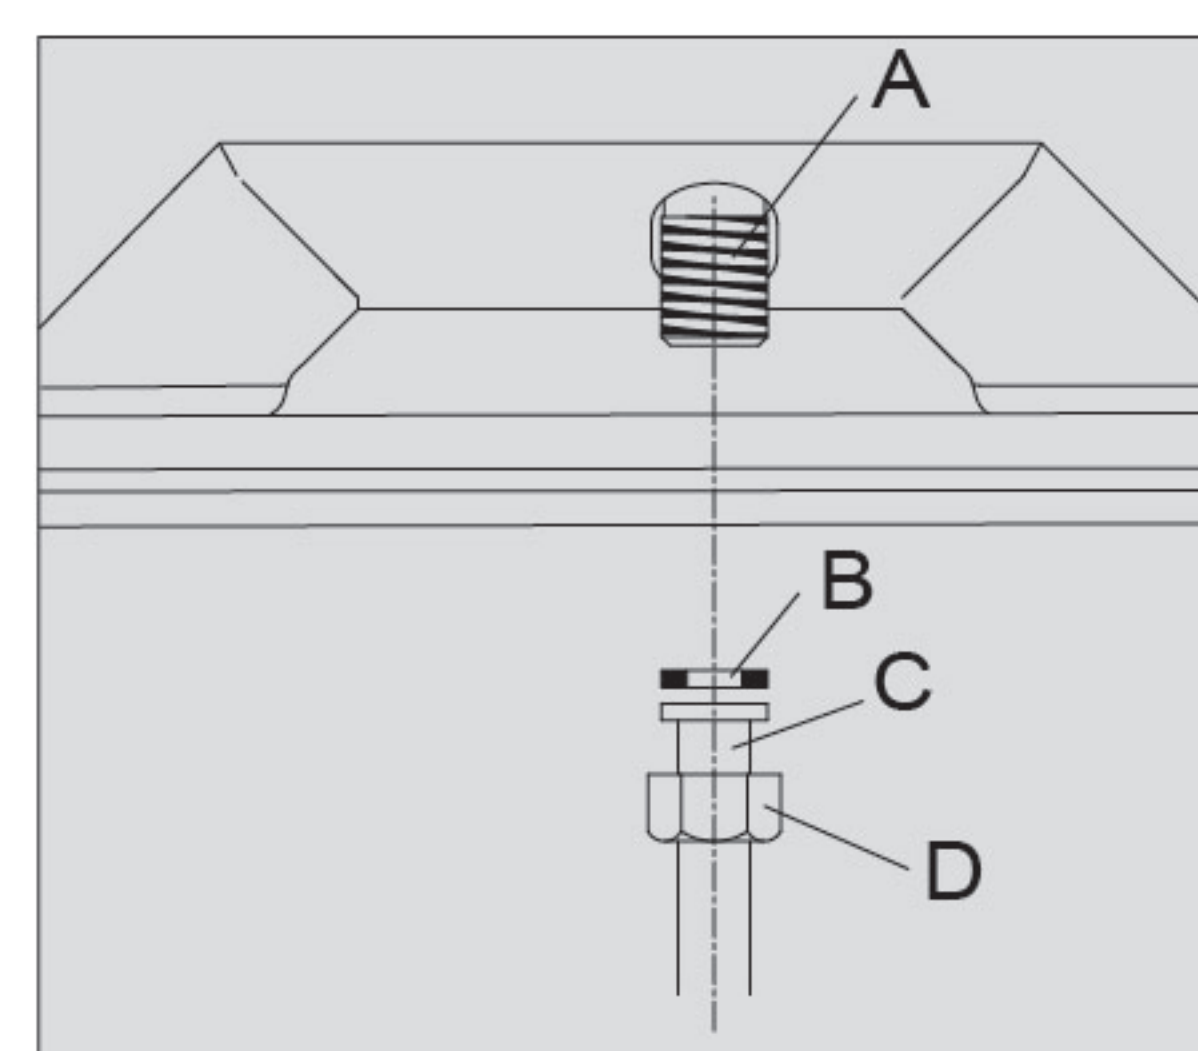


- To prevent gas leaks, please use professional gas pipe sealing materials on all male (external) pipe threads.
- Connect the gas supply and the product with the metal pipe, put the seal ring B to the surface of the joint C, and screw D to gas pipe A.
- When all connections have been made, make sure all cooktop controls are in the off position and turn on the main gas supply valve.
- Use Soap-suds at all joints and connections to check for leaks in the system.
- Tighten all connections if necessary to prevent gas leakage in the cooktop or supply line.



If using the metal soft hose, please fix it according to metal soft hose user manual.

## Install the flame spread cap

To fix the burner, please do as below: Point the locating pin A to the locating hole B. Please make sure the fire caps are placed right and they can't be turned to the left or right side.

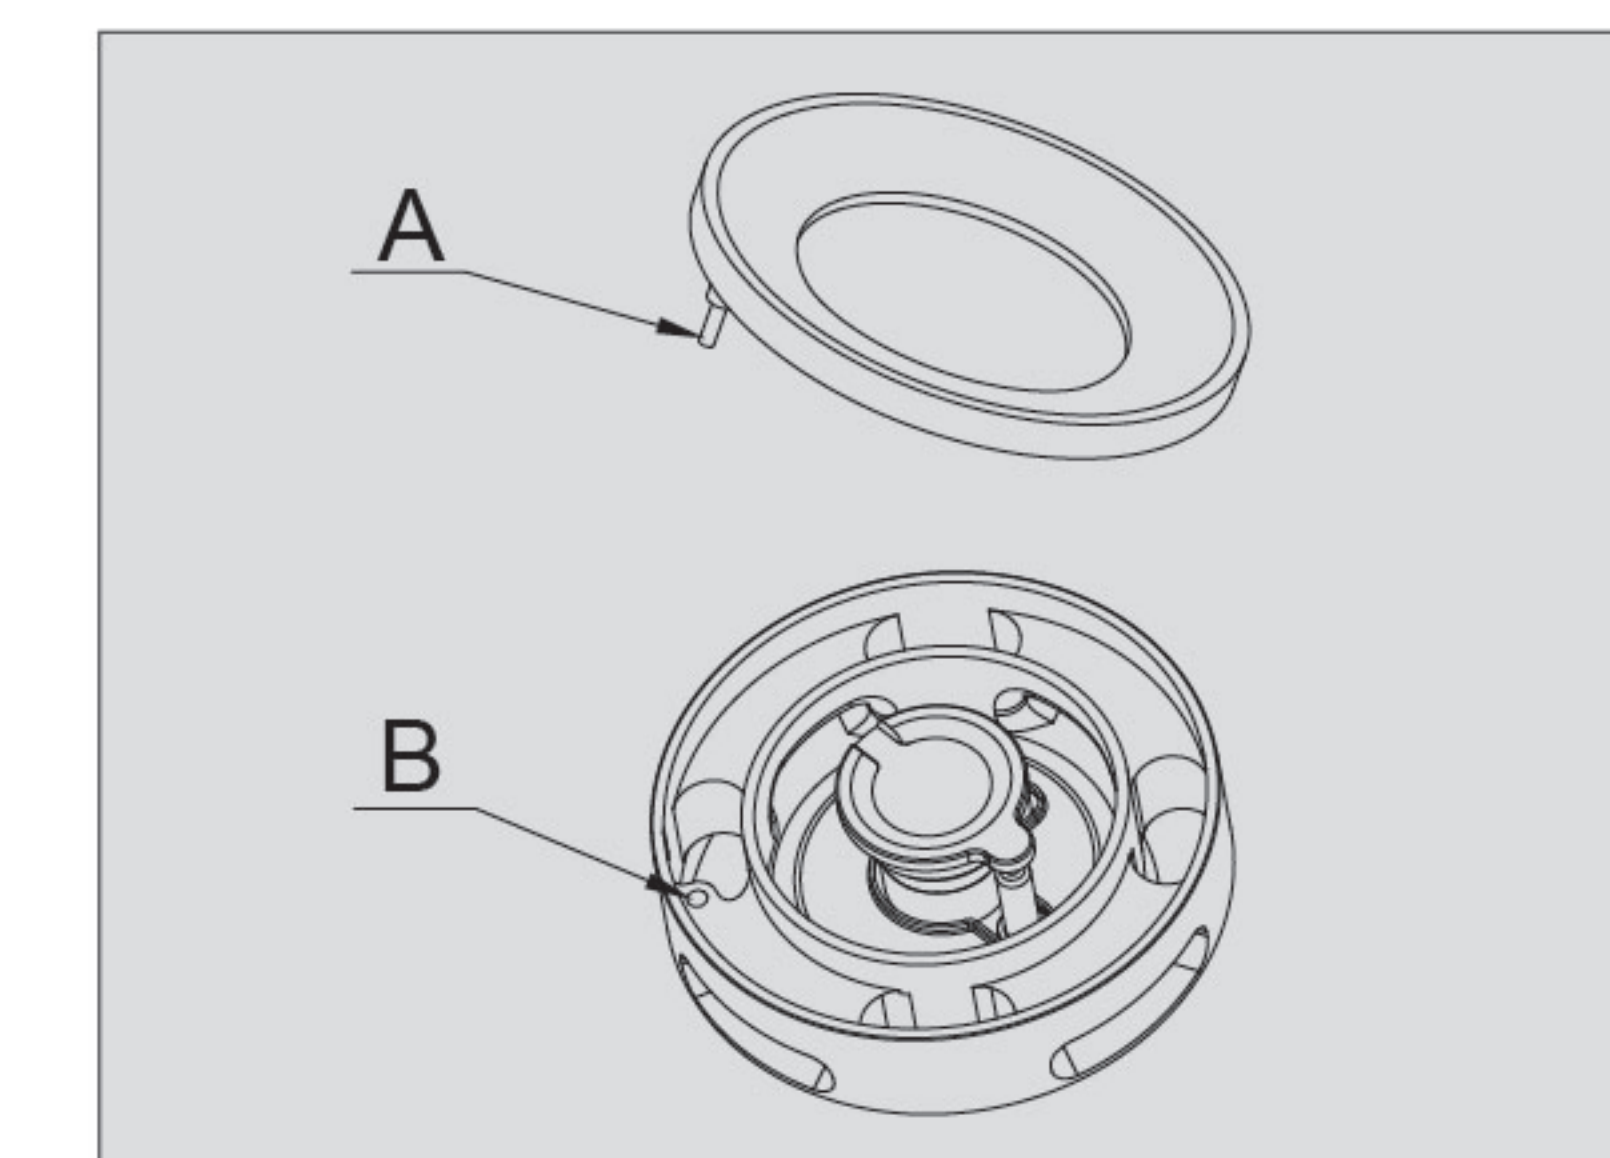

## GHG78211/GHG78215

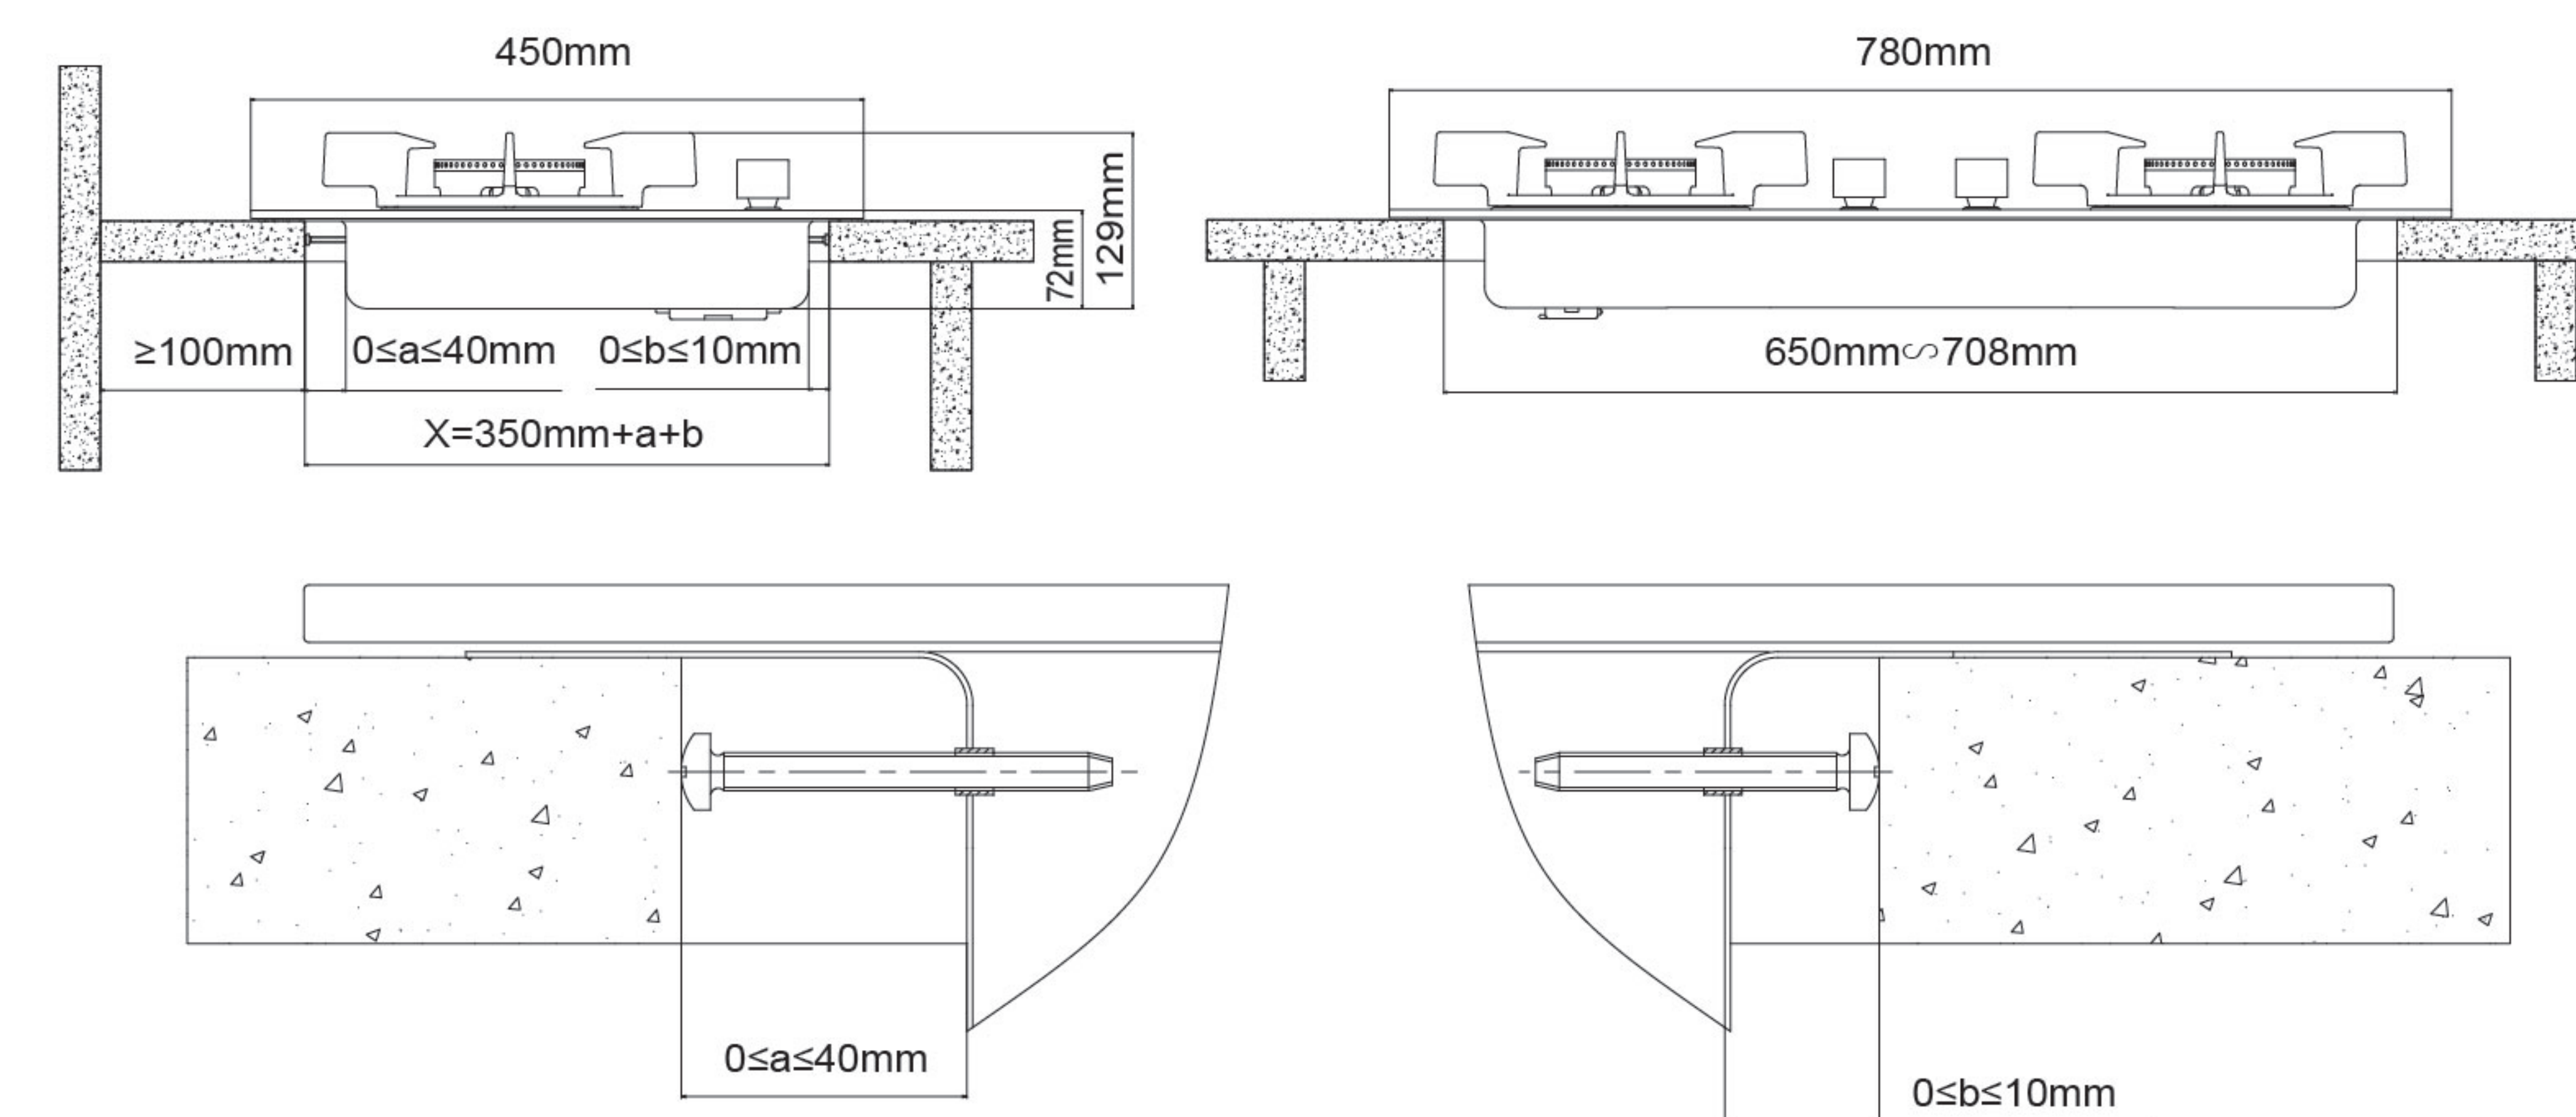


Fig.7

### Note:

When this product is newly installed, the suggested cut-out size is 350\*650.

If replacement installation is made, the acceptable cut-out range should be no more than 400\*708.


The following steps are recommended for installation:

- Measured the width data of actual opening size X.
- Select appropriate size a and b: please refer to the table.
- Install as shown in the figure.

Select appropriate size a and b

| The width of cut-out size X(mm) | a(mm) | b(mm) |
|---------------------------------|-------|-------|
| X=350                           | 0     | 0     |
| 350 < X < 355                   | 5     | 0     |
| 355 ≤ X < 360                   | 10    | 0     |
| 360 ≤ X < 365                   | 15    | 0     |
| 365 ≤ X < 370                   | 20    | 0     |
| 370 ≤ X < 375                   | 25    | 0     |
| 375 ≤ X < 380                   | 30    | 0     |
| 380 ≤ X < 385                   | 35    | 0     |
| 385 ≤ X < 390                   | 40    | 0     |
| 390 ≤ X < 395                   | 40    | 5     |
| 395 ≤ X < 400                   | 40    | 10    |
| X=400                           | 44    | 12    |



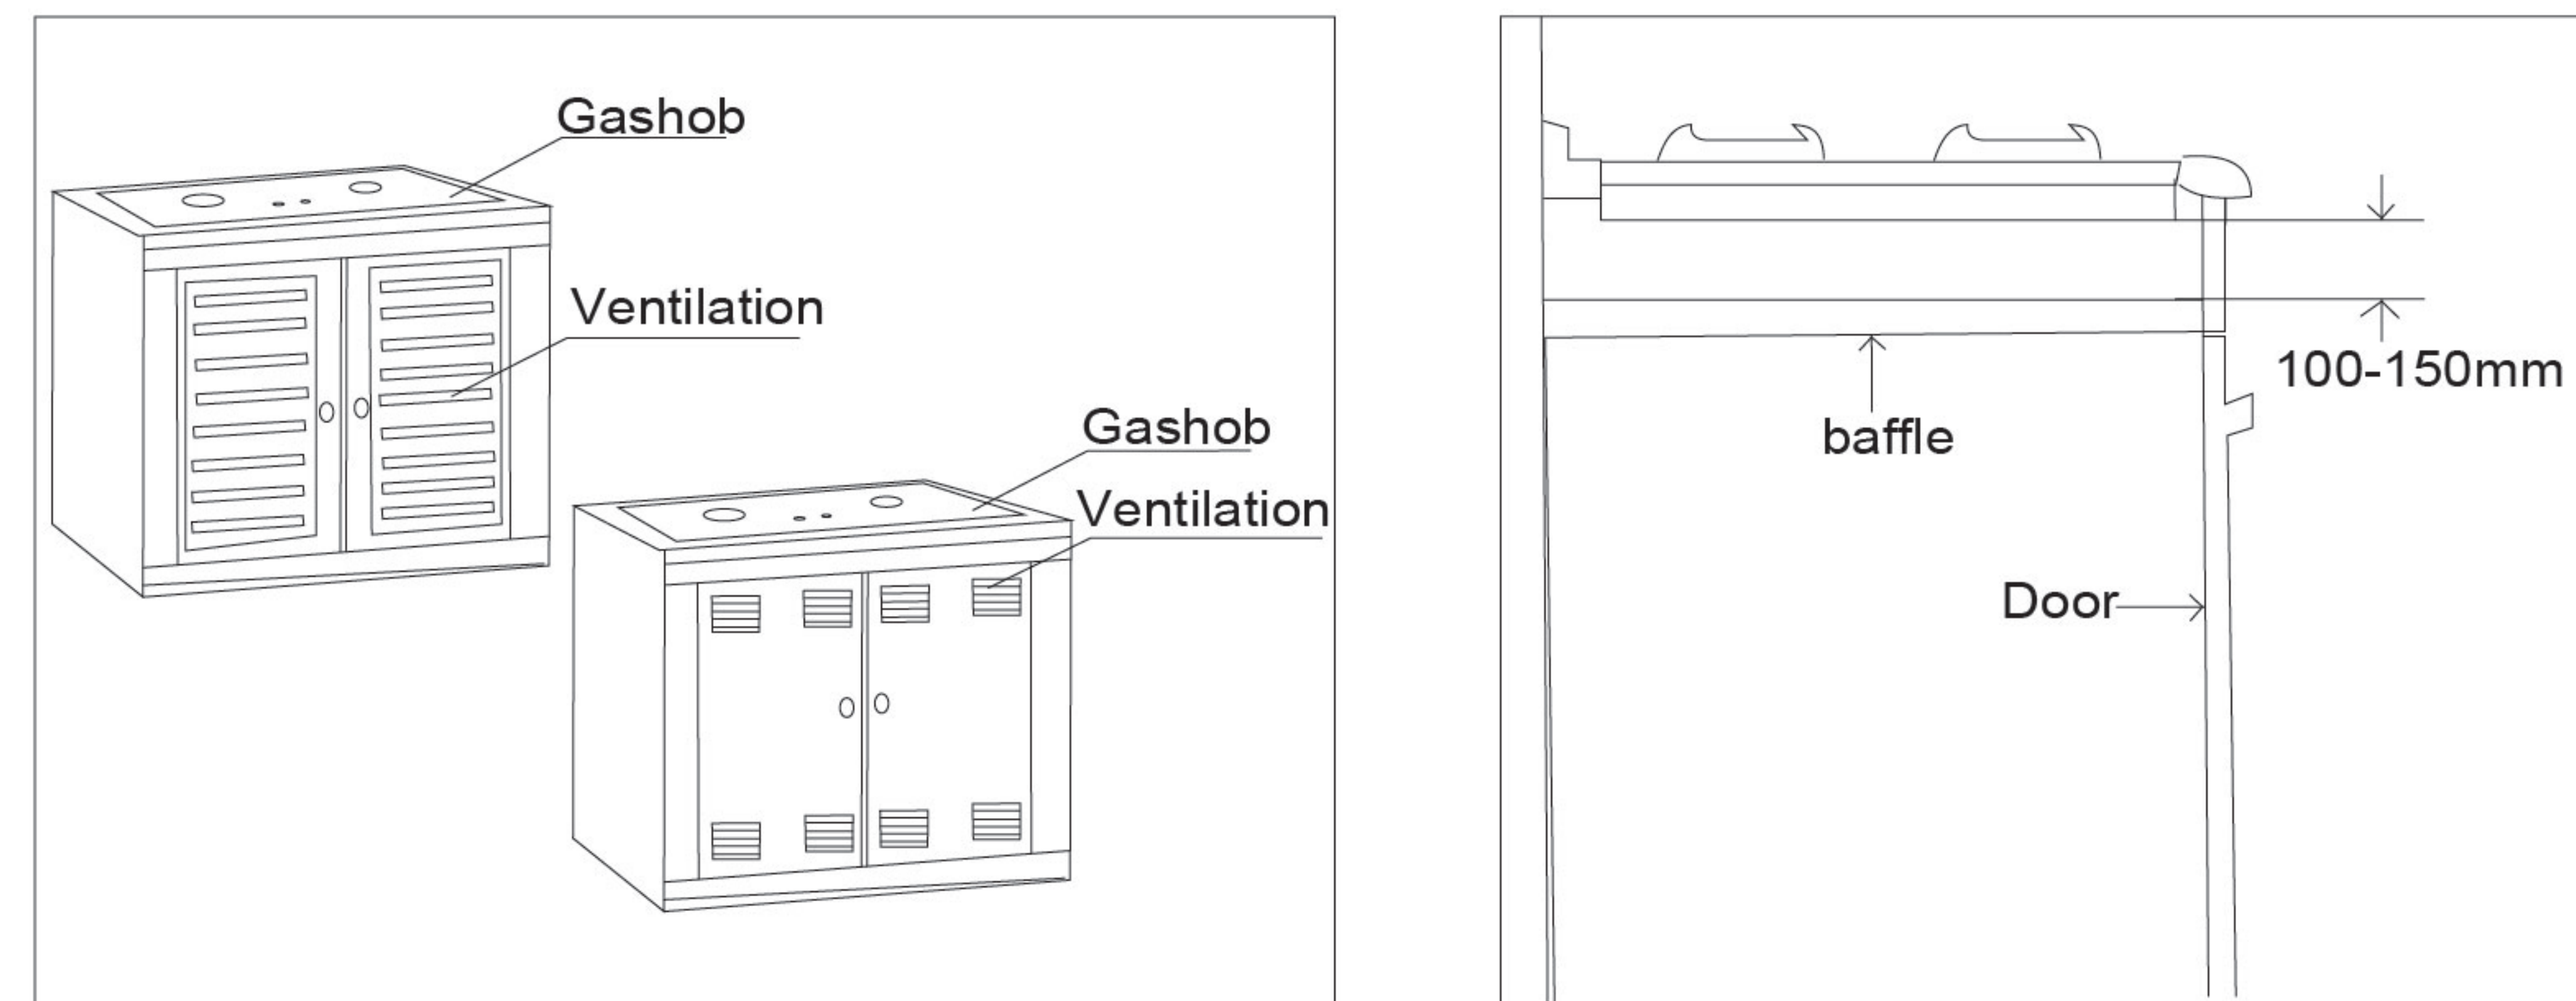

When installing a gas hob, a baffle must be installed underneath the hob, with a distance of 100-150mm.



WWW.FOTILEGLOBAL.COM

FOTILE always believes that, only by persistently focusing on kitchen industry, can we create advanced kitchen technology and provide professional kitchen problem solutions. Now, FOTILE kitchen appliance takes the lead in applying humanized, original functions and technologies. Moreover, FOTILE takes the key words of "built-in", "comprehensive set", to design a new life style: fashionable, healthy, convenient and delight. FOTILE ceaselessly drive the kitchen technology, drive your high quality life by her specialty.

Any needs, please contact FOTILE service center. Some pictures in this manual are sketch map, only for reference. If there are some discrepancies, please subject to real object.



Visit [www.go.gov.sg/tg-safety-tips](http://www.go.gov.sg/tg-safety-tips) for more information and product safety tips on using and maintaining toughened glass in cooking appliances.

FOTILE



燃气灶

用户使用手册 | GHG78211/GHG78215

在使用本产品前请仔细阅读本用户使用手册。  
阅读后请妥善保管，以备将来查看。



尊敬的用户,您好!感谢您选购方太公司为您精心制造的方太系列产品,使用前请通读本说明书,您将从中了解正确的操作规范,并享受到全新的下厨乐趣。

方太对您的承诺是“让家的感觉更好”。我们有责任使您对崭新的方太产品感到满意。请您在使用前务必认真阅读《使用安装说明书》,并遵从说明书要求进行使用。本说明书的操作说明对于维持产品的良好工作状况十分重要,若因使用不当造成产品故障,您将失去免费保修的权利,任何直接或间接的免费保修申请将不会被公司售后服务中心所接受。同时我们建议您在保修期内及保修期后需要维修时请致电方太当地授权的服务中心,这对您和我们都是非常重要的。



目录

|           |       |    |
|-----------|-------|----|
| 警告和安全说明   |       | 1  |
| 使用        | 规格与结构 | 4  |
|           | 点火操作  | 5  |
|           | 火力调整  | 5  |
| 清洁和保养     |       | 7  |
| 一般故障和故障排除 |       | 8  |
| 安装        | 装箱清单  | 9  |
|           | 安装方法  | 10 |



警告和安全说明

特别版本：  
请严格遵守用户手册要求，正确使用本灶具。因使用不当而造成财产损失和人身伤害时，方太公司不承担责任。  
⚠警告：如果忽略以下内容并使用不当，则可能会对人员产生危险，导致严重的人身伤害或火灾。

严格执行

|  |  |
|--|--|
|  | 燃气灶仅可用于家用厨房。请勿安装在浴室、卧室、地下室或易燃、易爆、腐蚀性场所。  |
|  | 对于燃气灶的安装、改装、移动、拆卸、修理等工作，应由经认证公司授权的安装工安装，并由专业人员进行操作。                            |
|  | 为防止窒息隐患，在安装后和使用之前请检查是否有异味。日常使用，请保持房间通风。  |
|  | 如果出现燃气泄漏，请尽快关闭开关旋钮和灶具隔离气阀，打开窗户，联系方太服务中心维修。此时，请勿触摸电源开关或进行点火，也不可使用手机、固定电话等，以防爆炸。 |
|  | 请勿让燃气灶处于大风干扰环境下燃烧，因为它会影响正常燃烧，甚至无法正常点火燃烧。                                       |
|  | 如果因油温过高而发生燃烧，请用锅盖（请勿用水）等大型金属物品覆盖火源，并关闭总气阀。                                     |

|  |   |
|--|---|
|  | 请定期更换耐油橡胶挠性软管。建议挠性软管使用时间不得超过一年半。请勿将挠性软管放在炉顶或炉顶面板附近。 |
|  | 燃气灶工作时，请勿外出或就寝。在使用完毕之后，请关闭旋钮和总气阀，并在就寝或外出前反复检查是否已关闭。 |
|  | 必须将废旧电池放入指定的废旧电池回收箱或可回收垃圾桶中。                        |
|  | 如果长时间不使用燃气灶或者移动燃气灶，请清洁燃气灶，拆除胶管并包住软管接头。              |
|  | 请将产品的塑料包装远离婴幼儿放置，以避免窒息等危险。                          |


禁止

|  |   |
|--|---|
|  | 请勿改装此灶具。  |
|  | 使用前请确认燃气类型与铭牌标贴指示一致。禁止转换为其他燃气类型，特别是生产一氧化碳的人造气。                    |
|  | 本燃气灶可用于加热烹饪，不可用于烘干毛巾、衣服等使用。如果本灶具安装在轮船上或大篷车中，则禁止用作空间加热器。           |
|  | 未将锅置于燃气灶上或锅里无食物时，请勿打开燃气灶加热。它可能会损坏灶具上方的抽油烟机，甚至会点燃抽油烟机内部的油脂，造成火灾事故。 |



|   |  |
|---|--|
|    | 请勿突然接触关火的灶具，以免烫伤。                      |
|    | 请勿在灶具存放抽屉或本电器附近使用或存放易燃物品。              |
|    | 请勿将酸性或碱性物质放在灶台上（醋、柠檬汁等）。               |
|    | 请勿在炒锅和锅架之间放置任何东西，如火焰调节器、石棉垫，否则会严重损坏灶具。 |
|    | 请勿移除锅架或用锅架将燃烧器围起来，因为此举会将热量集中并转移到面板上。   |
|   | 请勿使用大锅或放置重物，因为它们会使锅架弯曲或使火焰偏转到面板上。      |
|  | 将炒锅放在该燃烧器中央，这样它可稳定受热，请勿悬在灶具上。          |
|  | 仅可使用由灶具制造商提供或推荐的炒锅架。                   |

- a.在安装之前，请确保本地配气条件（气体的性质和气压）与设备的调整是兼容的。
- b.标签（或铭牌）上说明了本设备的调整条件。
- c.本设备未连接到燃烧产物排放装置。按现行安装规程安装连接,应特别注意通风的相关要求。





方太产品中使用的玻璃为钢化玻璃，玻璃的强化机制决定了这种钢化玻璃具有极小的自爆概率。一旦因使用不当而发生自爆，我们承诺免费更换钢化玻璃。


使用

规格与结构

GHG78211/GHG78215

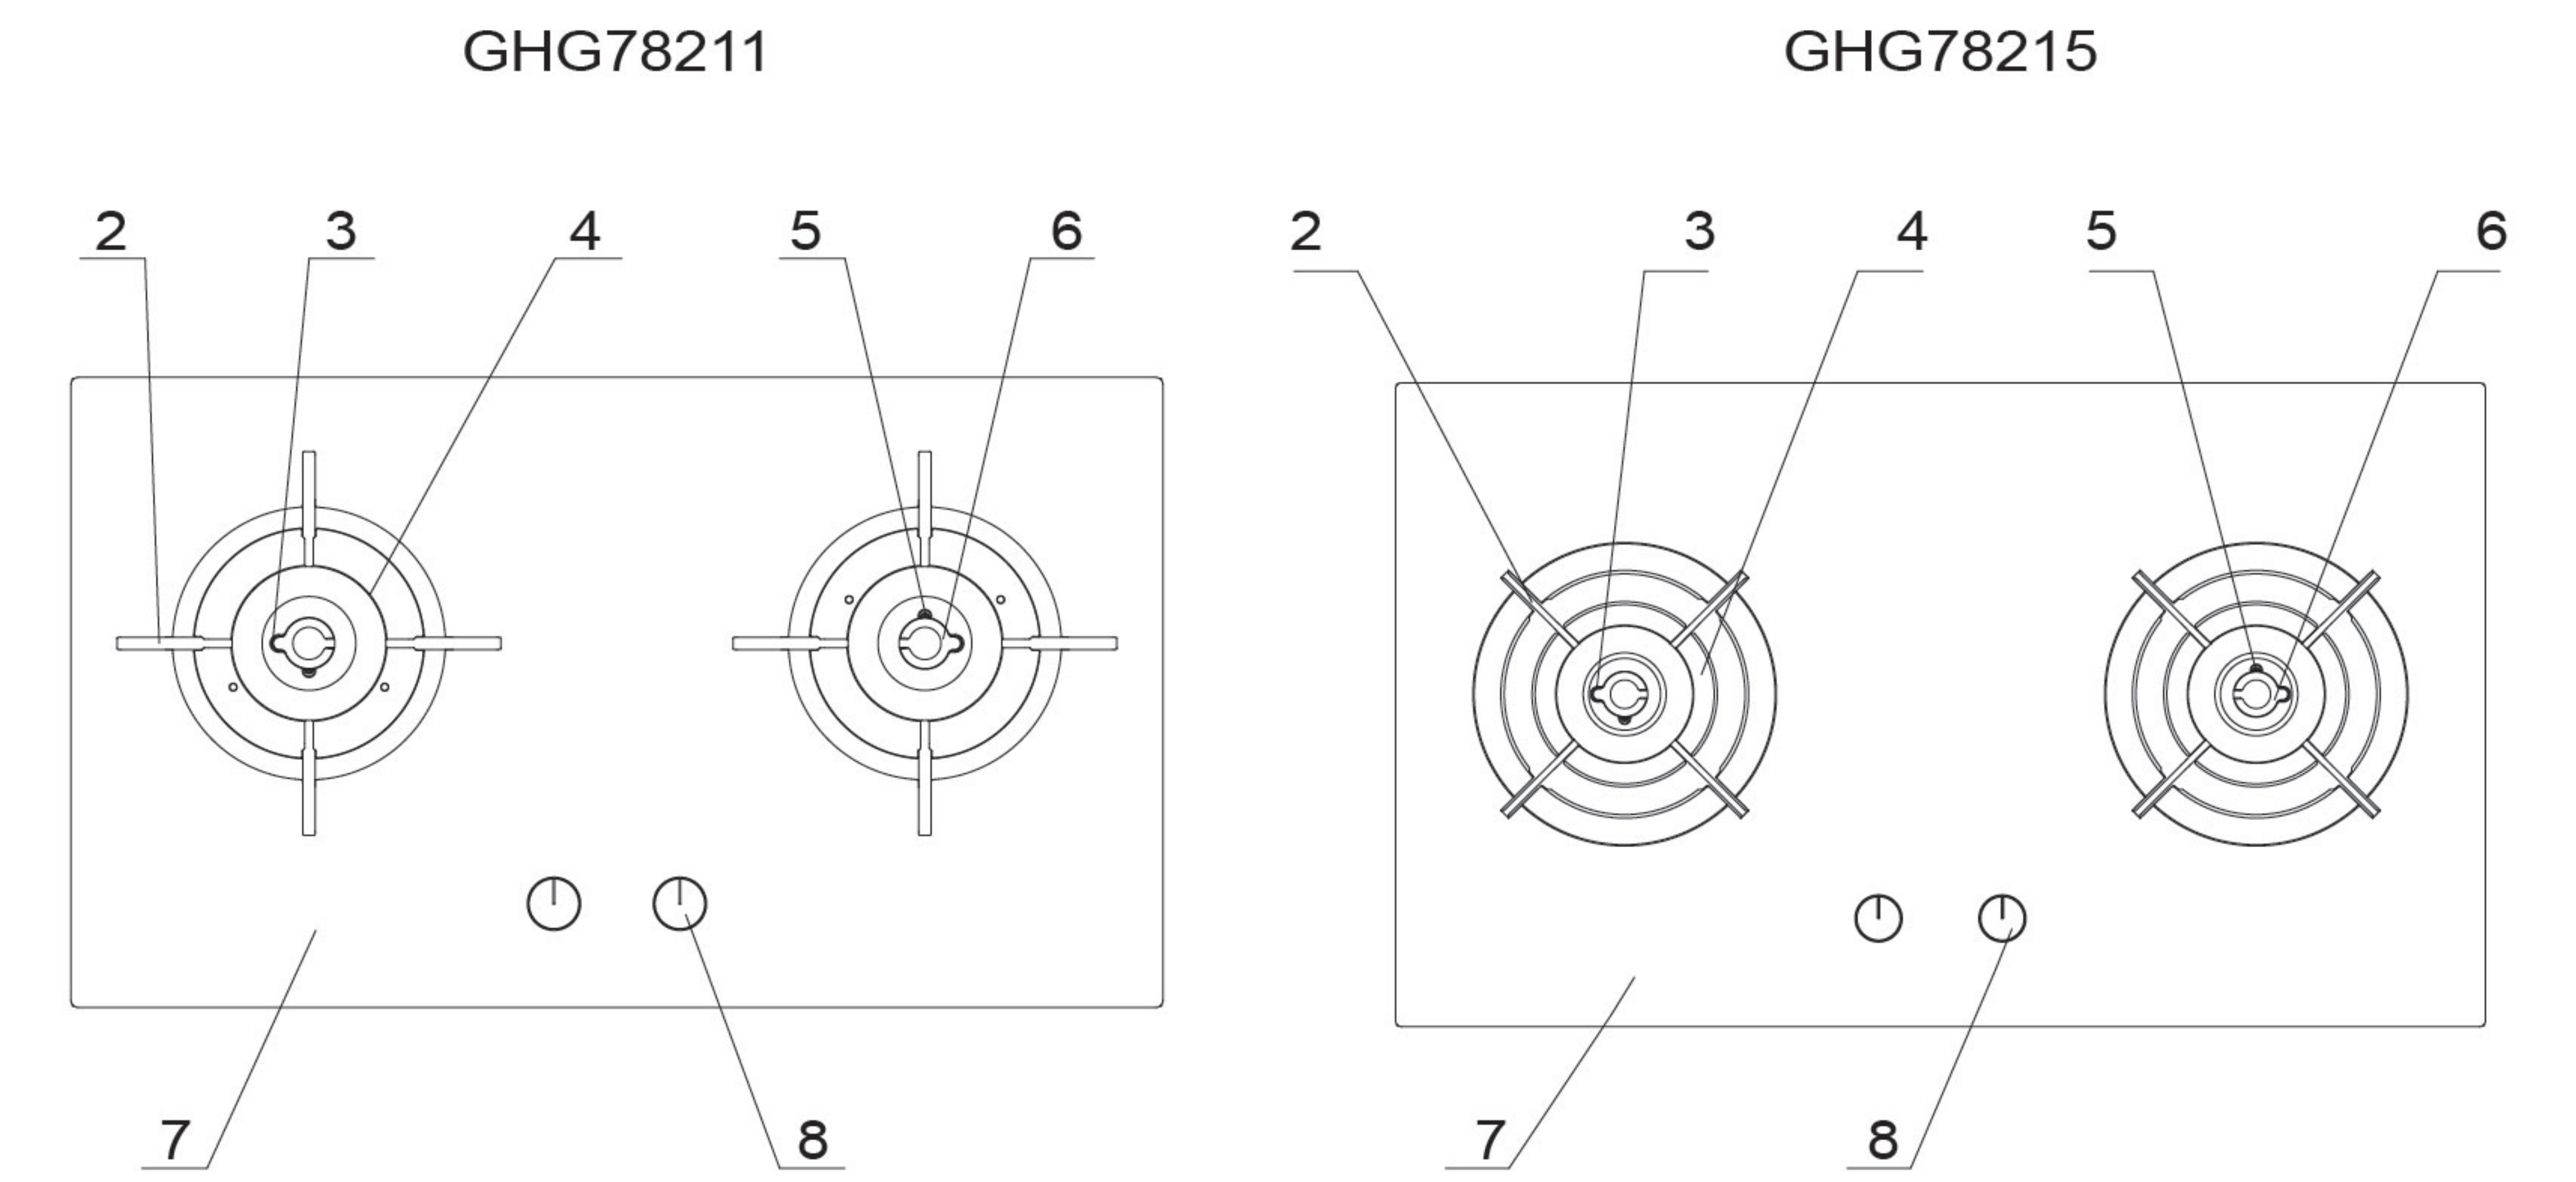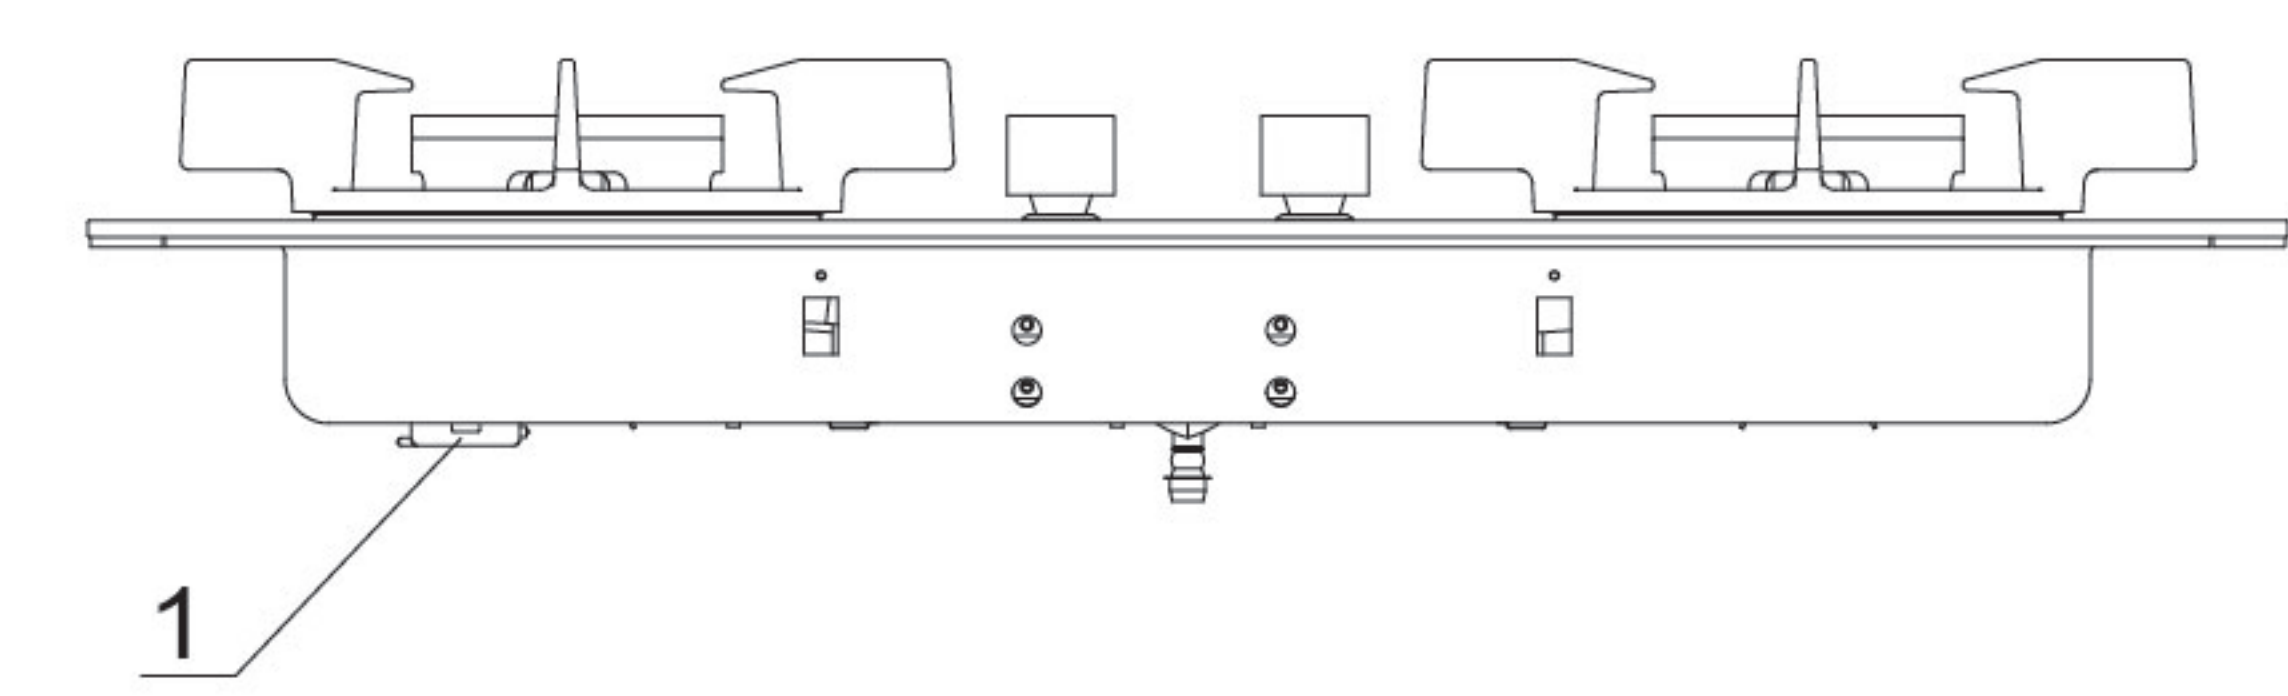

- 1.电池盒
- 2.锅支架
- 3.点火针
- 4.外环火盖
- 5.热电偶
- 6.内环火盖
- 7.面板
- 8.旋钮



a.用植物油和动物油烹调时，注意锅（炒锅）太热会引起火灾危险。用此类油烹调时，请勿把食物放进锅（炒锅）烹调后就离开灶具。

b.灶具使用过程中会升温，请远离易升温物体。诸如刀、叉、勺、盖等金属物品，不应将其放在灶具上，防止热传导。



### 点火操作

方太燃气灶旋钮操作方法请参考图1。


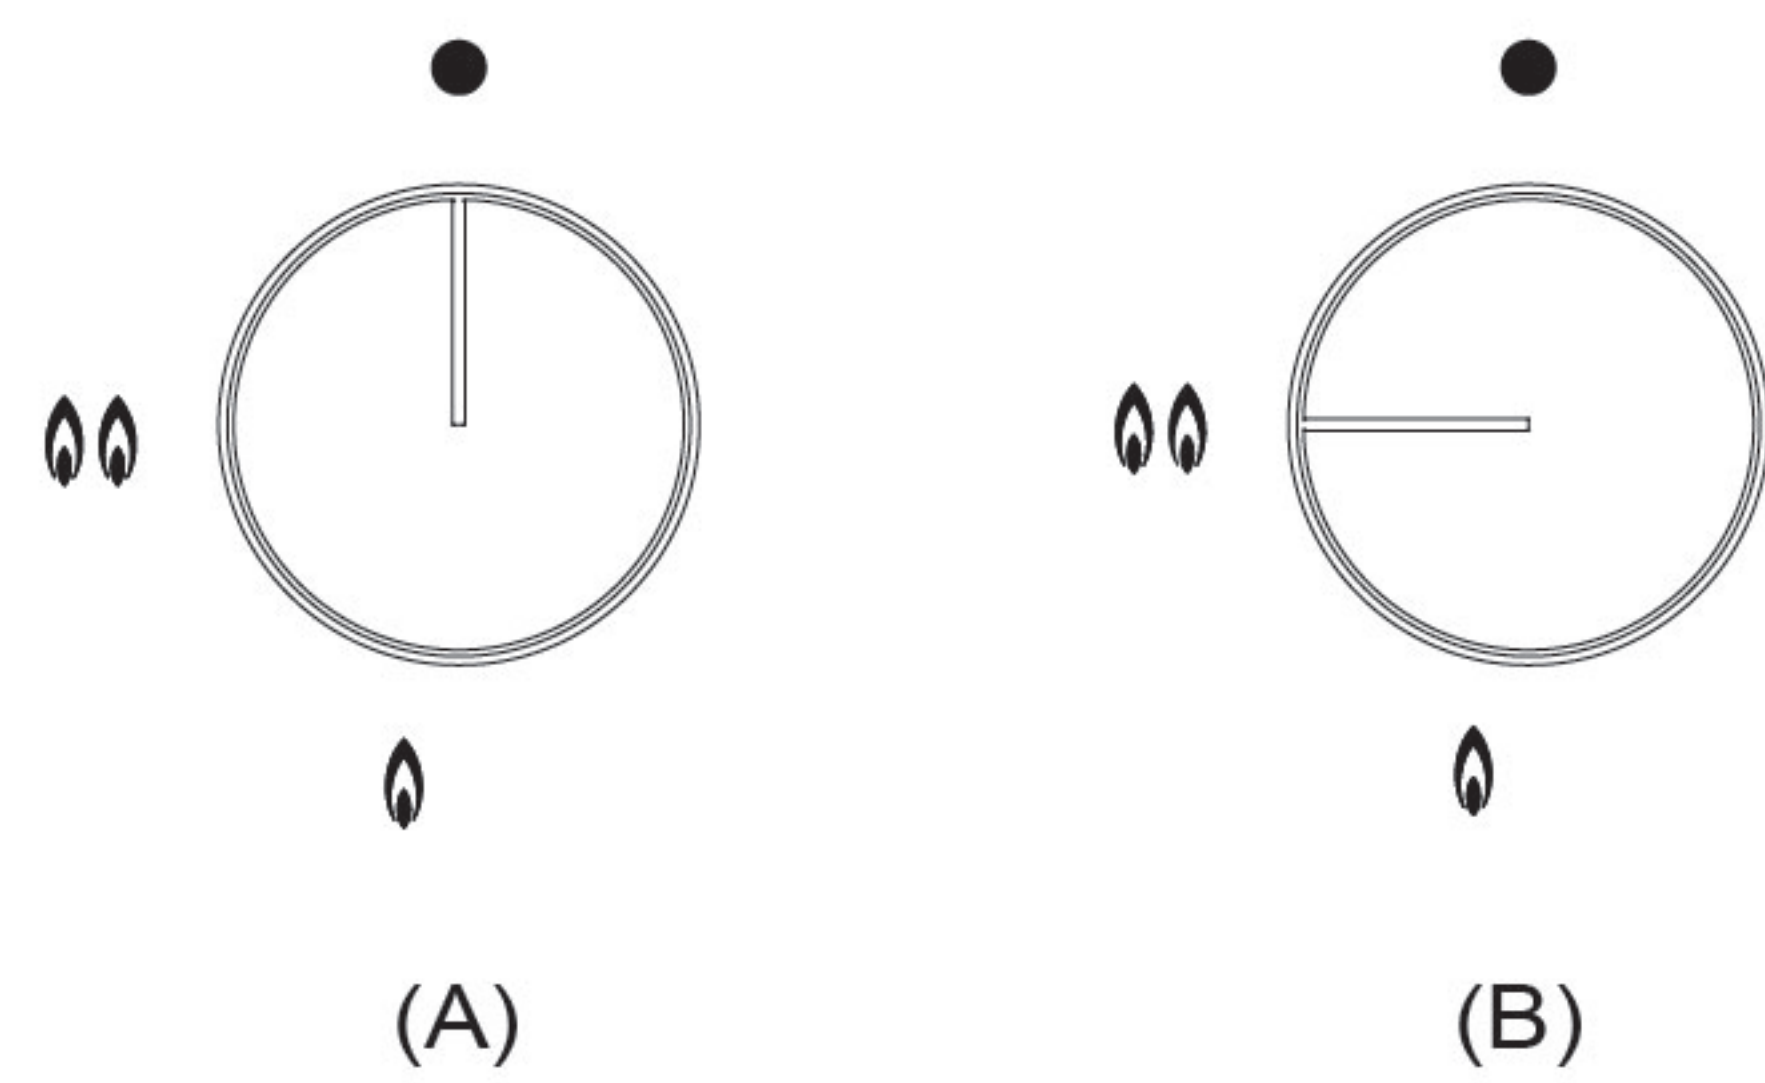


图1

首先，检查灶具旋钮是否在“●”位置（参考图1A），然后打开煤气开关，按下灶具开关旋钮到不能按下为止，逆时针旋转90°（参考图1B），确认点火已点燃，如您的手离开旋钮后火焰熄灭，请将旋钮调至“●”位置，并重复上述操作。

### 火力调整

标记1

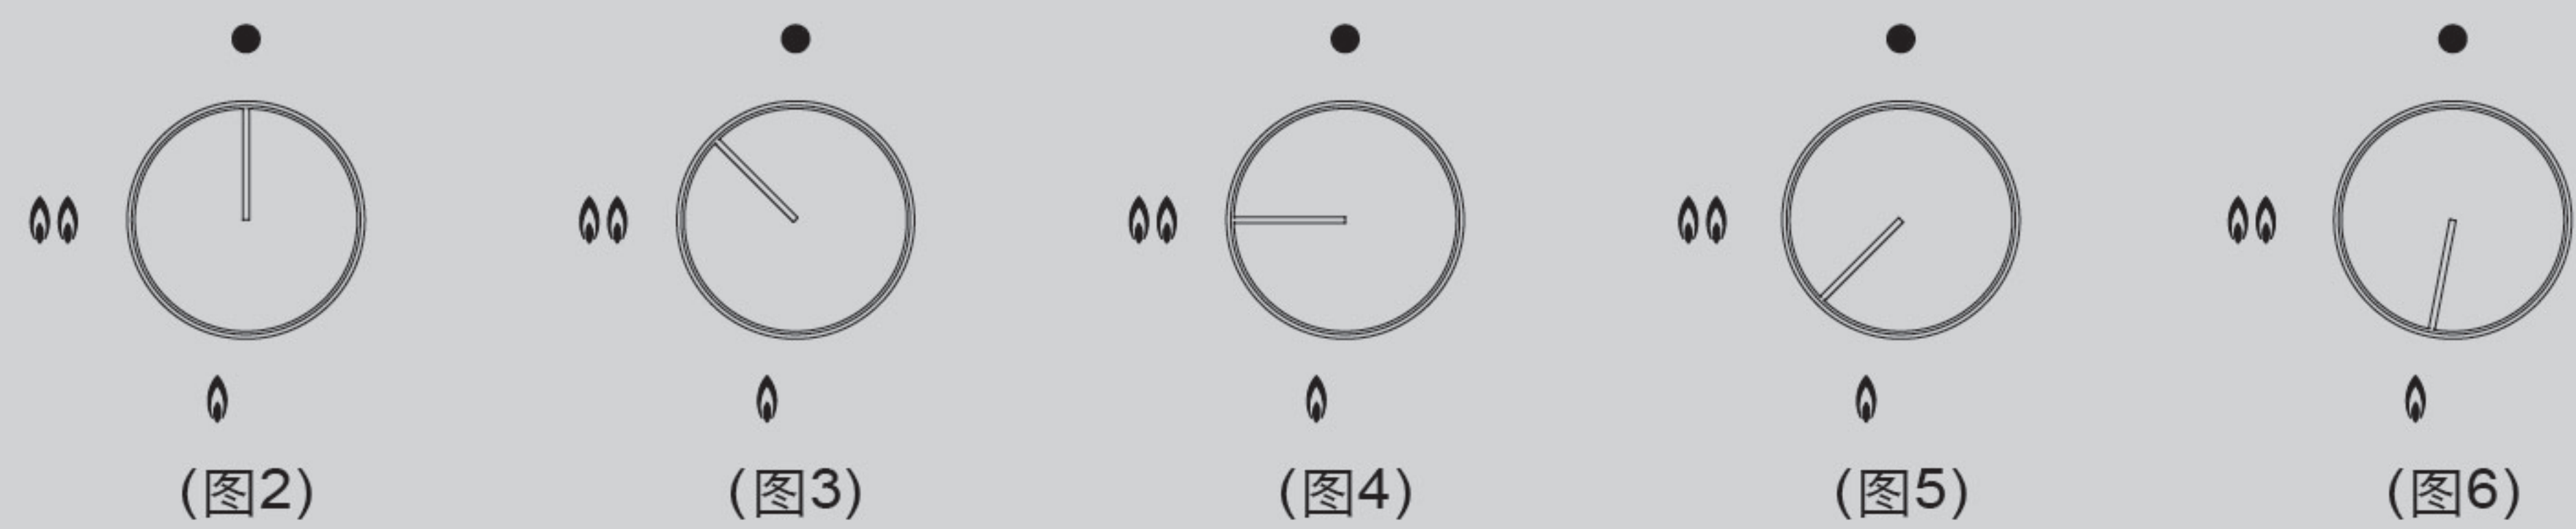

点火后，可按照图3、4、5、6的步骤旋转灶具旋钮，您可以根据需要调节火力大小。如果您需要停止燃气灶的工作，请顺时针旋转旋钮到“●”，火就会熄灭（参考图2），然后关闭总气阀。



- 熄火保护装置能避免因风吹动或汤汁洒出导致火焰熄灭的煤气泄漏。但是无法避免因其他原因导致的煤气泄漏
- 所有的方太燃气灶都有熄火保护装置。点燃时按下旋钮，逆时针旋转转向“●”位置（参考图4）。烹饪时，如果不小心被溢出的食物或风熄灭了火焰，该装置会自动关闭煤气阀门，防止煤气泄漏。
- 在燃烧器火焰意外熄灭的情况下，关闭燃烧器，至少在1分钟内不要试图重新点燃燃烧器。

### 炒锅的选择

请选择合适的炒锅，您可享受更好的烹饪体验。

- 请确保所用炒锅的直径等于或大于烹调面积。
- 为避免摩擦表面，请使用干净且底部光滑的炒锅。
- 为了达到最佳的烹饪效果，搪瓷钢锅的底部应为2-3mm厚，不锈钢填充锅的底部应为4-6mm厚。



| 锅支架   | 最小    | 最大    |
|-------|-------|-------|
| 平底锅支架 | 120mm | 200mm |
| 炒锅支架  | 200mm | 270mm |


只有到使用辅助锅支架时，燃气灶才可以使用最小直径120mm的平底锅。



使用燃气灶具时，安装燃气灶具的房间内会产生热量、水分和燃烧产物。确保厨房通风良好，尤其是在使用灶具时：保持自然通风孔打开或安装机械通风装置（机械抽油烟机）。  
长时间密集使用本灶具时，可能需要额外进行通风，例如打开窗户，或更有效的通风，例如增加现有的机械通风水平。

### 辅助锅支架使用方法


为保证小锅可以放在在锅支架上，本产品配有一个辅助锅支架，请参考右图安装方法安装。


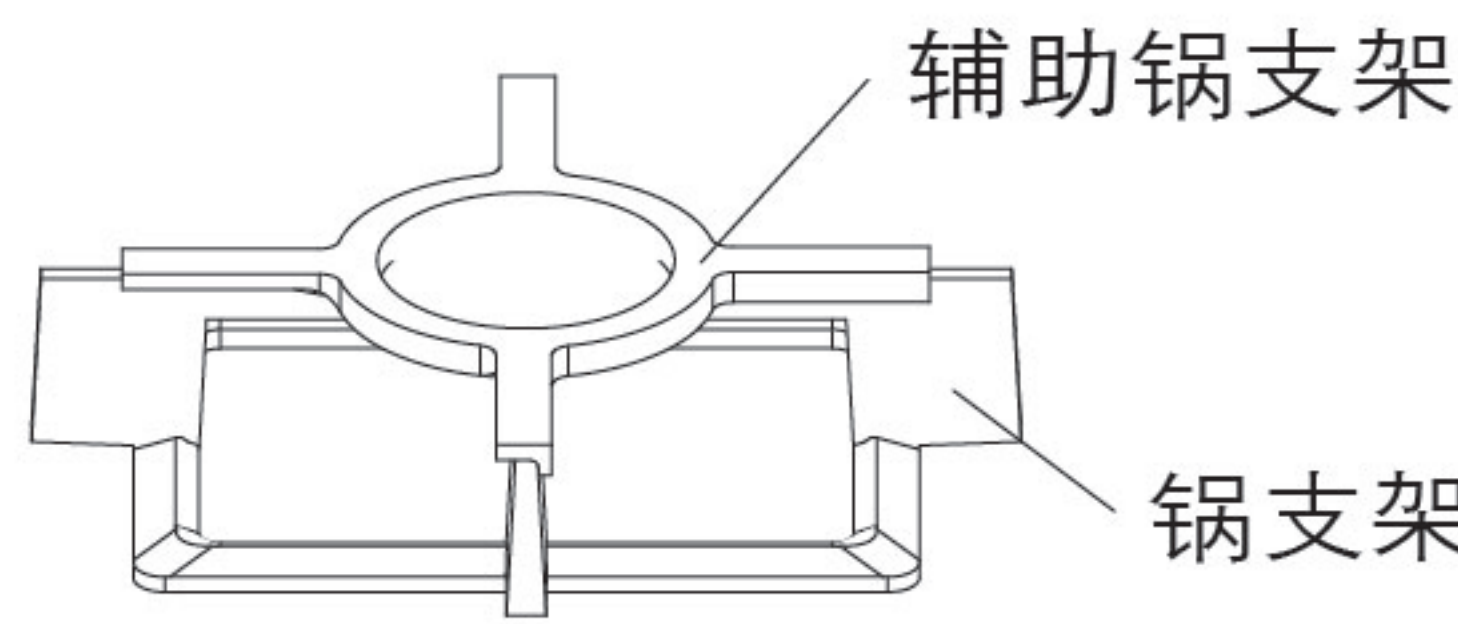




清洁和保养

| ⚠ 注意  |   |   |
|---|---|---|
|    |    |  |
| 在清洁和维护灶具之前，关闭总气阀，等待其彻底冷却。   | 当您维护以下各项时，请确保勿要拆卸安全装置或气管部件。   | 如有异常，请与方太服务中心联系。  |
| ■ 检查  |   |   |
|    |    | 燃气连接胶管必须可靠，不得有裂纹；一旦发现漏气，请立即停止使用，并及时更换。  |
|   |   | 请勿将易燃物堆放在燃气灶周围。   |
|  |  | 应正确放置燃烧器、火焰帽和炒锅架。   |
|  |  | 经常使用肥皂水检查灶具与燃气管接口位置，避免燃气泄漏。   |

 请勿用钢丝球等锋利材料擦拭不锈钢板。它将大大缩短燃气灶的使用寿命。
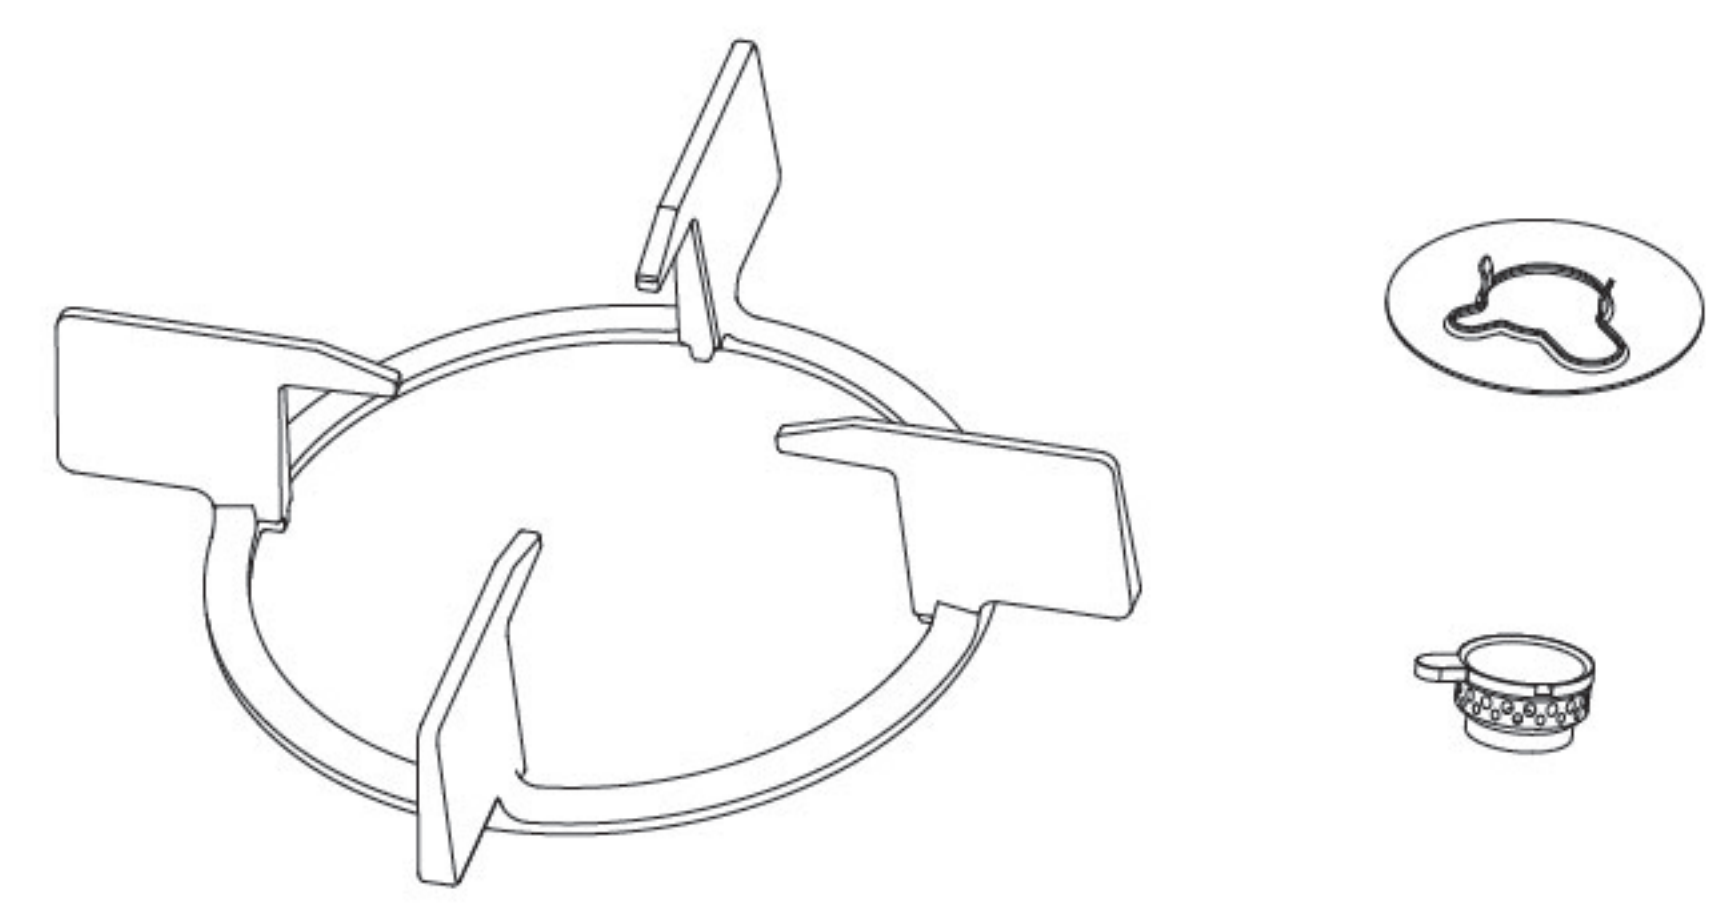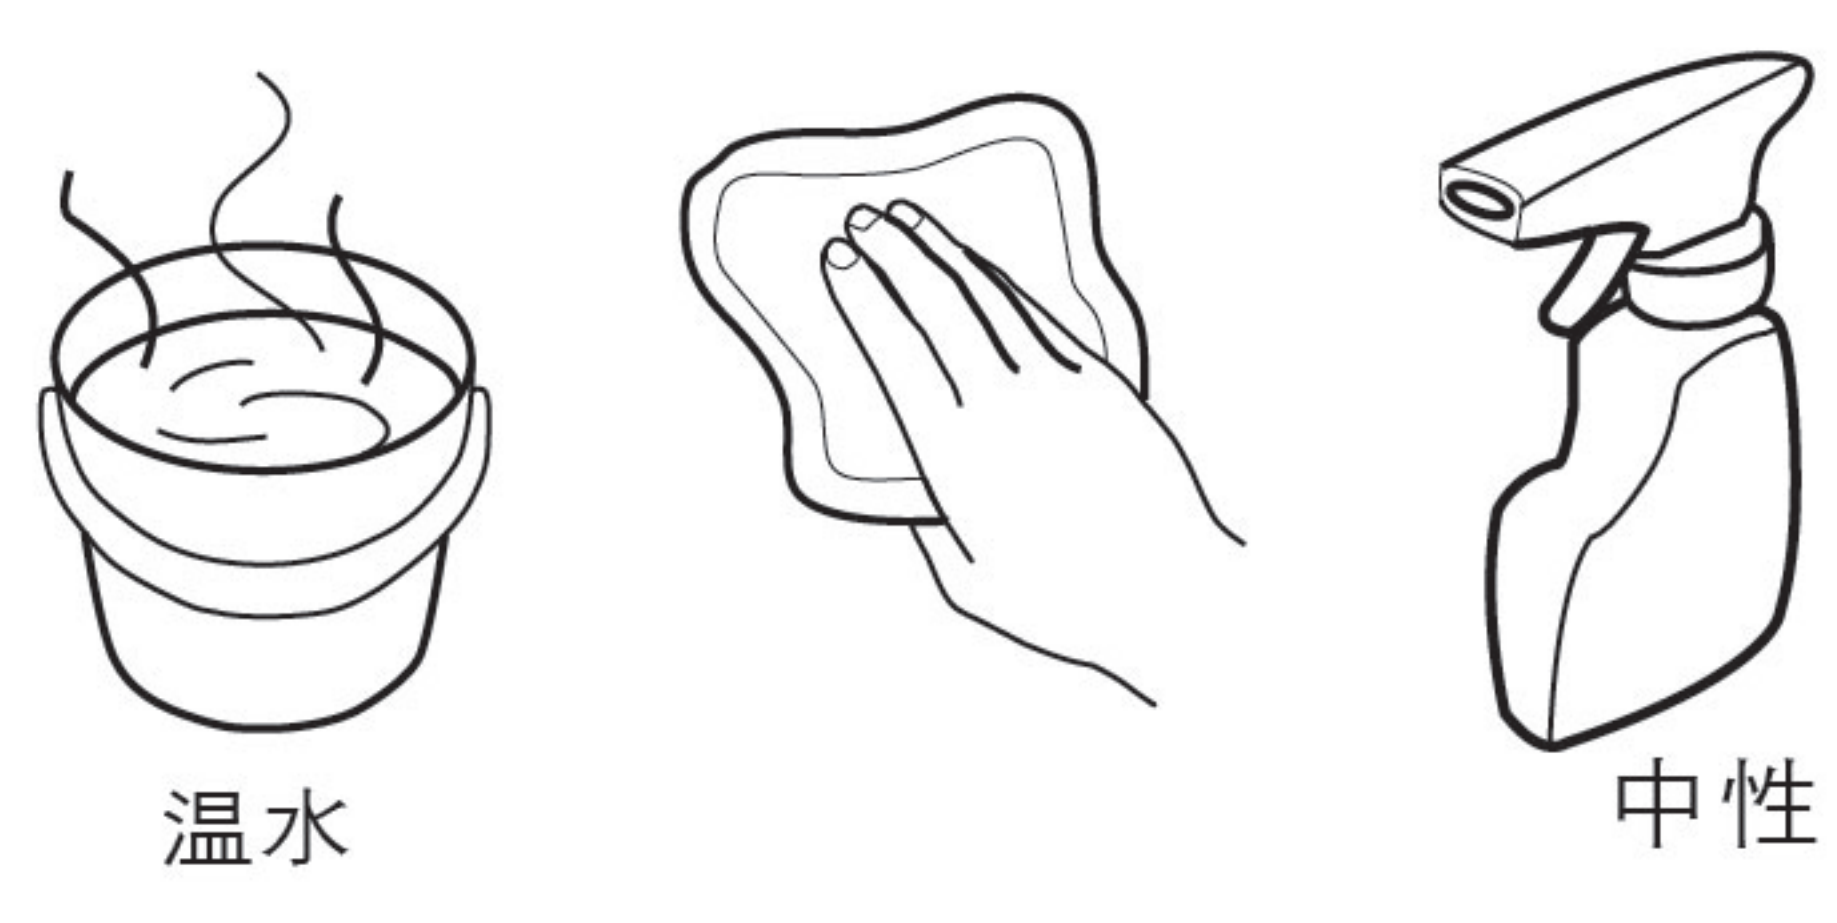
| ■ 维护  |  |
|---|--|
|  |  |
| 1.清洁前，请取下锅架和火焰帽。  | 2.必须经常用温水和中性清洁剂清洗铜火焰帽等燃烧器活动部件。取下炉头，待其晾干，然后再使用灶具。                                     |


| ■ 维护  |   |
|---|---|
|  |  |
| 3.请使用无腐蚀性的中性清洁剂清洁不锈钢面板和燃烧器。切勿使用氯基清洁剂清洁玻璃。   | 4.确保火孔里无碳，也未受到堵塞。   |
|  |  |
| 5.请勿使用颗粒状清洁剂、清洁球、刀等尖锐物品清洁燃烧器内残留的顽固污渍。否则，会使产品产生故障或磨损装配面，进而影响灶具寿命。                    | 6.清洁后，将其充分干燥并正确进行安装。  |

一般故障和故障排除

| 问题   | 问题的原因               | 如何解决   |
|------|---------------------|--|
| 打不着火 | 忘记打开总气阀             | 先关闭旋钮，再打开总气阀   |
|      | 空气混入燃气管             | 反复打火，直到空气完全排出  |
|      | 胶管弯曲或压扁             | 打开或更换橡胶管   |
|      | 点火针及绝缘点脏污潮湿         | 用干布擦干净   |
|      | 安全阀未开               | 按下并转动灶具旋钮至“  ”方向，确保灶具点着火并持续按压3至4秒 |
|      | 电池没用了；电池接触不良；或者电池装反 | 更换电池或重新安装电池  |
|      | 点火装置有问题或点火针不在正确位置   | 请联系方太服务人员  |



| 问题         | 问题的原因             | 如何解决                  |
|------------|-------------------|-----------------------|
| 燃气泄漏       | 胶管破裂或断裂           | 请联系方太服务人员更换胶管         |
|            | 胶管接头与橡胶管或其它胶管未连接好 | 正确更换胶管，并检查胶管与胶管接头的气密性 |
| 火焰不稳定      | 燃气是否用完            | 换一瓶新的然气               |
| 火焰过长或过短，黄焰 | 火盖安装不正确，或者火孔被堵塞   | 清洁火孔，确保火盖安装正确         |
| 火焰意外变红     | 在一定气候条件下，燃气湿度较大   | 火焰变红是由于水里含钙，无需担心      |





如果排除上述故障后，燃气灶仍不能正常工作，请联系方太服务中心。

安装


装箱清单

|   |      |   |   |               |   |
|---|------|---|---|---------------|---|
|  | 完整灶具 | 1 |  | D电池（建议使用碱性电池） | 1 |
|  | 用户手册 | 1 |  | 胶管扣           | 2 |
|  | 保修卡  | 1 |  | 螺钉            | 4 |

安装方法

| ⚠ 注意事项  |   |
|---|---|
| <br>严格执行 | 请不要在通风不良的厨房设备上安装燃气灶。 请确保与燃气灶具相连的燃气管不能碰到橱柜中的任何活动部件。    |
| <br>严格执行 | 安装前，请检查您家庭使用的燃气类型是否与燃气灶铭牌上印刷的燃气类型相同。如有疑问，请尽快与当地经销商联系。 |


- 1.灶具应安装在坚固耐用的水平台面上，台面的开孔尺寸参照安装图7，确保与可燃物的距离必须大于150mm，与非可燃物的距离必须大于50mm。
- 2.若灶具上方有除烟机以外的其他悬挂物，则灶面与悬挂物之间应保持至少1000mm。
- 3.请在嵌入式灶具的橱柜正面，位于灶具下部切割15000mm²以上的通风孔（相当于三个直径为80mm的圆形孔），以保持橱柜内外的空气流通，否则会造成泄漏燃气沉积而引起爆炸。  
使用燃气灶具应注意下述两点：  
（1）保持自然通风或安装机械通风装置（如抽油烟机等）。  
（2）长时间使用燃气灶具时需要额外的通风，如打开窗户，或增加现有的机械通风水平。
- 4.电池盒位于灶具底部左侧，请按照电池正负极方向装一节D型电池。
- 5.燃气胶管安装（建议胶管长度为1~2米）：  
（1）将胶管扣套在橡胶软管上，然后将胶管套入灶具进气接头至红色记号，并束紧胶管扣。  
（2）试漏：使用稀薄中性清洁液（皂液）涂在接头部位，将燃气总阀门打开，如果有气泡产生，请关闭阀门，重复工作（1）、（2）步骤，直至无气泡不漏气为止。  
（3）若您使用的气源为气瓶液化石油气（LPG），请选择适合家庭使用的合格减压阀，气压为2800±500Pa。
- 6.稳压阀安装  
安装稳压阀时，要使箭头指向灶具底部方向，并且要安装在能够接触到稳压阀阀盖的位置。

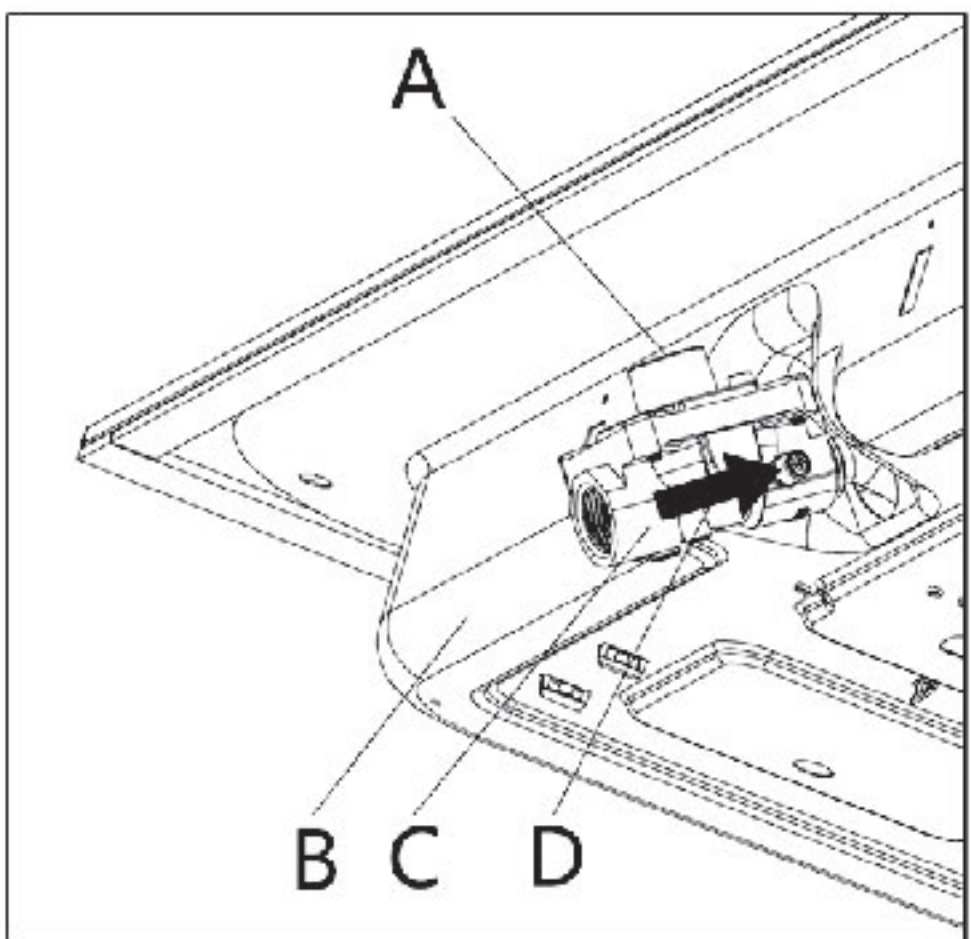

A. 阀盖  
B. 底盘  
C. 稳压阀  
D. 箭头标识。该标识位于稳压阀底部位置。



■ 供气连接

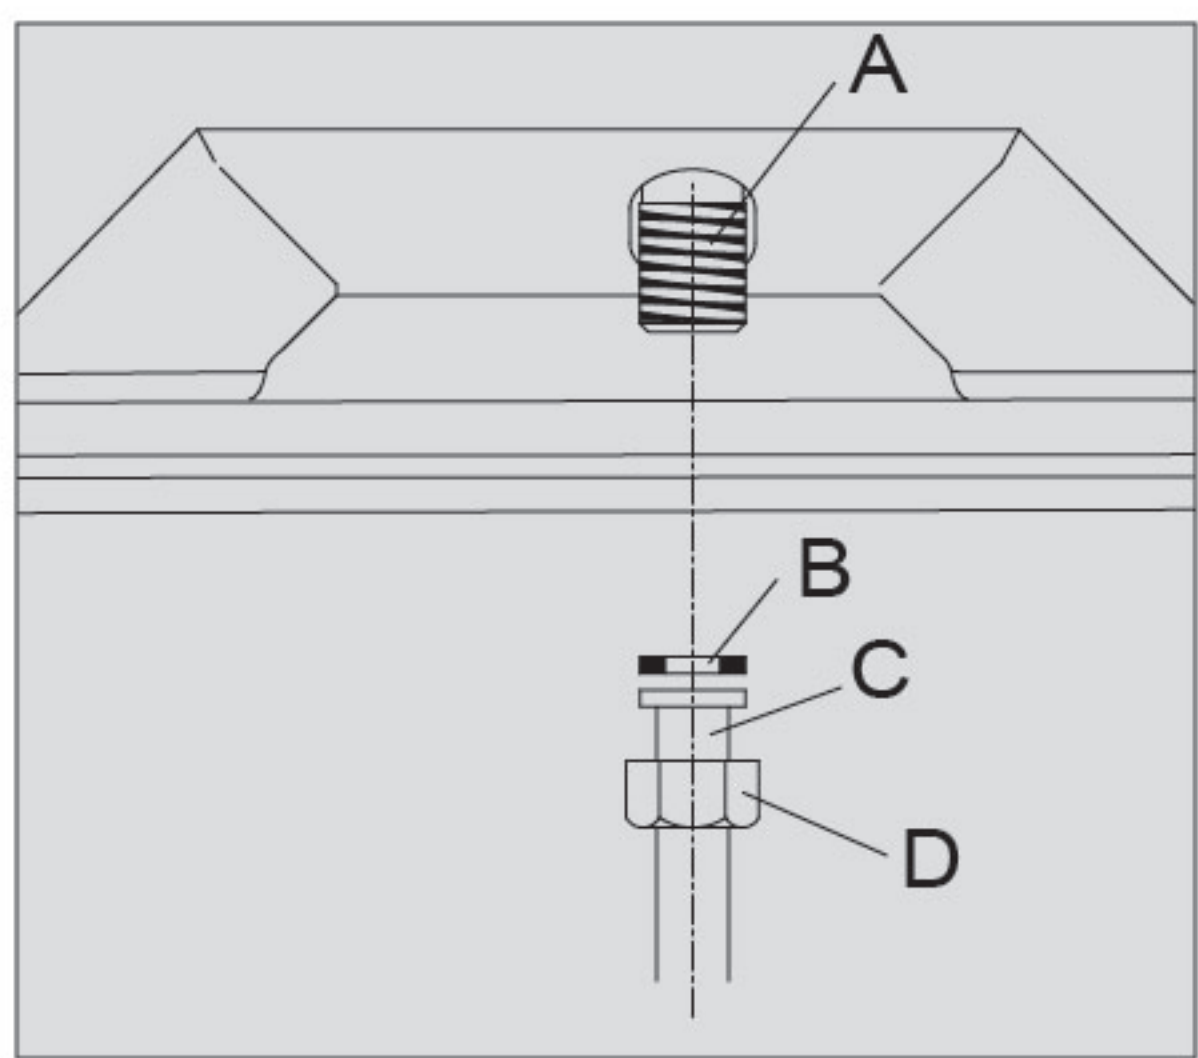


- 为防止燃气泄漏，请使用专业的燃气管道密封材料。
- 用金属软管连接气源和产品，将密封垫B放在接头C的表面，并将螺帽D拧到接头A上。
- 完成所有连接后，确保所有灶具旋钮处于关闭位置，并打开燃气开关阀。
- 在所有接头和连接处使用肥皂水检查燃气泄漏。



如果使用金属软管，请根据金属软管用户手册进行固定。

■ 安装火盖

如需安装燃烧器，请执行以下操作，将定位销A对准定位孔B。请确保火盖安装放到位，不可左右转动。

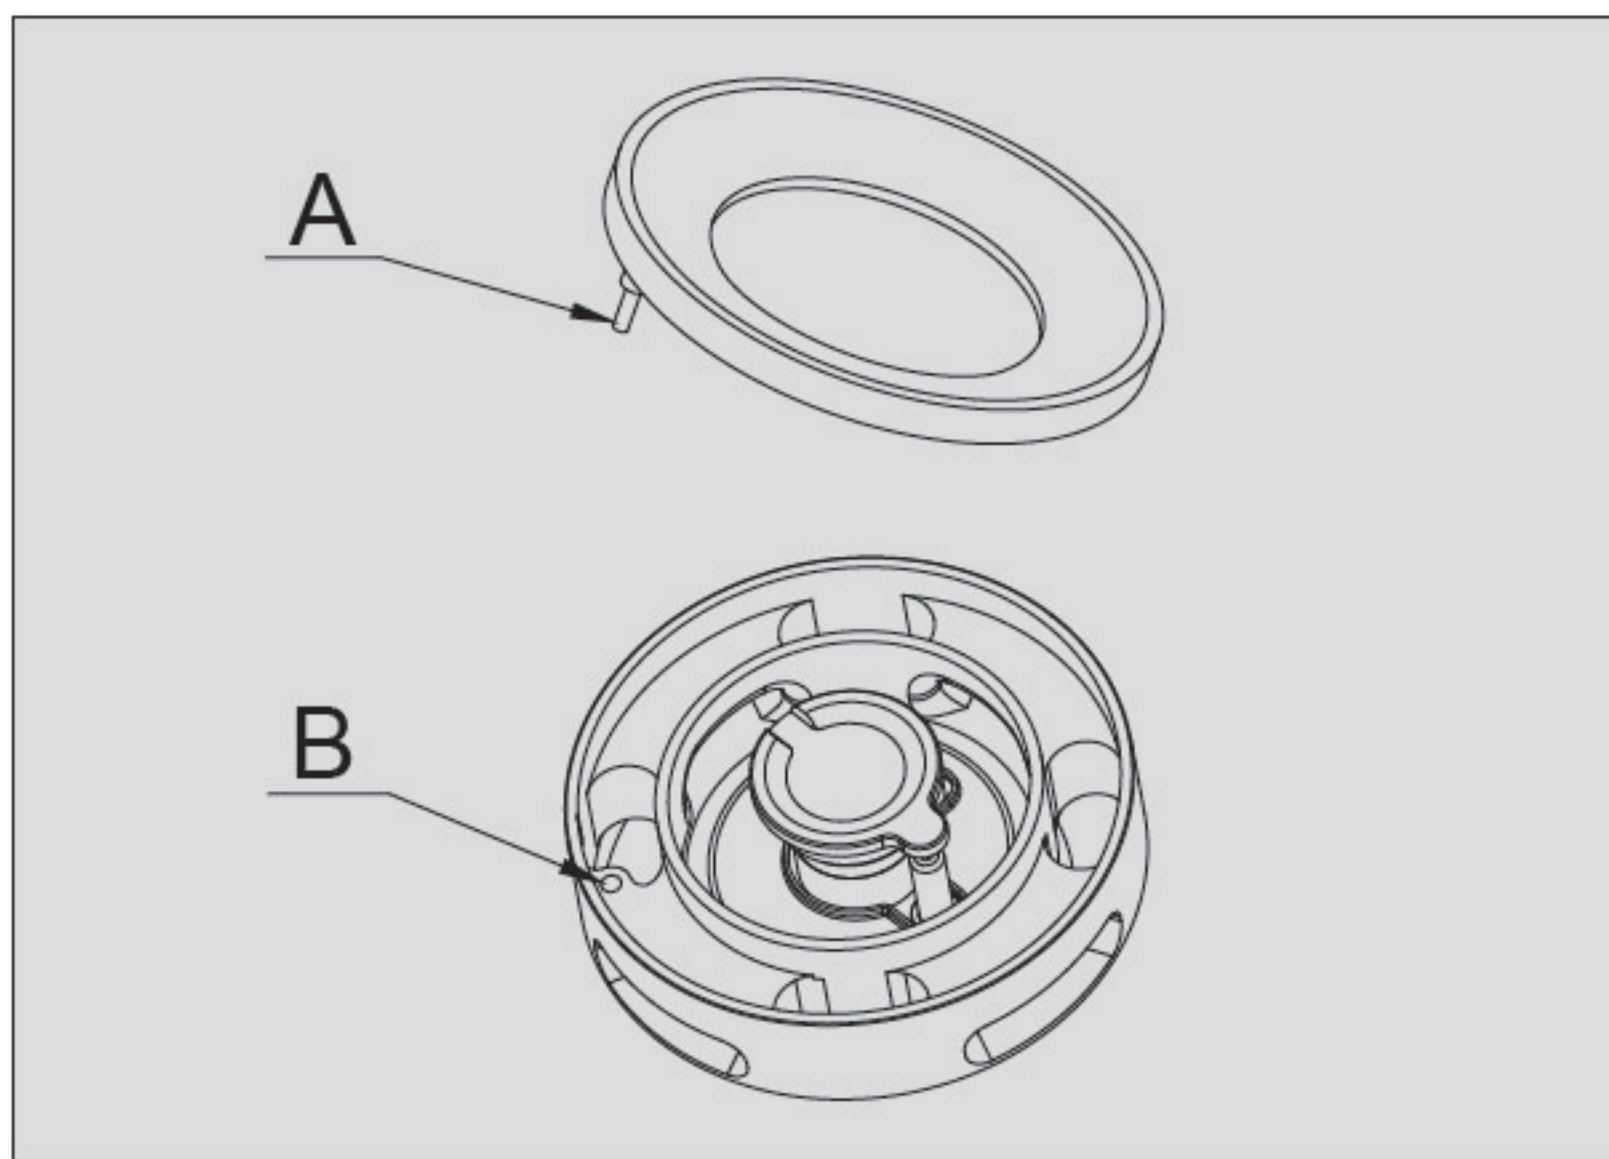

GHG78211/GHG78215

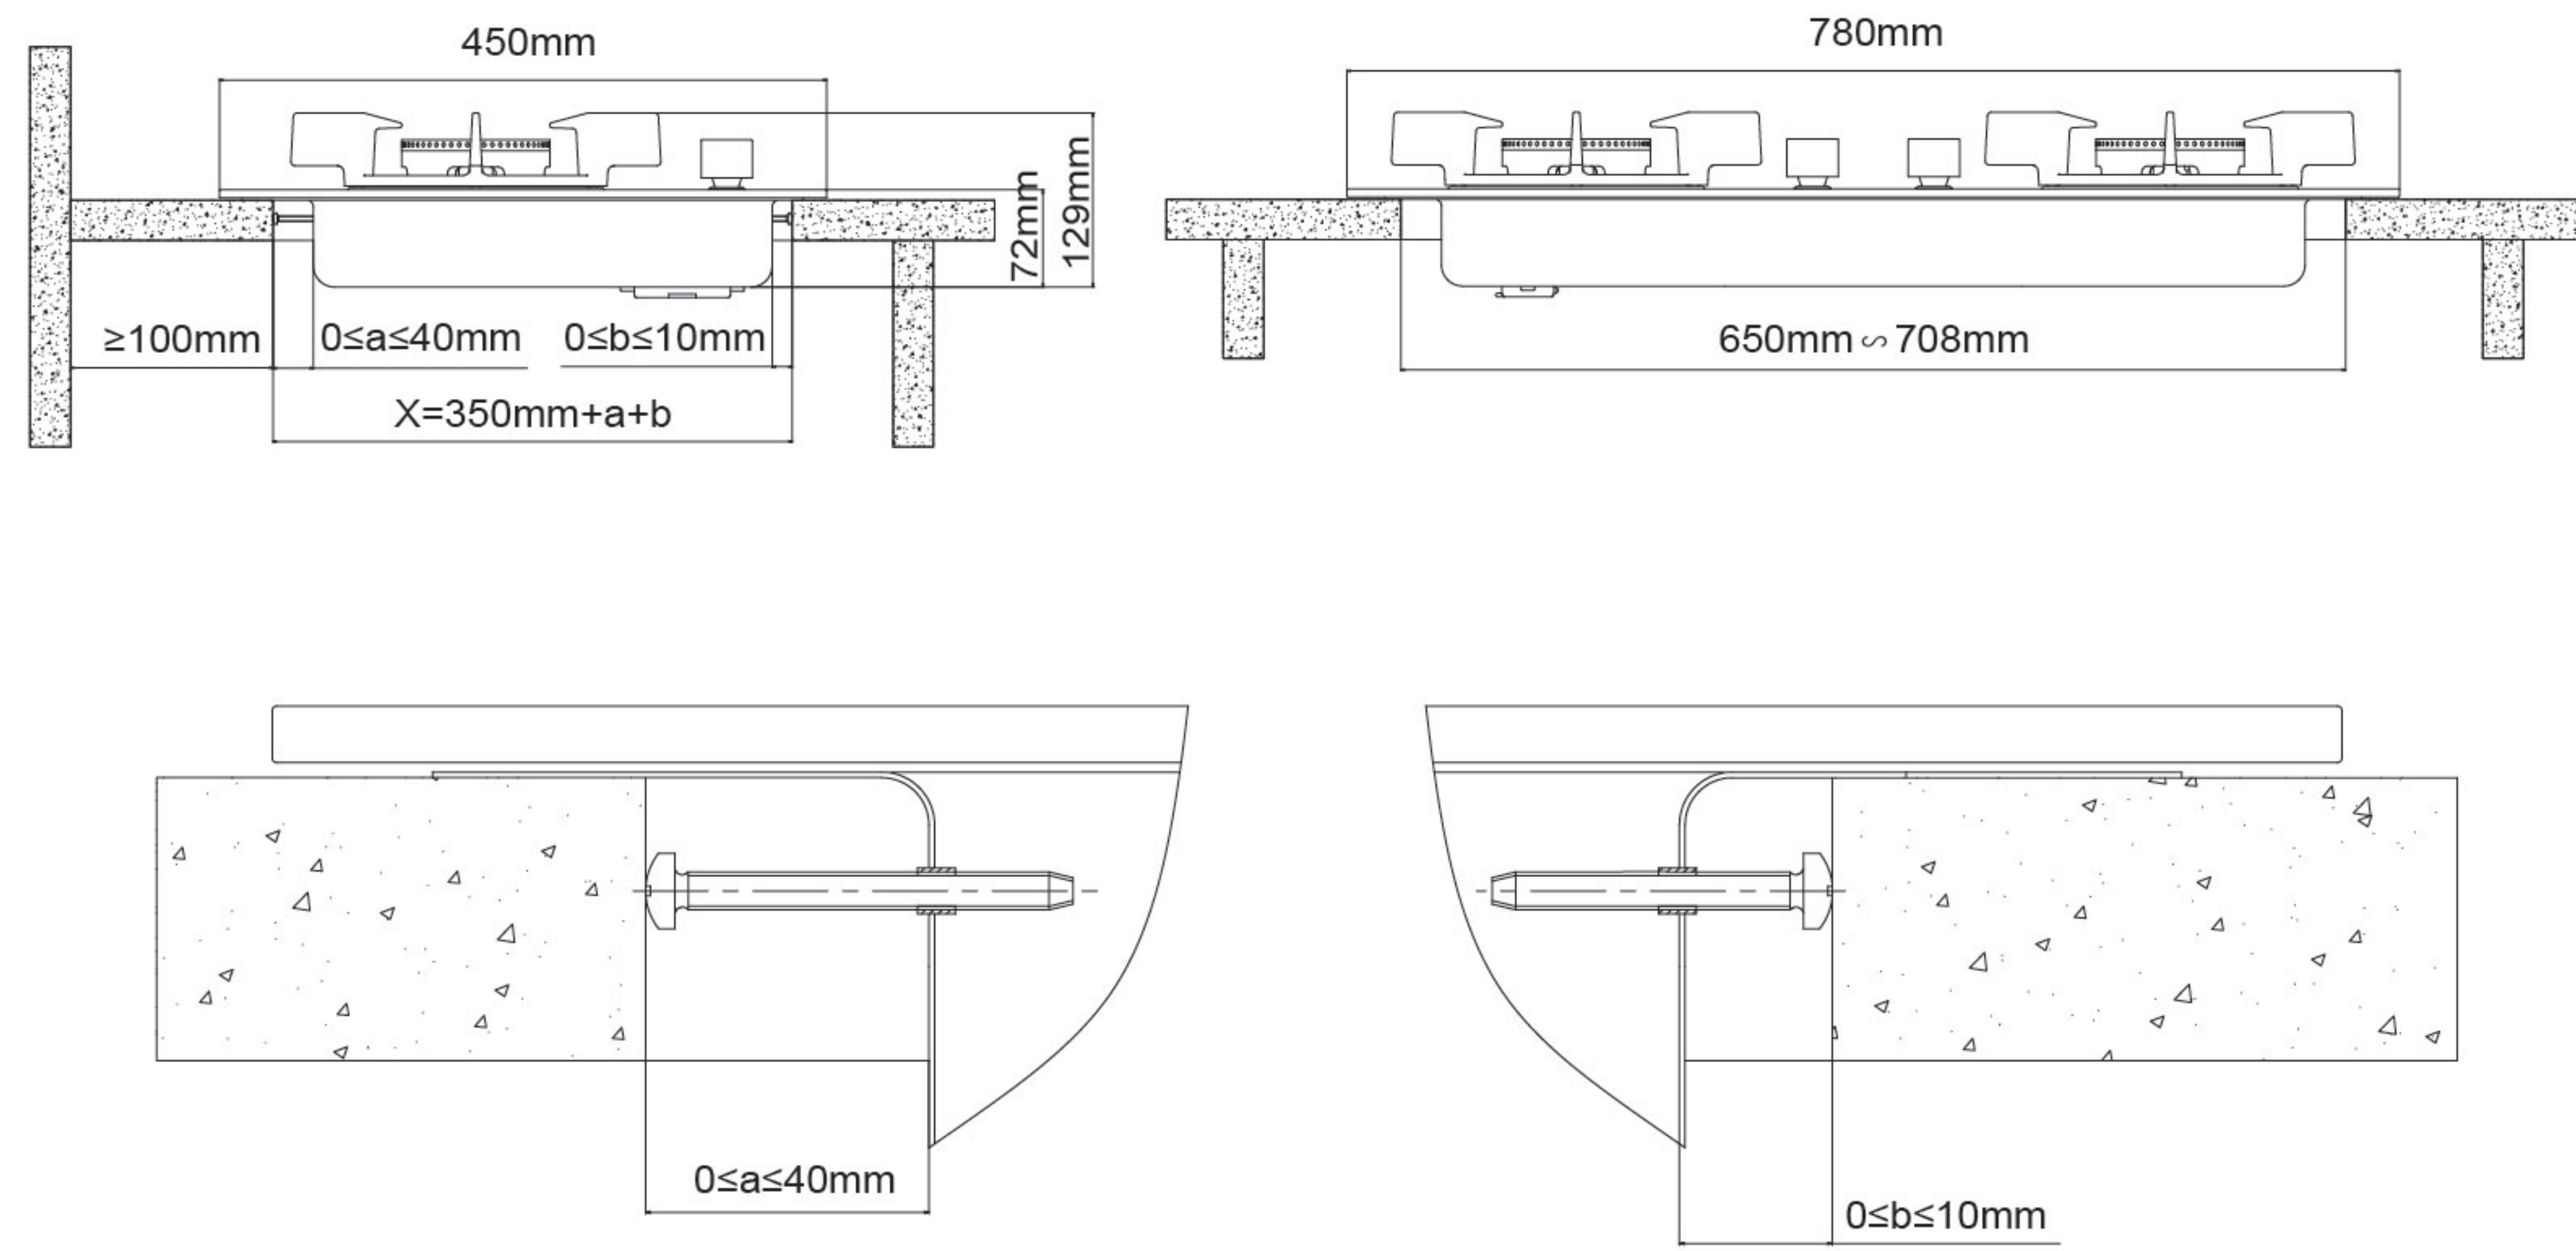




图7

- 注：
- 新安装本产品时，建议开孔尺寸为350\*650。
- 如果进行了更换安装，可接受的开孔范围应不超过400\*708。请按照以下建议进行安装：
- 1、测试实际开孔尺寸X的宽度
  - 2、选择适当大小的a和b
  - 3、安装如图所示

选择适当大小的a和b

| 开孔尺寸X的宽度(mm)  | a(mm) | b(mm) |
|---------------|-------|-------|
| X=350         | 0     | 0     |
| 350 < X < 355 | 5     | 0     |
| 355 ≤ X < 360 | 10    | 0     |
| 360 ≤ X < 365 | 15    | 0     |
| 365 ≤ X < 370 | 20    | 0     |
| 370 ≤ X < 375 | 25    | 0     |
| 375 ≤ X < 380 | 30    | 0     |
| 380 ≤ X < 385 | 35    | 0     |
| 385 ≤ X < 390 | 40    | 0     |
| 390 ≤ X < 395 | 40    | 5     |
| 395 ≤ X < 400 | 40    | 10    |
| X=400         | 44    | 12    |



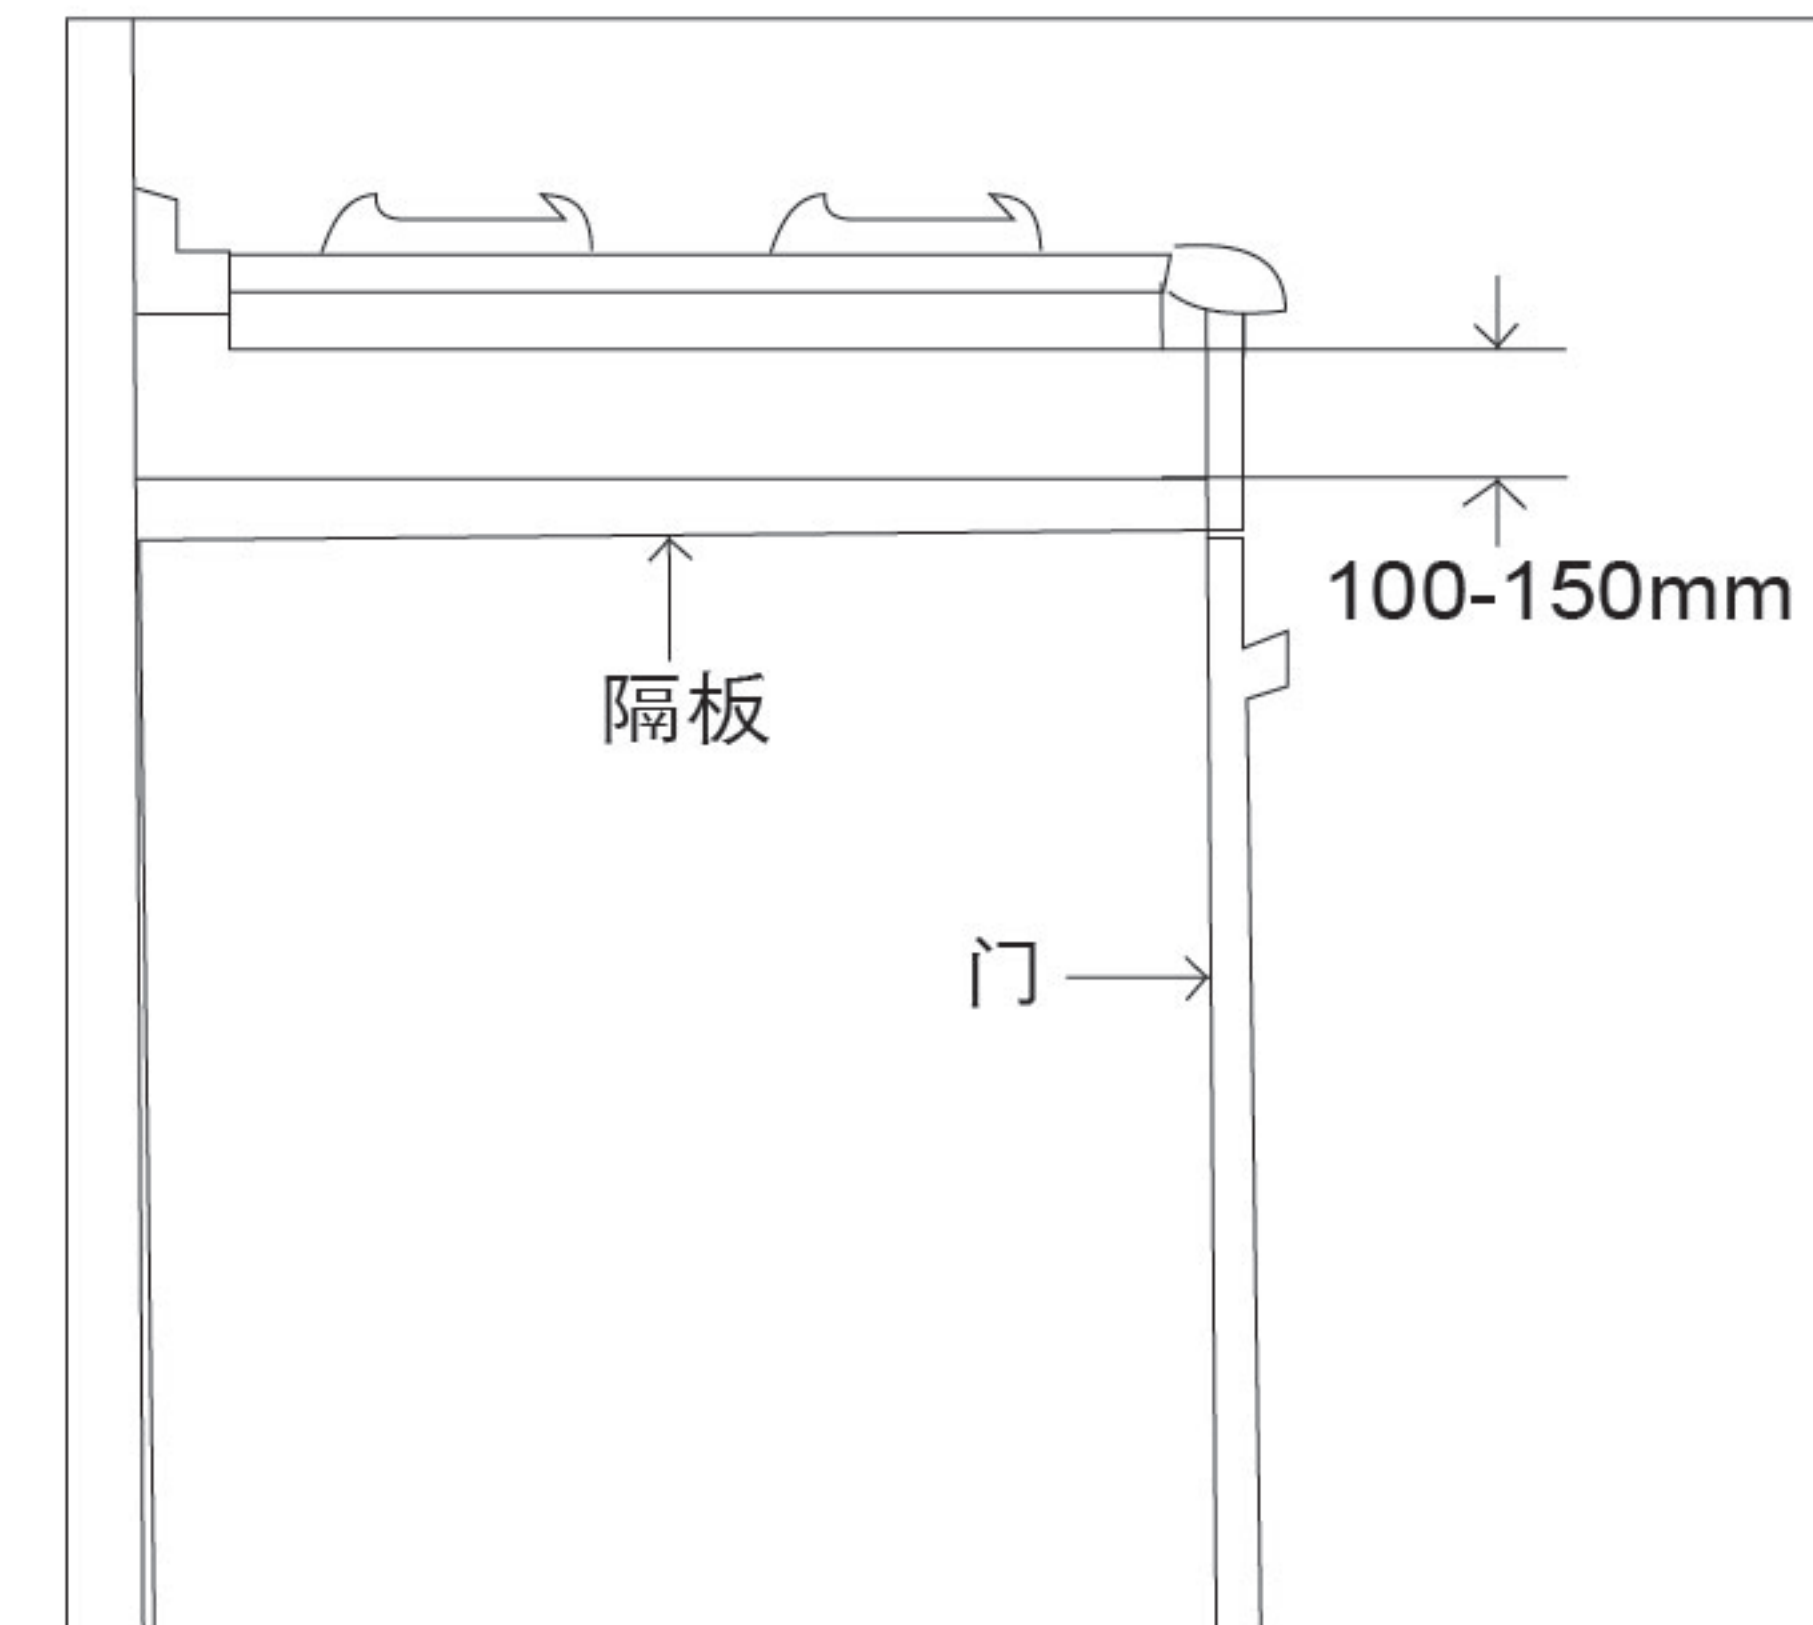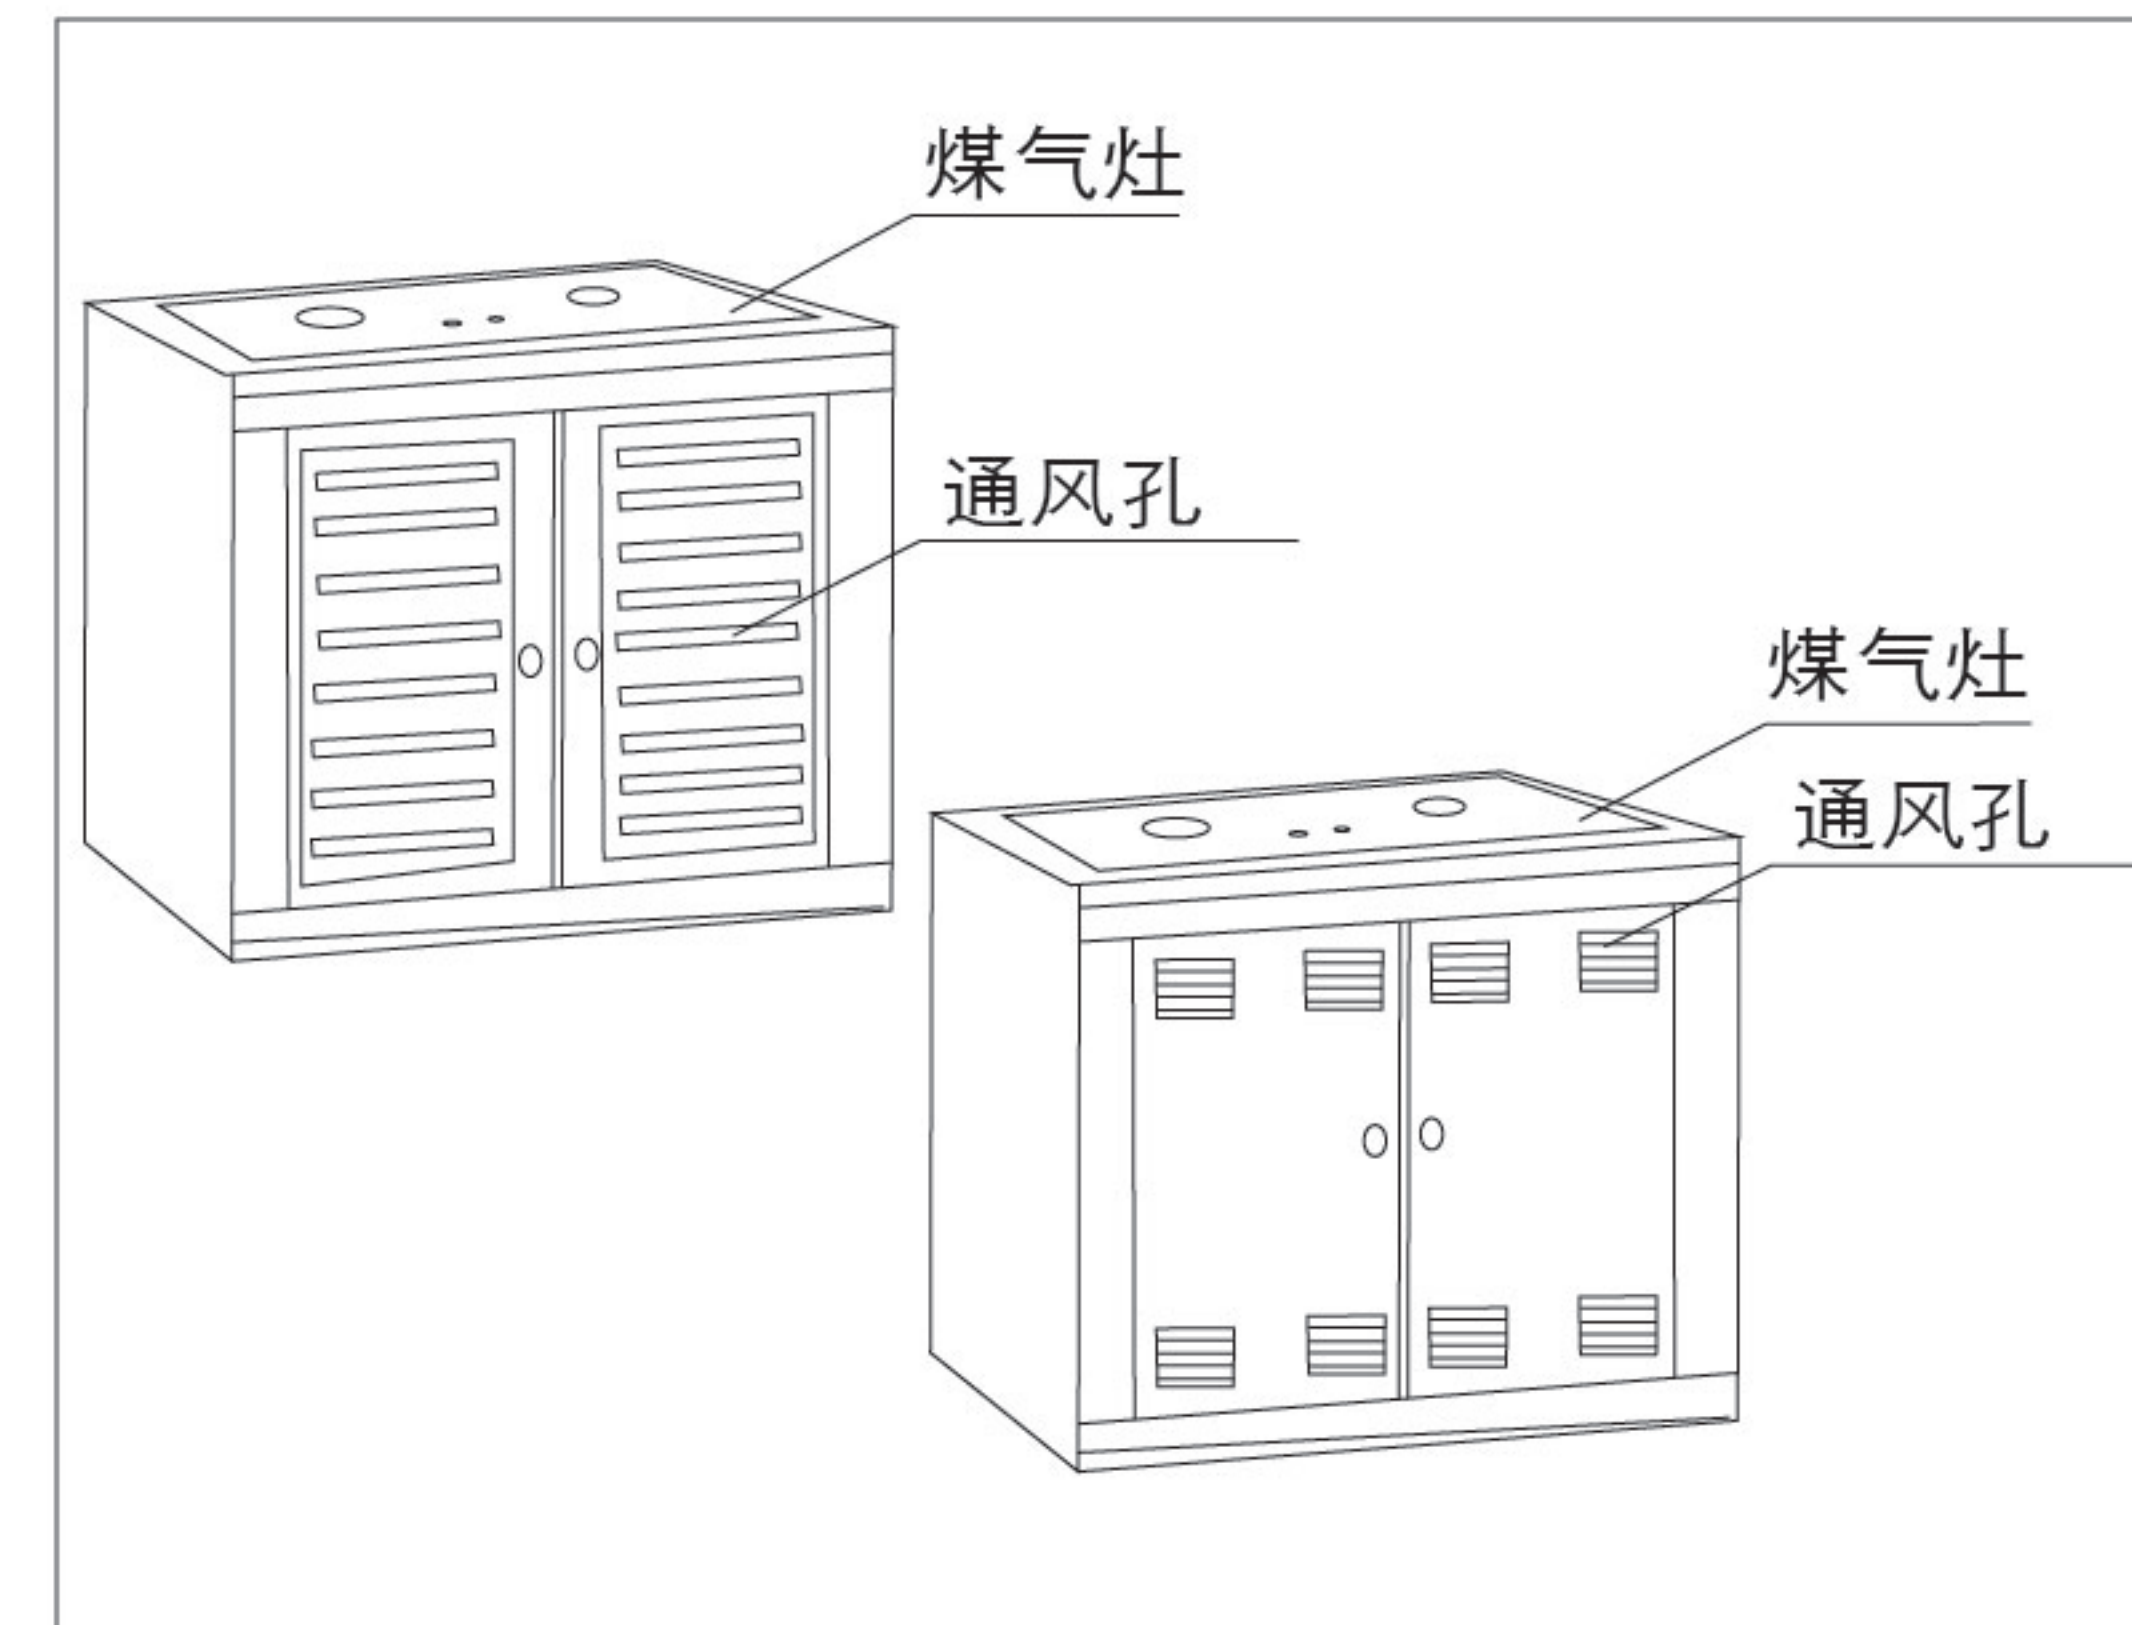

安装时，产品下面必须安装隔板，距离100-150mm。