

FOTILE 方太

使用说明书

请妥善保管，以备参阅

使用产品前请仔细阅读
本说明书

微波炉

HW25800K-01AG
HW25800K-03G
HW25800K-C2G

目录

尊敬的用户，您好！感谢您选购方太公司为您精心制造的方太系列产品，使用前请通读本说明书，您将从中了解正确的操作规范，并享受到全新的下厨乐趣。

方太对您的承诺是“让家的感觉更好”。我们有责任使您对崭新的方太产品感到满意，请您在使用前务必认真阅读《使用说明书》，并遵从说明书要求进行使用，本说明书的操作说明对于维持产品的良好工作状况十分重要，若因使用不当造成产品故障，您将丧失免费保修的权利，任何直接或间接的免费保修申请将不被本公司各地售后服务中心所接受。同时我们建议您在质量保证期内及保证期后需要维修时请与方太厨具有限公司当地售后服务中心联系，这对您和我们都是非常重要的。如果没有好的服务，您等于只购买到一半的产品，方太更佳感觉星级服务宗旨就是“努力，让顾客完全满意”。我们的售后服务中心将为您提供宁波方太厨具有限公司纯正的零部件及专业的技术支持，使您的产品得到优质快捷的维修保障，同时让您得到最轻松细心的服务。

目录	1
安全注意事项	2
微波炉外型结构图	4
规格	5
附件清单	5
微波炉的加热原理	5
烹调用具的选择	6
微波烹调注意事项	8
结构图示	9
微波炉操作步骤	9
控制板操作说明	10
微波和烧烤	25
解冻说明	25
解冻食物方法	25
微波烹调技巧	26
清洁与保养	27
维修事项	27
常见故障解答	29
安装位置使用环境	29
安装	30

安全注意事项

为了避免对使用人员及其他人员造成危害及财产损失，特作如下区分及标志。
均为有关安全的重要事项，敬请严格遵守，并在充分理解内容的基础上正确使用。

根据危害、损害程度进行的内容区分

危险 若忽视这一标志，并进行错误操作，极有可能导致人员危险，重伤或引起火灾。

警告 若忽视这一标志，并进行错误操作，有可能导致人员危险，重伤或引起火灾。

注意 若忽视这一标志，并进行错误操作，有可能导致人员受伤或造成物品损害。

注意、禁止内容的图标



★特别说明：由于不遵守该使用说明书中规定的注意事项，所引起的任何故障和损失均不在厂家的保修范围内，厂家亦不承担任何相关责任。请妥善保管好所有文件。
本说明书各项规定若有与国家法律强制性规定相冲突之处，以法律规定为准。

危险	
禁止加热酒及酒精类饮料，以免发生爆炸。	禁止加热装在密封容器内的液体或其他食物，因为这样有可能发生爆炸。
密封的瓶装或袋装食物必须开口才能放在炉内加热，否则气体膨胀会发生爆裂。	微波炉，不能用来加热带壳的鲜蛋和已煮熟的蛋，因为在用微波炉加热时甚至在加热之后它们可能会发生爆炸。
通电前，必须立刻把微波炉内的泡沫、纸板、说明书等物料取出，防止微波炉误启动时造成的危险。	每次使用后，先用湿布再用干布除去喷溅于波导管罩及炉腔内的食物和油脂，以防止引起黑烟或火灾的可能。
加热土豆、板栗、鸡翅、红香肠等类似圆状食物前，先用刀、叉穿孔以防爆裂。	如发现烟雾，应关掉器具开关或拔掉电源插头，并保持炉门关闭，以抑制火焰蔓延。
为了防止触电，必须确保此微波炉接地良好。	

警告


切勿将水银温度计放入炉内，以免引起打火或损坏。	使用保鲜纸遮盖食物烹调，请将保鲜纸一角摺上，使蒸汽通气，煮好将保鲜纸小心拆开，以免蒸汽灼伤。
只有在已经提供充分的指导以致于儿童能够采用安全的方法使用微波炉，并且明白不正确的使用会造成危险时，才能允许儿童在无人监控的情况下使用微波炉。	加热液体食物时，用阔口容器盛装，食物顶部离容器口留够一定空间，以免食物沸腾溢泻现象。
切勿在没有放置食物的情况下启动微波炉，以免损坏微波炉，也可能导致危险。	禁止加热食物油或油炸食物，以免发生油滴飞溅烫伤使用者。
请勿使用微波炉做任何储存食物用途。	当加热用塑料或纸包装的食物时，应注意观察微波炉，因为有着火的可能。
小心微波辐射。	不要将食物覆盖密封加热。
不要在户外使用微波炉。	内部温度较高，煮完食物取出时，需戴手套将食物取出，不要直接用手拿，以免烫伤。
在微波炉内仅能使用适合的器皿。	奶瓶和婴儿食品罐应经过搅拌或摇动，喂食前应检查瓶内食物的温度，避免烫伤。
微波炉加热饮料会导致延迟喷溅沸腾，因此取出时必须小心谨慎。	本产品仅供家庭日常使用，请不要用于商业用途或在其它特殊环境中使用。
当爆完爆米花后，把表面的保鲜膜取掉时要小心操作，以免烫伤。	

注意

不要使用密封容器加热，例如带有盖或奶头的奶瓶，罐头食品、密闭玻璃等。	请仔细阅读说明书并妥善保管以供将来参考。
烹调少量食物时，要多加观察，防止过热起火。	窄颈瓶不可直接放入微波炉烹煮、加热。
确认拟接入微波炉的电源电压与铭牌或说明书上标识的保持一致。插座接地良好。	若食物放在一次性容器内加热时，请用户时时注意微波炉内的情况。因为有着火的可能。
清洁门封，腔体和邻近的部件的细节。	器具在使用期间会发热，注意避免接触炉内的发热单元。

⚠ 注意	
<p>! 用水清洗时，应先待转盘冷却。</p> <p>严格执行</p>	<p>! 切勿放置滚热食品、容器在冷却的转盘上。</p> <p>严格执行</p>
<p>! 不要放冰冷食物、容器在炽热的转盘上。</p> <p>严格执行</p>	<p>! 烹调时要保证转盘不接触炉腔内表面。</p> <p>严格执行</p>
<p>! 每次微波炉使用完毕，最好将一盛满水的玻璃杯置于炉内玻璃转盘上，避免误操作损坏机器。</p> <p>严格执行</p>	<p>! 使用时先放入转盘支承及玻璃转盘，再将盛好食物的器皿放在玻璃转盘上进行烹调。</p> <p>严格执行</p>
<p>! 微波烹调时切勿使用金属器皿，带金、银边的器皿也不应使用。微波炉中通常使用陶瓷、耐热玻璃、耐热塑料或纸质器皿。</p> <p>严格执行</p>	<p>! 电源在198V~242V波动时，微波炉仍能正常工作。但输出功率及工作时间会受到影响。故操作时要根据实际情况来调节烹调时间。</p> <p>严格执行</p>
<p>! 注意转盘的最大负载重量不能超过5kg。</p> <p>严格执行</p>	<p>! 建议使用厂家推荐的配件，请勿使用非正规配件。</p> <p>严格执行</p>
<p>! 本微波炉专为家庭加热及烹调食物而设计，故不适用于其它工业和商业用途。</p> <p>严格执行</p>	<p>! 不清洁微波炉会使器具表面劣化，这会影响器具的寿命，可能会导致危险的情况。</p> <p>严格执行</p>
<p>! 应定期清洁微波炉并清除微波炉所有食物残渣。</p> <p>严格执行</p>	<p>! 微波炉用的插座，建议安装串联开关，以便于遇到紧急情况时，快速切断电源。</p> <p>严格执行</p>
<p>! 不能使用蒸汽清洁器。不要使用粗糙清洗剂或锋利的金属刮刀清洁炉门的玻璃。因为他们会擦伤玻璃表面，从而导致玻璃破碎。</p> <p>严格执行</p>	

微波炉外型结构图

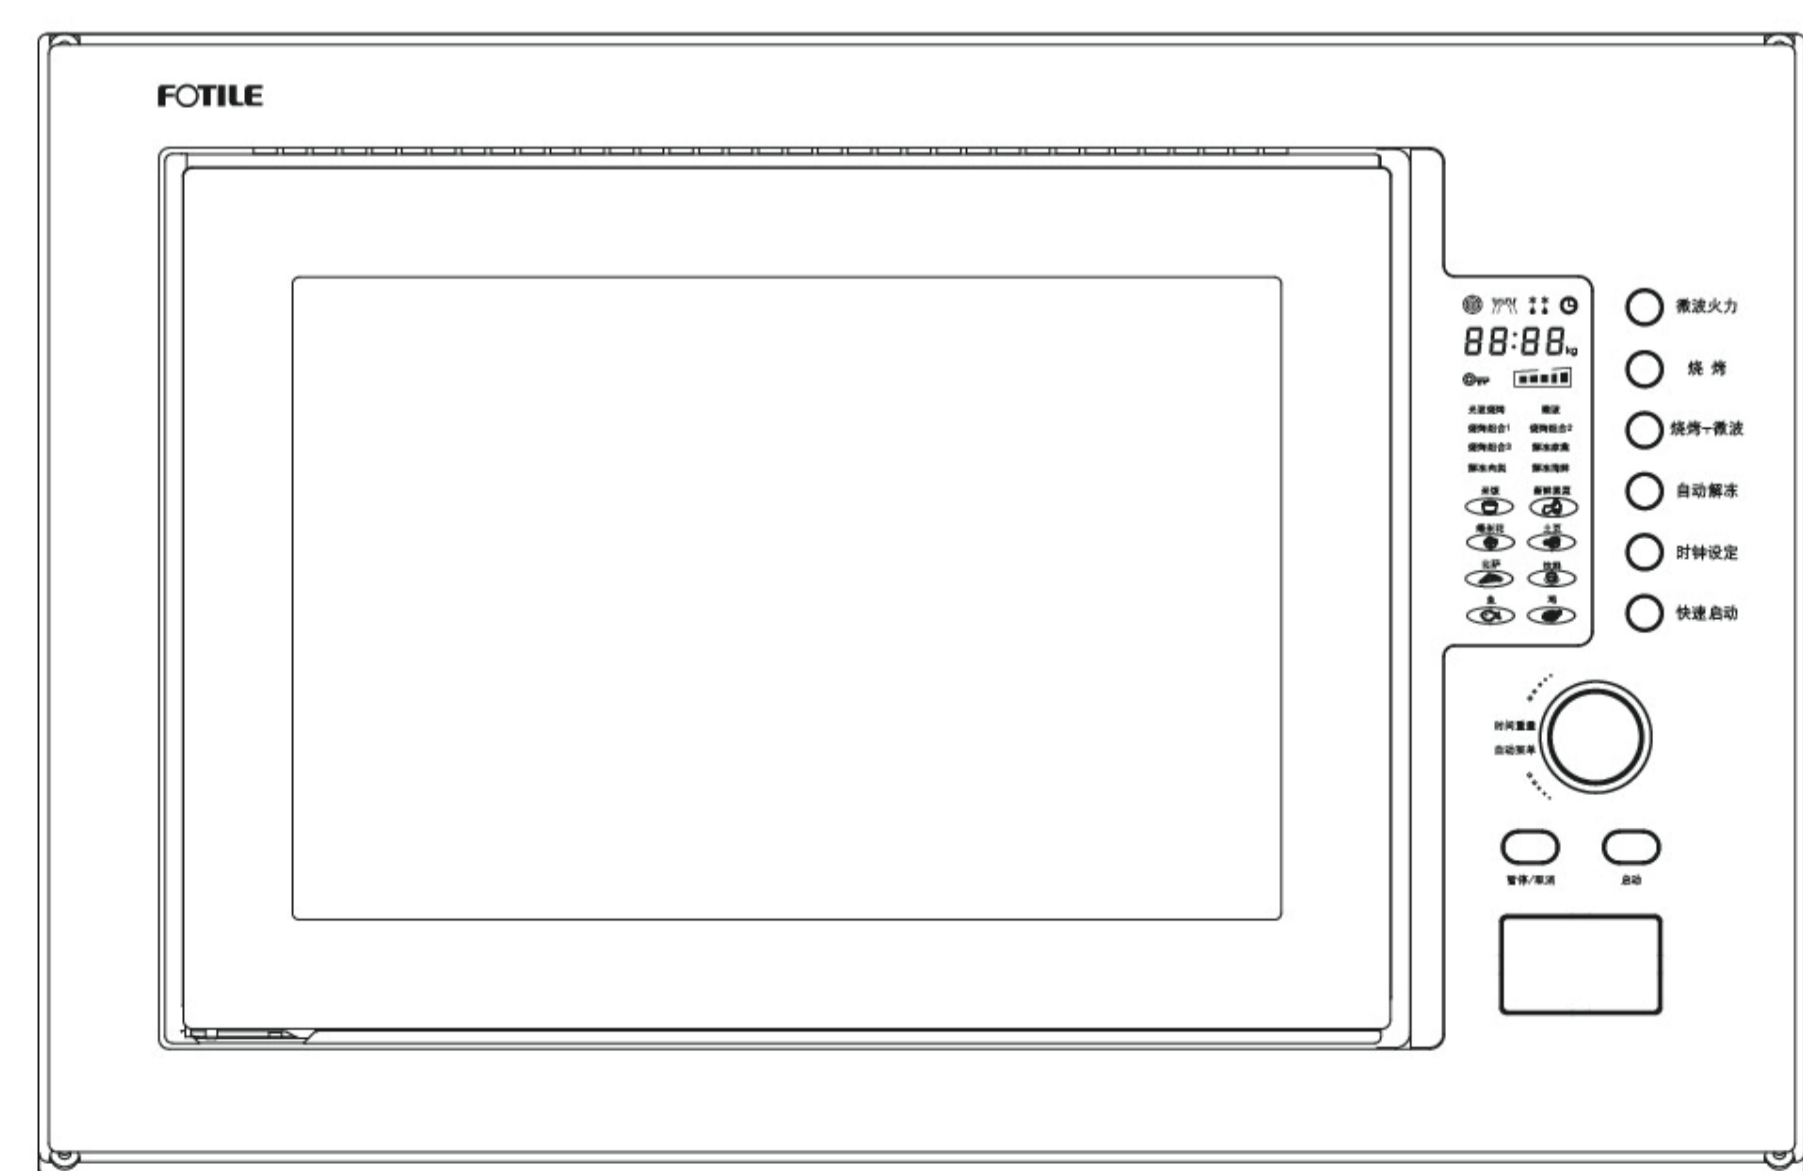

(图1)

规格

型号	HW25800K-01AG/HW25800K-03G/HW25800K-C2G
额定输入功率	微波 1300W 烧烤 800W
净重	约20kg
均匀加热方式	专用玻璃转盘
额定电压	120V~ 60Hz
微波额定输出功率	800W
额定微波频率	2450MHz
噪声值	60dB(A)(声功率级)
炉腔容量	25L
外型尺寸	595mm(宽)x385mm(高)x368mm(深)

附件清单

零部件名称	数量
使用说明书	1份
合格证	1张
产品编号标贴	6张
圆烤架	1个
玻璃盘	1个
转盘支承	1个
十字槽圆头木螺钉4×25 (镀黑锌)	4颗

微波炉的加热原理

- 微波是自然界常见的一种高频率电磁波，可以用来加热。但在自然界是分散的，因此无法将其用于加热。
微波炉是利用磁控管将电能转化为微波能，在微波炉的封闭内胆中形成一个巨大的微波能量场，使食物分子激烈震荡从而达到加热的目的。
- 微波具有以下三种特性：
 - 1) 吸收性：微波能够导致食物分子之间激烈震荡，从而达到加热的效果，但微波渗透的能力取决于食物的尺寸，形状及食物的特性。
 - 2) 反射性：微波在内胆金属之间的表面能够反射，建立一个稳定的微波能量场，这样将不会导致内腔局部过热。
 - 3) 渗透性：微波能够穿透陶瓷，玻璃和耐高温塑料，建议使用微波能够很好穿透的容器。

烹调用具的选择

根据不同的烹调方式，选择安全合适的器皿是十分必要的，如果选择不当，不仅会影响烹调效果，而且还会造成损坏器皿或微波炉的不良后果。请参照下面表格使用：

容器种类	微波	烧烤	烧烤组合
耐热性玻璃容器 	可使用 △果酱等产生高温的食品请使用抗突冷、突热的超耐热玻璃制品。	不可使用	不可使用
无耐热性玻璃容器 	不可使用 △雕花玻璃、强化玻璃也不能使用。	不可使用	不可使用
耐热性塑料容器 	可使用 △请使用有[可微波炉用]标识的容器。 △请注意容器盖中有耐热性差的一类。 △密封性强的盖子请避免使用。 △含高油、高糖份的食物可产生高热不能使用。	不可使用 △烧烤用指定容器可以使用	不可使用
无耐热性塑料容器 	不可使用 △受微波影响变质的东西不能使用(聚乙烯、三聚氰氨、酚、尿素树脂等)。 △只是解冻生鲜食品时泡沫制托盘可使用。	不可使用	不可使用
陶器·瓷器 	可使用 △有彩图、金银装饰的容器会引起颜色剥落、打火、不应使用。	可使用 △内侧有彩图的容器，会引起颜色剥落请避免使用。	可使用

容器种类	微波	烧烤	烧烤组合
漆器 	不可使用 △有可能发生漆脱落、断裂现象。	不可使用	不可使用
铝等金属容器 	不可使用 △金属网、金属串等也会引起火花不能使用。 △微波炉专用的着色用盘(金属制品)也不能使用。 △金属刀叉之类不可在微波下放入炉内使用。 △方便面封口的金属纸也不可。	可使用 △把手是树脂材料的容器也不能使用。	不可使用
木·竹·纸制品 	不可使用 △容易燃烧。	不可使用 △经过耐热加工处理的纸制品能使用。	不可使用
圆烤架 	不可使用	可使用	可使用
微波炉专用保鲜膜 	可使用 △多油食品会产生高温不能使用。	不可使用 △经受高温会熔化。	不可使用
铝箔 	不可使用 △利用微波反射性质有时也使用(比如解冻生鲜食品)。但切记铝箔不可触碰内胆内壁。	可使用 △用铝箔把食物包好进行烘烤。	不可使用

★ 检查容器是否可在微波炉内安全使用：

拿一个玻璃杯装300ml的冷水，和试验的容器一起放进微波炉里，调至高火煮一分钟（微波）。假如这个容器未升温且未损坏，但水变热，那么它就是安全的微波烹饪容器，若这个容器变热，证明它已经吸收了一些微波，绝对不可使用，这个试验不可用在塑料容器上(该试验仅做参考)。

微波烹调注意事项

★ 初次使用前的准备

第一次使用微波炉时，可能会有异味、甚至冒白烟，这是由于元器件的保护油受热挥发所致并非故障现象，使用过几次后，这种情况不会再发生，建议按以下方法操作：

1. 使用前（烧烤模式），设置程序至烧烤模式后干烧几次。
（注：干烧只允许在烧烤模式下操作，不可在微波或微波烧烤组合模式下操作）
2. 使用前（微波模式），放一杯水在玻璃盘上设置微波高火力操作几次。

★ 检查是否损坏

每次使用微波炉前请确认以下各项：

1. 炉体是否有损伤、变形或开裂。
2. 炉门是否损坏，开关是否正常。
3. 炉门上的金属板是否弯曲、变形或开裂。
4. 炉门上的绝缘网孔是否粘上食物或聚积油污。
5. 开门按键能否正常使用，门钩是否损坏。
6. 微波炉门或者其邻近的部件损坏或者在微波炉门开启的情况下，不要试图操作该微波炉，直到专业维修技术人员将其修好为止。
7. 如果电源线损坏，必须由本公司售后维修人员或者专业技术人员更换。



出现上述情况，请不要使用微波炉，必须由本公司售后维修人员或者专业技术人员检修。


★ 食物

1. 切勿煮带壳蛋，压力会使蛋爆裂。另外蛋黄、蛋白也要用牙签刺穿数次。
2. 烹调时间不要过长，因为煮食不足可继续烹煮，过度则无法补救。
3. 影响烹调时间的因素有：所喜欢的煮熟程度，食物的初温，形状大小，份量和使用器皿的形状，大小及食物的排列、遮盖、翻搅等。请参阅“微波炉烹调技巧”，再参照这些因素，适当调整烹调时间。
4. 表面无孔食物(如蛋、板栗、土豆、香肠等)，请去皮或在外皮上开一裂缝或叉开几个小孔，否则受热膨胀，可能会发生爆裂。
5. 不可用微波炉煎炸食物。
6. 烧烤时，不要遮盖食物，因为食物需要直接吸收辐射热能。



⚠ 警告：已煮好的汤圆或荷包蛋等，马上取出可能会造成其内部液体沸腾爆破而溅伤人体。应打开炉门后，略搁置一会儿，再取出食用。

结构图示

波导管罩
波导管罩不可取下，以免微波炉工作时，有水气或油脂进入波导管。

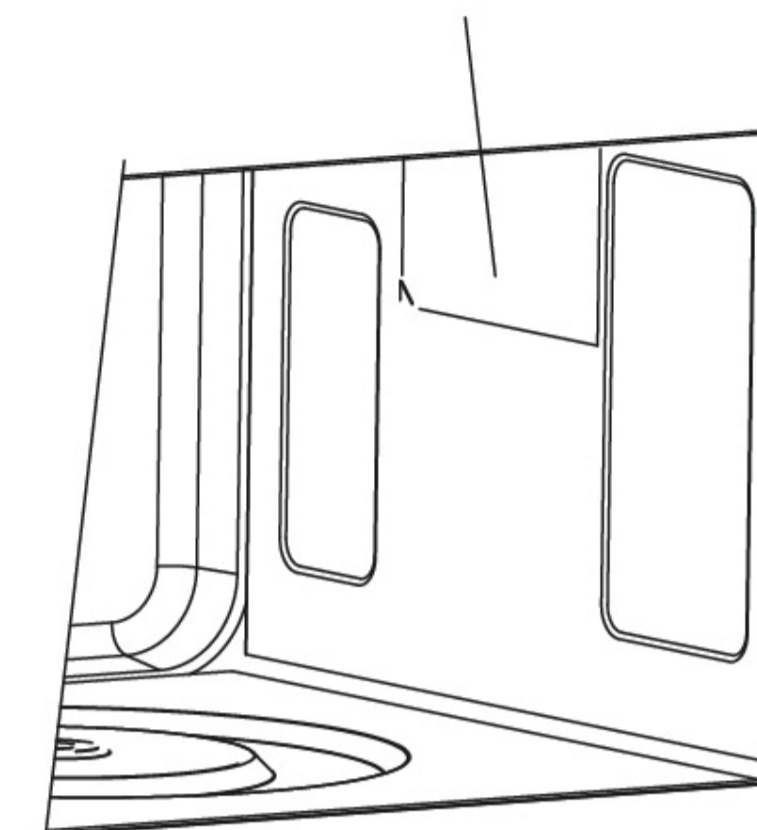

(图2)

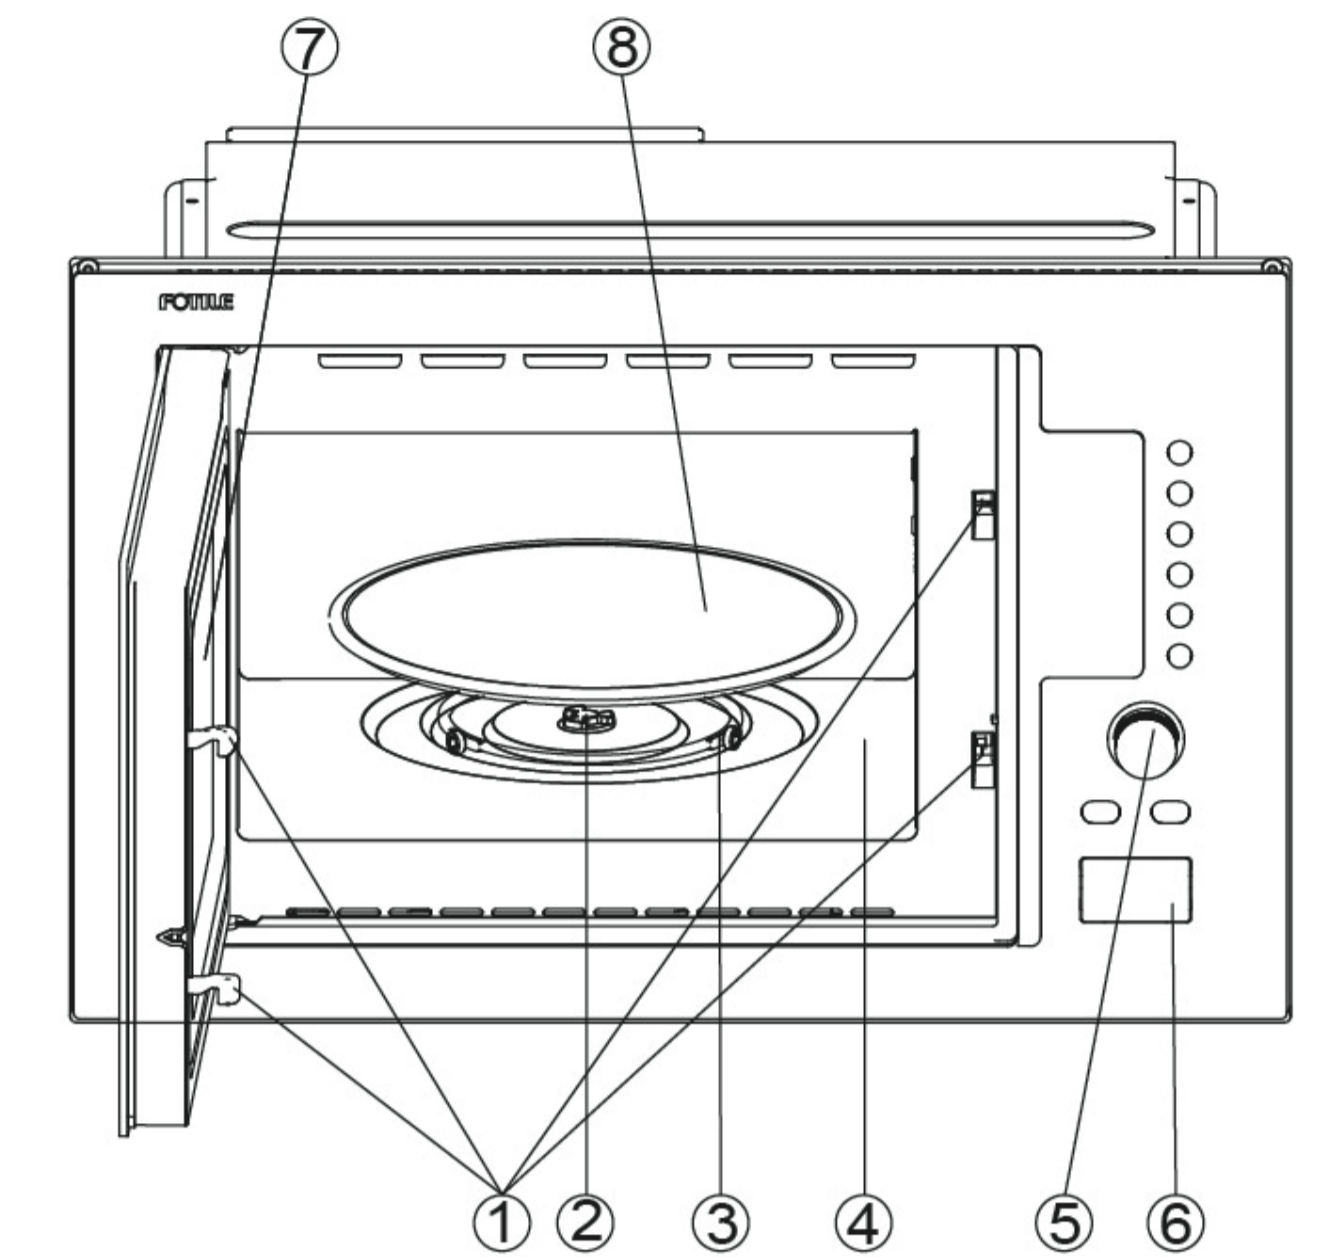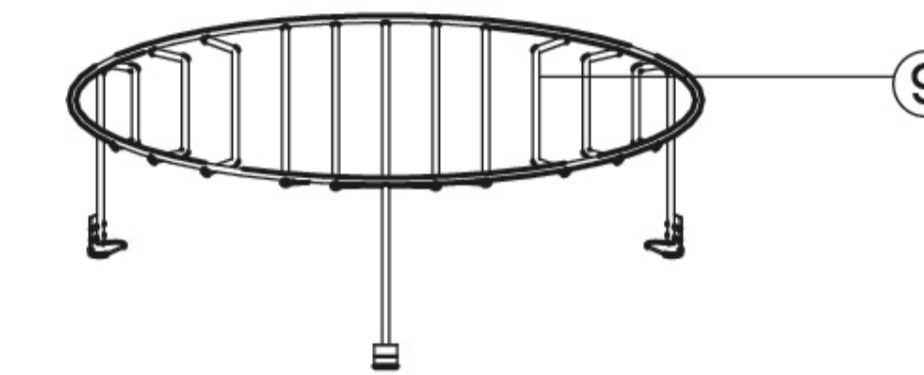

(图3)

1. 门安全联锁系统—确保炉门打开微波炉不能工作；炉门关上微波炉才能工作。
2. 转轴—带玻璃转盘转动。
3. 转盘支承—支承玻璃转盘并按其轨道转动。
4. 炉腔—微波烹调工作区。
5. 控制板—微波炉功能控制。
6. 开门按键—用于打开炉门。
7. 视视窗—透过网孔观察工作情况。
8. 玻璃转盘—装好食物的容器放在转盘上，加热时转盘转动，使食物烹调均匀，以达到均匀烹调的效果。
9. 圆烤架—在烧烤及在组合模式下工作时，把食物放在烤架上。为避免在单独的微波炉程序下无意识误用圆烤架，请勿将其存放在微波炉内。

微波炉操作步骤


1. 将微波炉接通电源。
2. 把食物放置在转盘上，然后关闭炉门。
3. 选择微波烹调方法。



- a 不可空载（炉内无食物）操作微波炉，否则会对微波炉造成损坏。
- b 当选择微波火力烹调时，必须将烧烤架取出。
- c 当选择烧烤和组合（微波+烧烤）烹调时，食物和发热管的距离至少保证5cm。操作时，有必要定时翻转食物。


4. 设置烹调时间。
5. 微波炉程序开始运行。在任何情况下，只要把炉门打开或按“暂停/取消”键，程序会被暂停，如果把门关上，必须按“启动”键才能使微波炉继续工作。
6. 烹调结束后，会听到蜂鸣响“哔”音3次，微波炉程序停止，炉灯熄灭。
7. 在使用组合功能或烧烤时炉门会较烫，不可触摸，只可对操作面板部分操作。
8. 当拿取或翻转食物时，强烈建议使用隔热手套操作，不要碰到炉内壁以免烫伤。

HW25800K-01AG

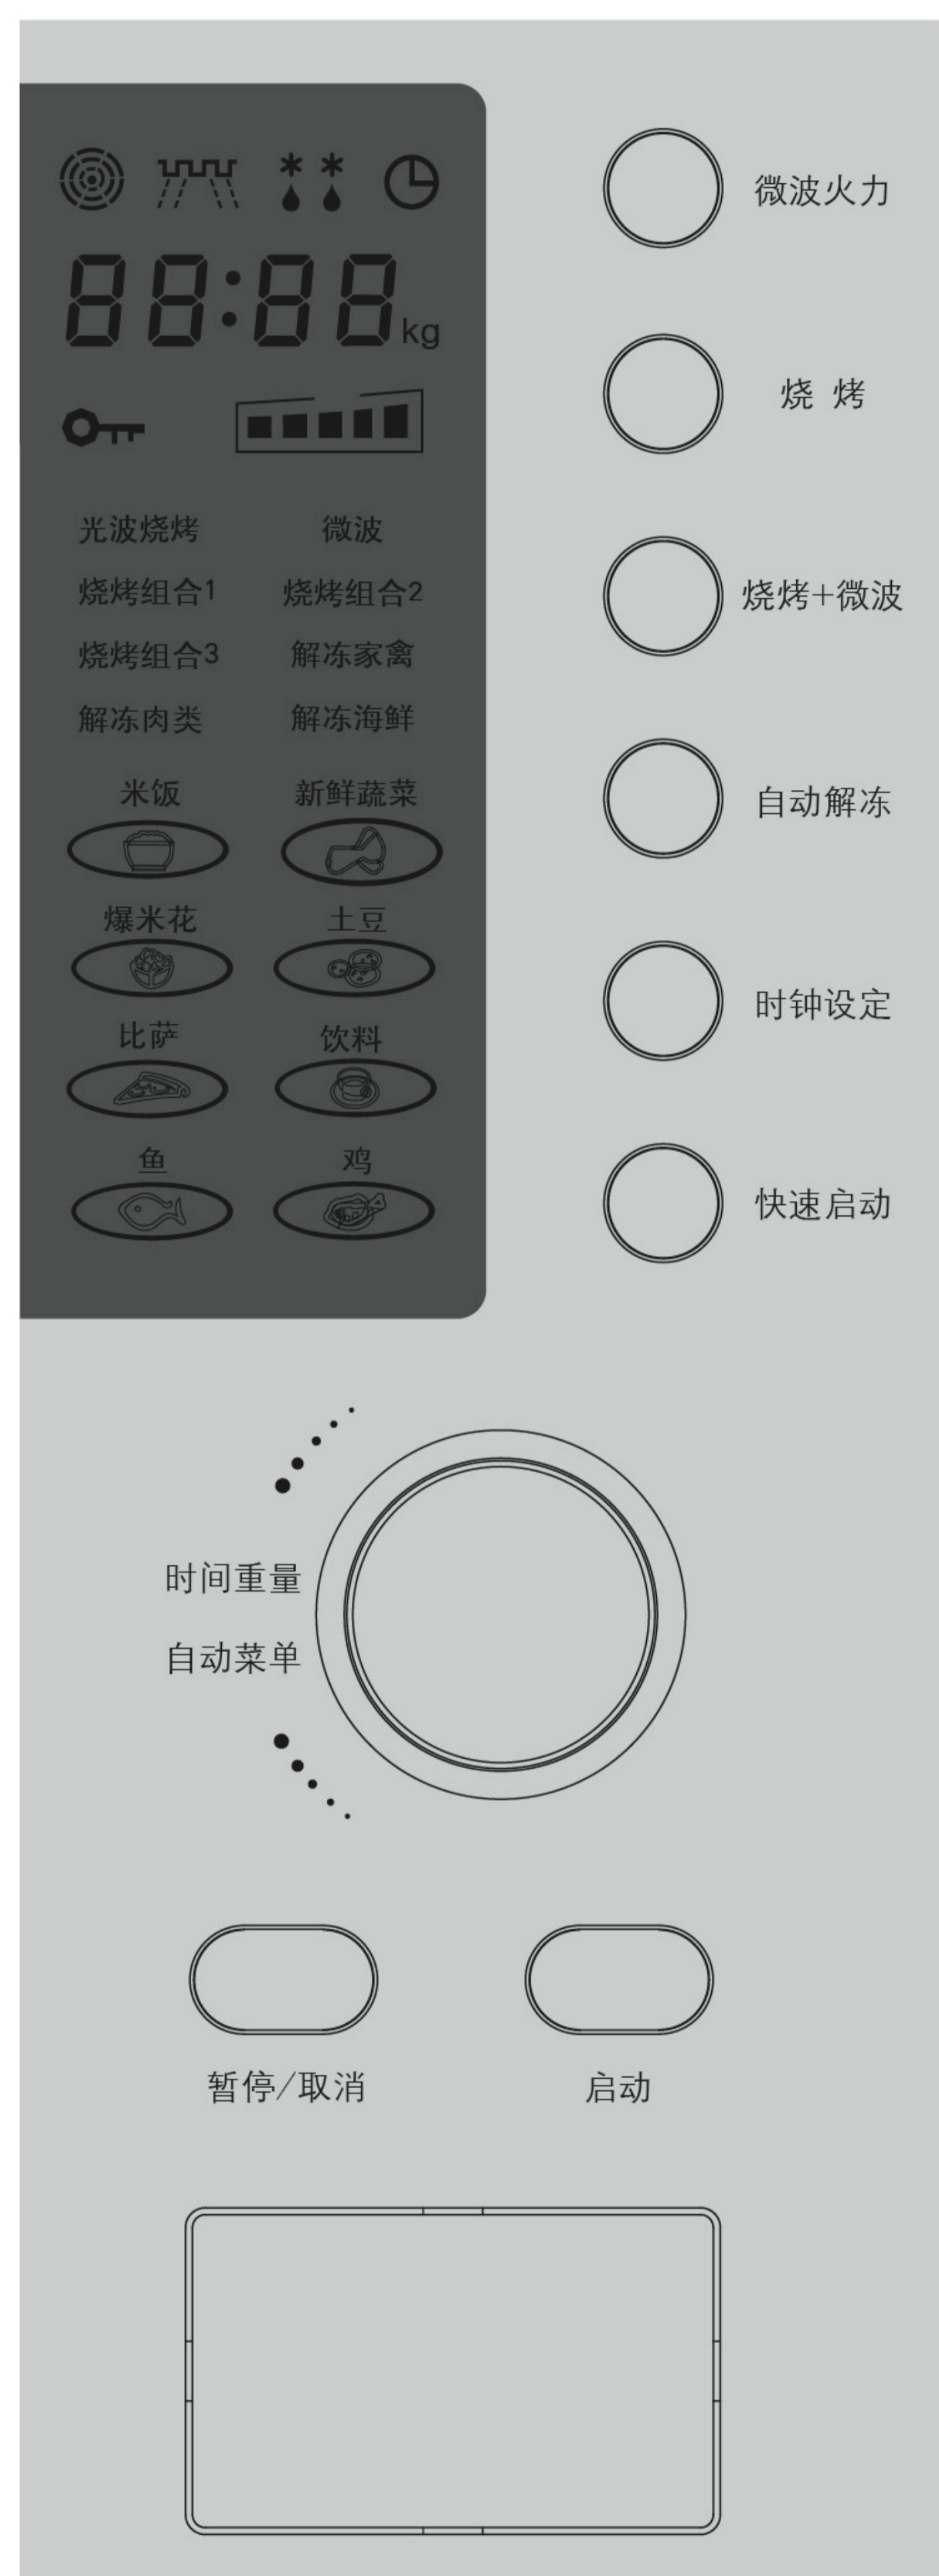

(图4)

注：“时间重量自动菜单”键可伸缩，微波炉操作时需将该按钮弹出。

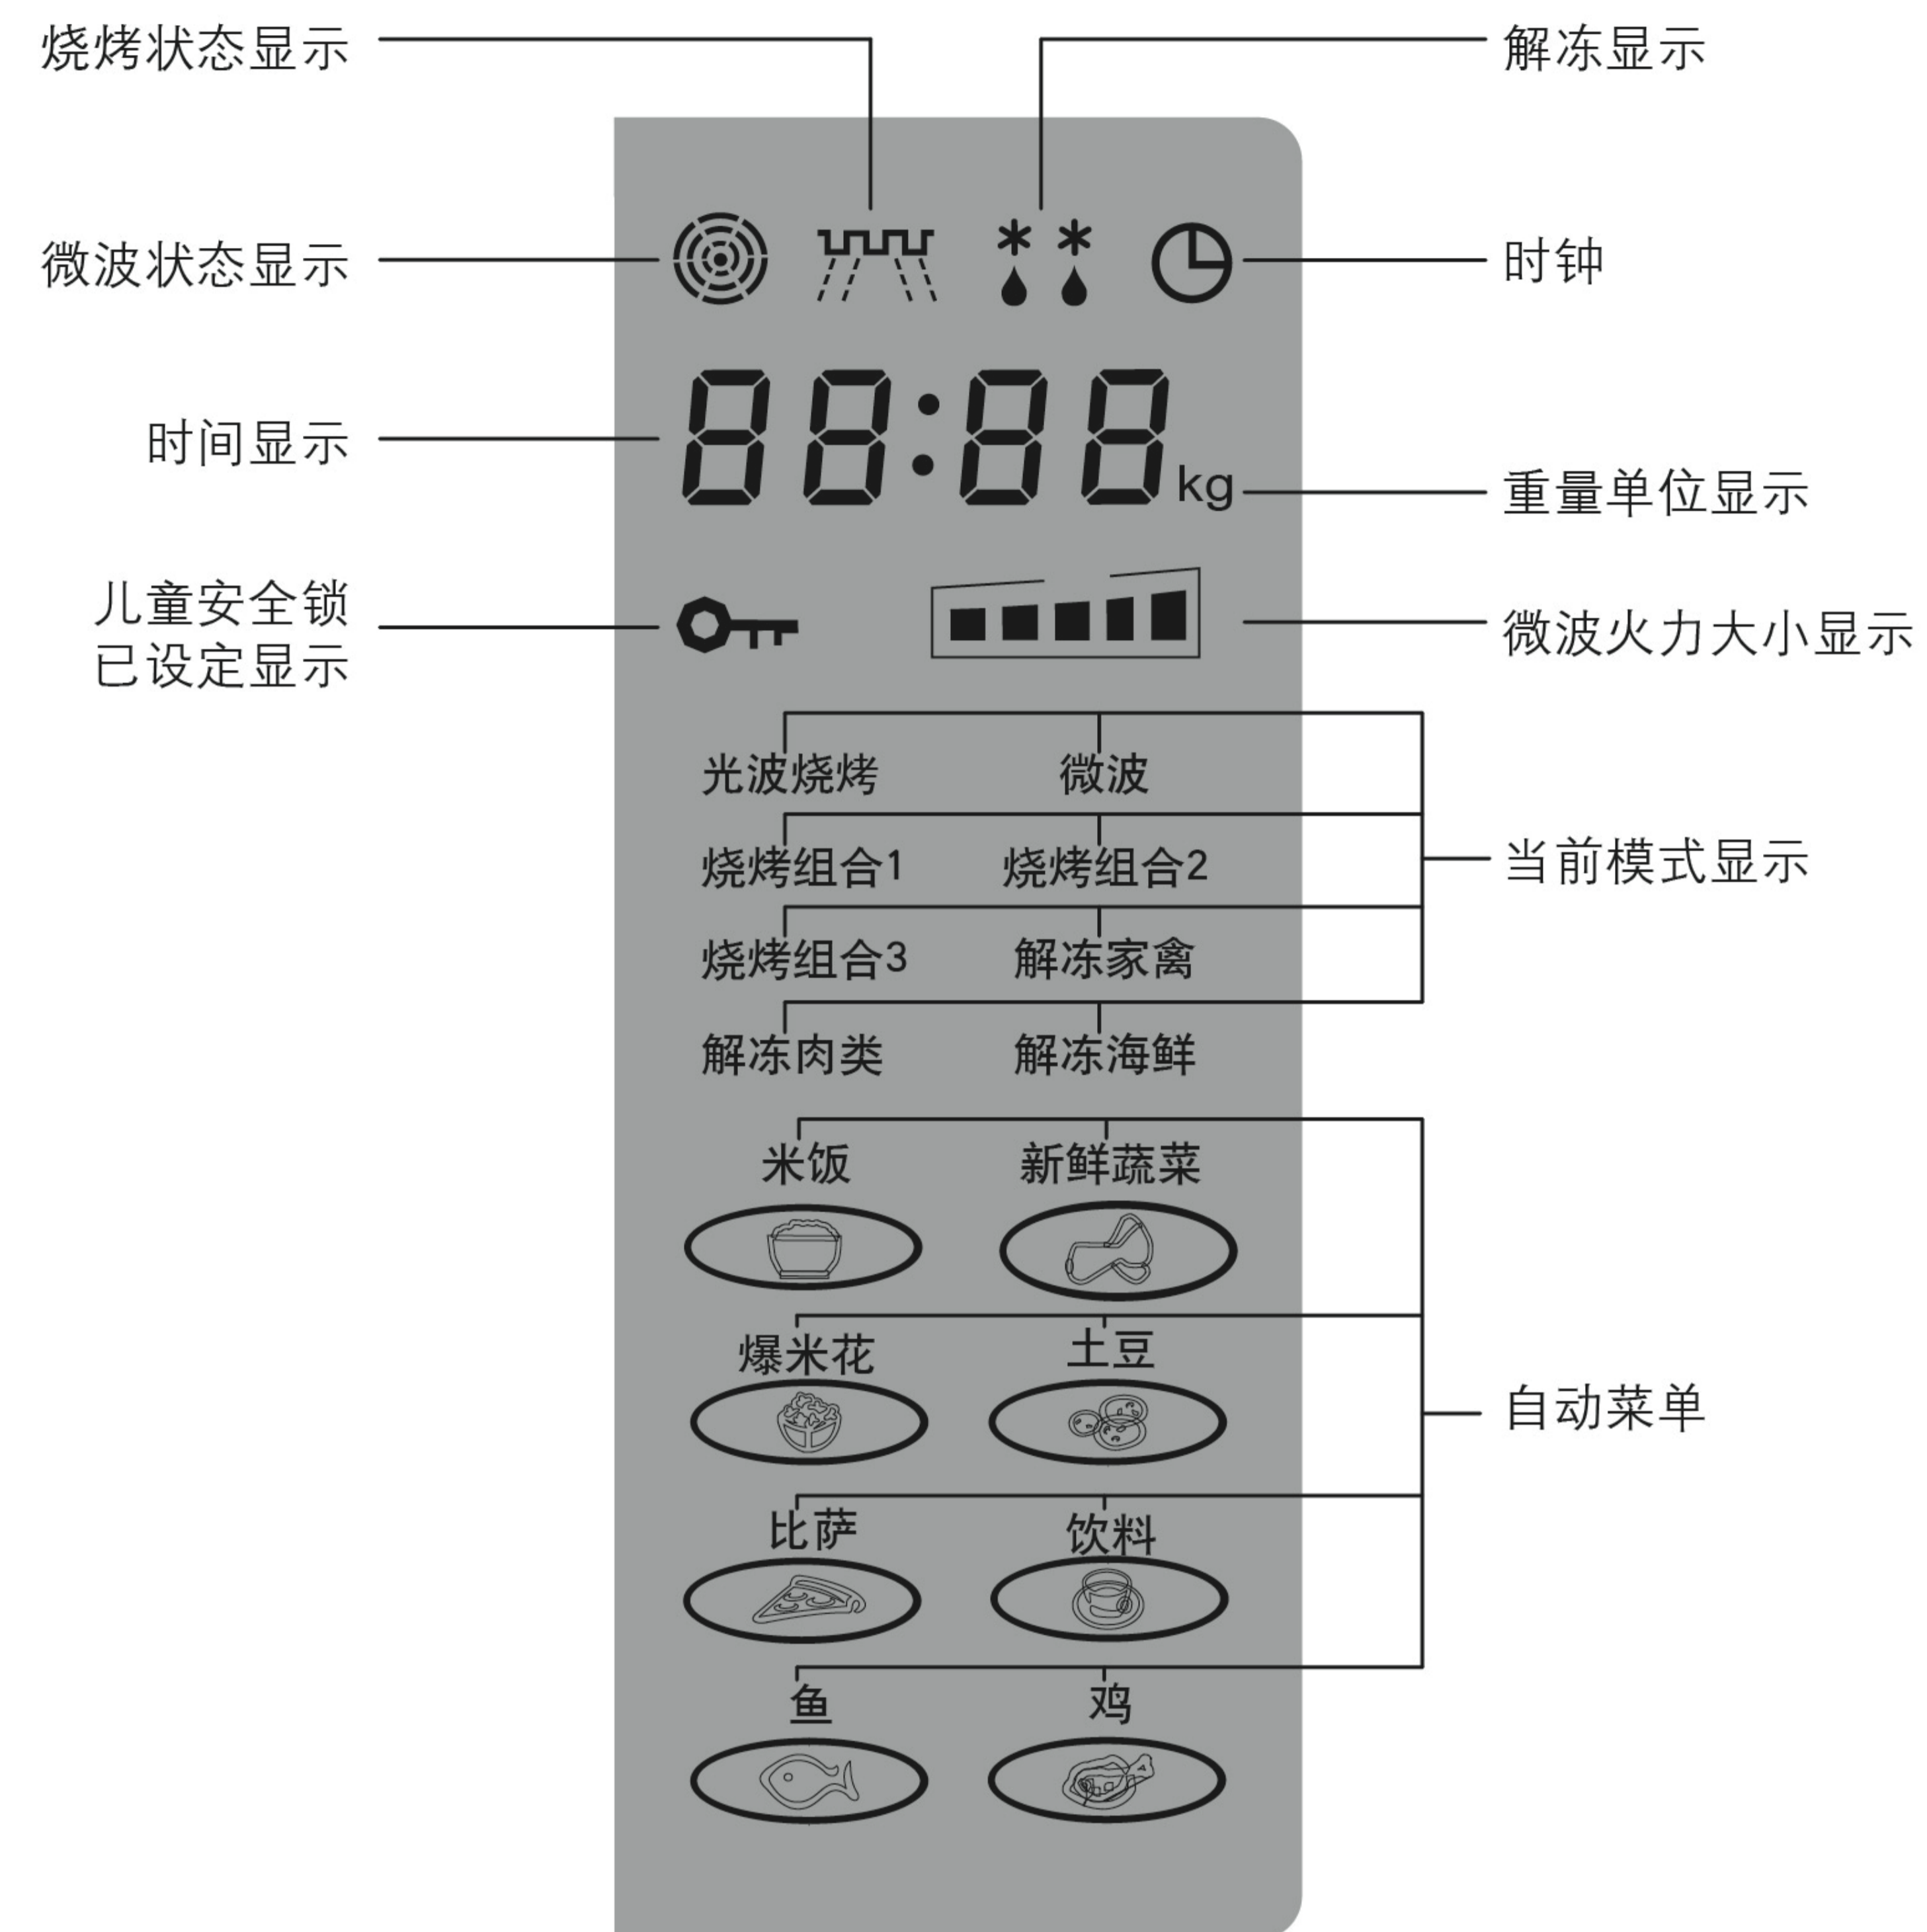

(图5)

1. 通电后显示屏会闪烁显示全部内容3次，之后显示屏中会显示“0:00”和“🕒”。即可输入时钟或设置烹调程序。
2. 时钟功能设置（24小时制）
在“时间”状态下，
 - ①按“时钟设定”键一次，即为时钟输入状态；
 - ②旋转“时间重量自动菜单”键，输入小时；
 - ③再按“时钟设定”键一次，为分钟设置；
 - ④再次旋转“时间重量自动菜单”键，输入分钟；
 - ⑤最后按一次“时钟设定”键确认。
 时钟进入运行状态，并显示当前时间。

3. 微波火力设置

①按“微波火力”键，依次显示P100→P80→P60→P40→P20→P100循环，设置需要的微波火力；

②旋转“时间重量自动菜单”键，输入时间；

③按“启动”键即以设定火力和时间进行烹调。

P100 ■■■■■：100%微波火力(高火) 煮沸清水，烹调鲜果、蔬菜，烹调蜜饯糖果。

P80 ■■■■：80%微波火力(中高火) 烹调鱼及海鲜类，烹调肉类、家禽类及蛋类，烹调糕饼。

P60 ■■■：60%微波火力(中火) 烹调蛋糕，焖煮食品，溶化黄油、巧克力。

P40 ■■：40%微波火力(中低火) 烹调较韧的肉块，煲汤或炖品，软化黄油，解冻。

P20 ■：20%微波火力(低火) 食物保温，软化冰淇淋。

4. 快速启动设置

①按“快速启动”键，LED会依次显示0:30-1:00-1:30

0:30 默认的工作时间为30秒。

1:00 默认的工作时间为1分钟。

1:30 默认的工作时间为1分30秒。

②按“启动”键，即以选定的时间进行高火烹调。

5. 烧烤烹调的设置

①按“烧烤”键；

②旋转“时间重量自动菜单”键，选定所需的工作时间；

③按“启动”键，即以选定的时间进行烹调。

烧烤特别用于烧烤薄块的肉类及海鲜的烘烤，如：牛扒、猪扒、串烧、香肠和鸡翼等，也适合烧烤三文治及烤菜。

6. 烧烤+微波烹调的设置

①按“烧烤+微波”键，会依次显示“烧烤组合1-烧烤组合2-烧烤组合3”，选定需要的烧烤组合模式；

②旋转“时间重量自动菜单”键，选定所需的工作时间；

③按“启动”键，即以选定的时间程序进行工作。

烧烤组合1：适用于西餐、牛扒等食物

烧烤组合2：适用于肉片等食物

烧烤组合3：适用于整鸡、鸭等食物

7. 自动解冻

①按“自动解冻”键，依次循环显示“解冻肉类-解冻家禽-解冻海鲜”，选定需要的解冻模式；

②旋转“时间重量自动菜单”键，调整解冻重量；

解冻肉类：解冻范围为0.10kg-2.00kg

解冻家禽：解冻范围为0.20kg-3.00kg

解冻海鲜：解冻范围为0.10kg-0.90kg

③按“启动”键，即以选定的时间、程序进行烹调。



当菜单程序运行至翻转过程时，蜂鸣器会发出“哔”、“哔”、“哔”的响声，此时应翻转解冻的食物。

8. 暂停/取消

按“暂停/取消”键

a. 取消输入火力，烹调或解冻时间及程序；

b. 微波炉在工作过程中，按“暂停/取消”键一次（或将炉门打开）为暂停工作；

c. 微波炉在工作过程中，按“暂停/取消”两次为程序取消。

9. 自动菜单烹调的设置

① 无其它工作状态下，向左旋转“时间重量自动菜单”键，即可调出自动菜单：

A.1 米饭：适合煮0.15kg-0.60kg的米饭

A.2 新鲜蔬菜：适合煮0.10kg-0.50kg的蔬菜

A.3 爆米花：适合爆0.07kg/0.13kg的玉米

A.4 土豆：适合煮1-3个(每个重约0.3kg)的土豆

A.5 比萨：适合加热重约0.30kg/0.50kg的比萨

A.6 饮料：适合加热一杯至三杯容量为230ml的液体或饮料

A.7 鱼：适合蒸0.20kg-0.60kg的鱼。

A.8 鸡：适合烤0.80kg-1.40kg的鸡肉。(烹调过程中，蜂鸣器发出“哔”的声音时暂停、翻转)

② 选定菜单后，向右旋转“时间重量自动菜单”键，设定所需烹调食物的重量。

③ 按“启动”键，即以选定的时间、程序进行烹调。



1.以上设置的程序是按食物在20℃-25℃（牛奶是在4℃-6℃）温度下设计的。

若食物处于不同的温度下煮食效果会有所不同，请自行调整煮食时间。

2.在煮米饭时建议使用带盖的微波炉专用容器，以防止在煮食过程中水份蒸发和米饭溢出。

3.在蒸鱼时，建议用一层保鲜纸覆盖食物。以防止在煮食过程中水份蒸发。

4.食物的形状，重量及温度会影响到最终的效果。在使用自动菜单时请遵照以上提到的条件，若最终结果不能满意，请自行调节。

5.自动菜单烹调的效果受个人的煮熟习惯，食物的摆放，形状大小，份量及电网电压的高低等因素的影响，如有不熟再根据实际情况适当调整烹调时间。

10. 多段功能烹调设置

分段（组合）功能，一共可输入最多为四次（段）有效操作。P100微波火力、烧烤、烧烤组合

1、烧烤组合2、烧烤组合3、不可以连续两段设置。

例：微波最高火力工作10分钟后烧烤工作10分钟，则操作顺序为：

- ①按“微波火力”键，显示P100时；
- ②旋转“时间重量自动菜单”键，使屏显“10:00”；
- ③按“烧烤”键；
- ④旋转“时间重量自动菜单”键，使屏显“10:00”；
- ⑤按“启动”即以设定的程序进行烹调。（先执行第一段P100微波的程序，时间逐秒递减至“0:01”结束后跳到第二程序烧烤的继续运行直至结束）。



- a.自动菜单程序不能设置为多段功能烹调程序。
- b.该功能常用于烹饪稀饭、煲汤等需要调节火力大小的食物。

11、预约功能设置

- ①在时钟状态下，如“8:28”，按正常操作输入烹调程序及烹调时间后；
- ②按住“时钟设定”键3秒，即进入预约功能状态；
- ③旋转“时间重量自动菜单”键，输入要预约启动的小时；
- ④再按“时钟设定”键一次，进入预约分钟设定；
- ⑤旋转“时间重量自动菜单”键，输入要预约启动的分钟；
- ⑥最后按“时钟设定”键一次，即进入预约功能状态，显示回复到当前时钟继续运行。



- 查看预约工作时间，按住“时钟设定”键，显示设定的预约工作时间，松开“时钟设定”回复到当前时钟时间。
- a.要立即开始烹调工作，按“启动”键；
 - b.要取消预约时钟功能，按“暂停/取消”键。

12、功能提示

- a.每次有效的输入操作有“哔”一声蜂鸣响声提示。
- b.每个程序（倒计时）工作完后，应有“哔”、“哔”、“哔”蜂鸣响声提示，并且显示屏上显示为“END”状态，若不按“暂停/取消”键或不打开门，显示屏每隔3分钟，蜂鸣响声提示，按“暂停/取消”键或打开门，显示屏显示时钟状态。
- c.微波炉在微波火力烹调状态时，按“微波火力”键，即显示当前进行的烹调火力，松开后将显示剩余烹调时间。

13、儿童安全锁功能设定

- a.在时钟状态下，按“暂停/取消”键3秒，蜂鸣声响“哔”声音，显示屏上显示为“🔒”状态。安全锁被锁上，微波炉便不能操作。
- b.解除儿童安全锁功能：按“暂停/取消”键3秒，蜂鸣声响“哔”声音，显示屏“🔒”消失，安全锁被解除。



- 1.若在设置功能程序时，相隔2分钟未继续输入则恢复到时间状态。
- 2.“启动”键，只有在以下二种条件中任一情况下才是有效的：
 - a.关上炉门2分钟之内；
 - b.触按“暂停/取消”键后2分钟之内。否则，启动功能键被锁住，触按无效。

14、门控制：

门打开炉灯不亮。如果微波炉在工作状态，那么工作停止，效果等同于触摸了一次“暂停/取消”键，关闭后仍处于暂停状态，触摸“启动”键可再启动。

15、风扇延时功能

微波炉停止工作后，风扇会持续运转2分钟。



此种方式可大大降低内部电器元件的温升，达到延长微波炉使用寿命的作用，同时降低了橱柜内的温度，对安全更有保障。

16、省电功能：

若在时钟状态下，未进行任何操作，一段时间后全部显示自动关闭，关闭状态下按任何键可打开显示屏。

HW25800K-03G



(图5)




(图6)

按此键 一次，微波炉即自动运转。如烹调时曾打开炉门或曾按 键，则须再次按动 键令微波炉继续运转。


烹调前：按一次 可消除已输入的指示。

烹调时：按一次 可暂停中止烹调程序。再按一次 即将所输入的指示消除，而时钟设定的时间或冒号则会出现在显示窗上。

未输入操作时按一次 可进入待机节电模式。

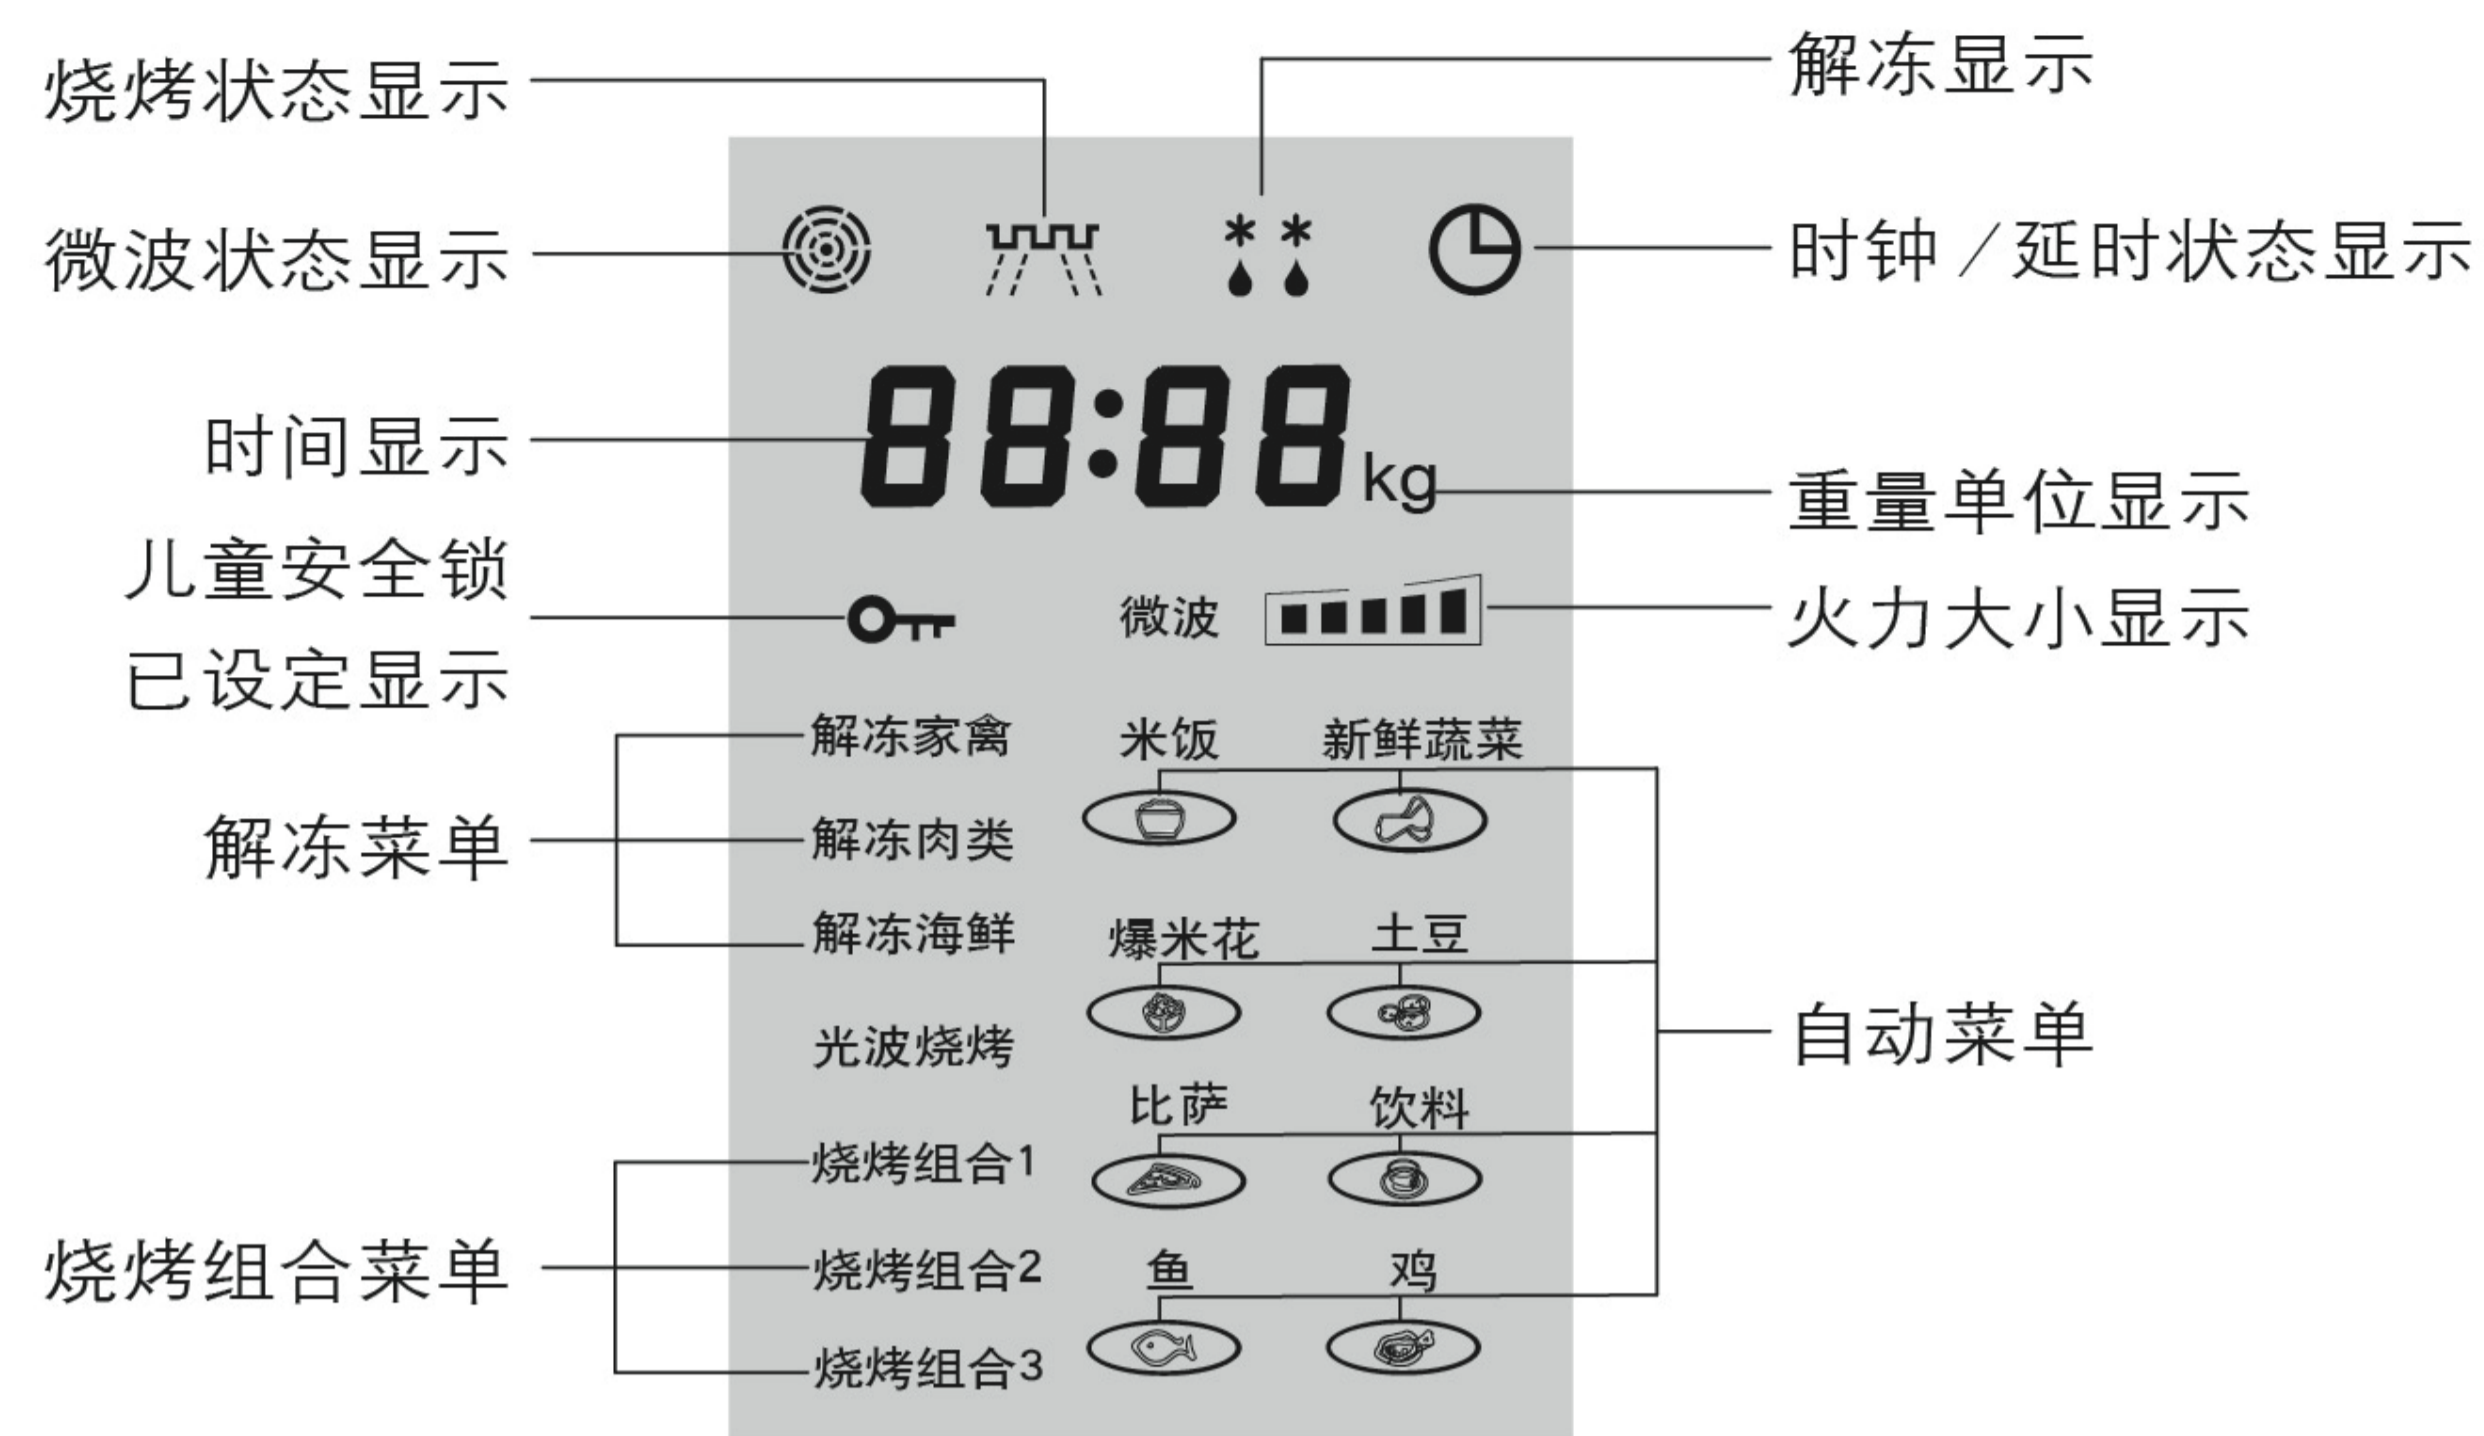

(图7)

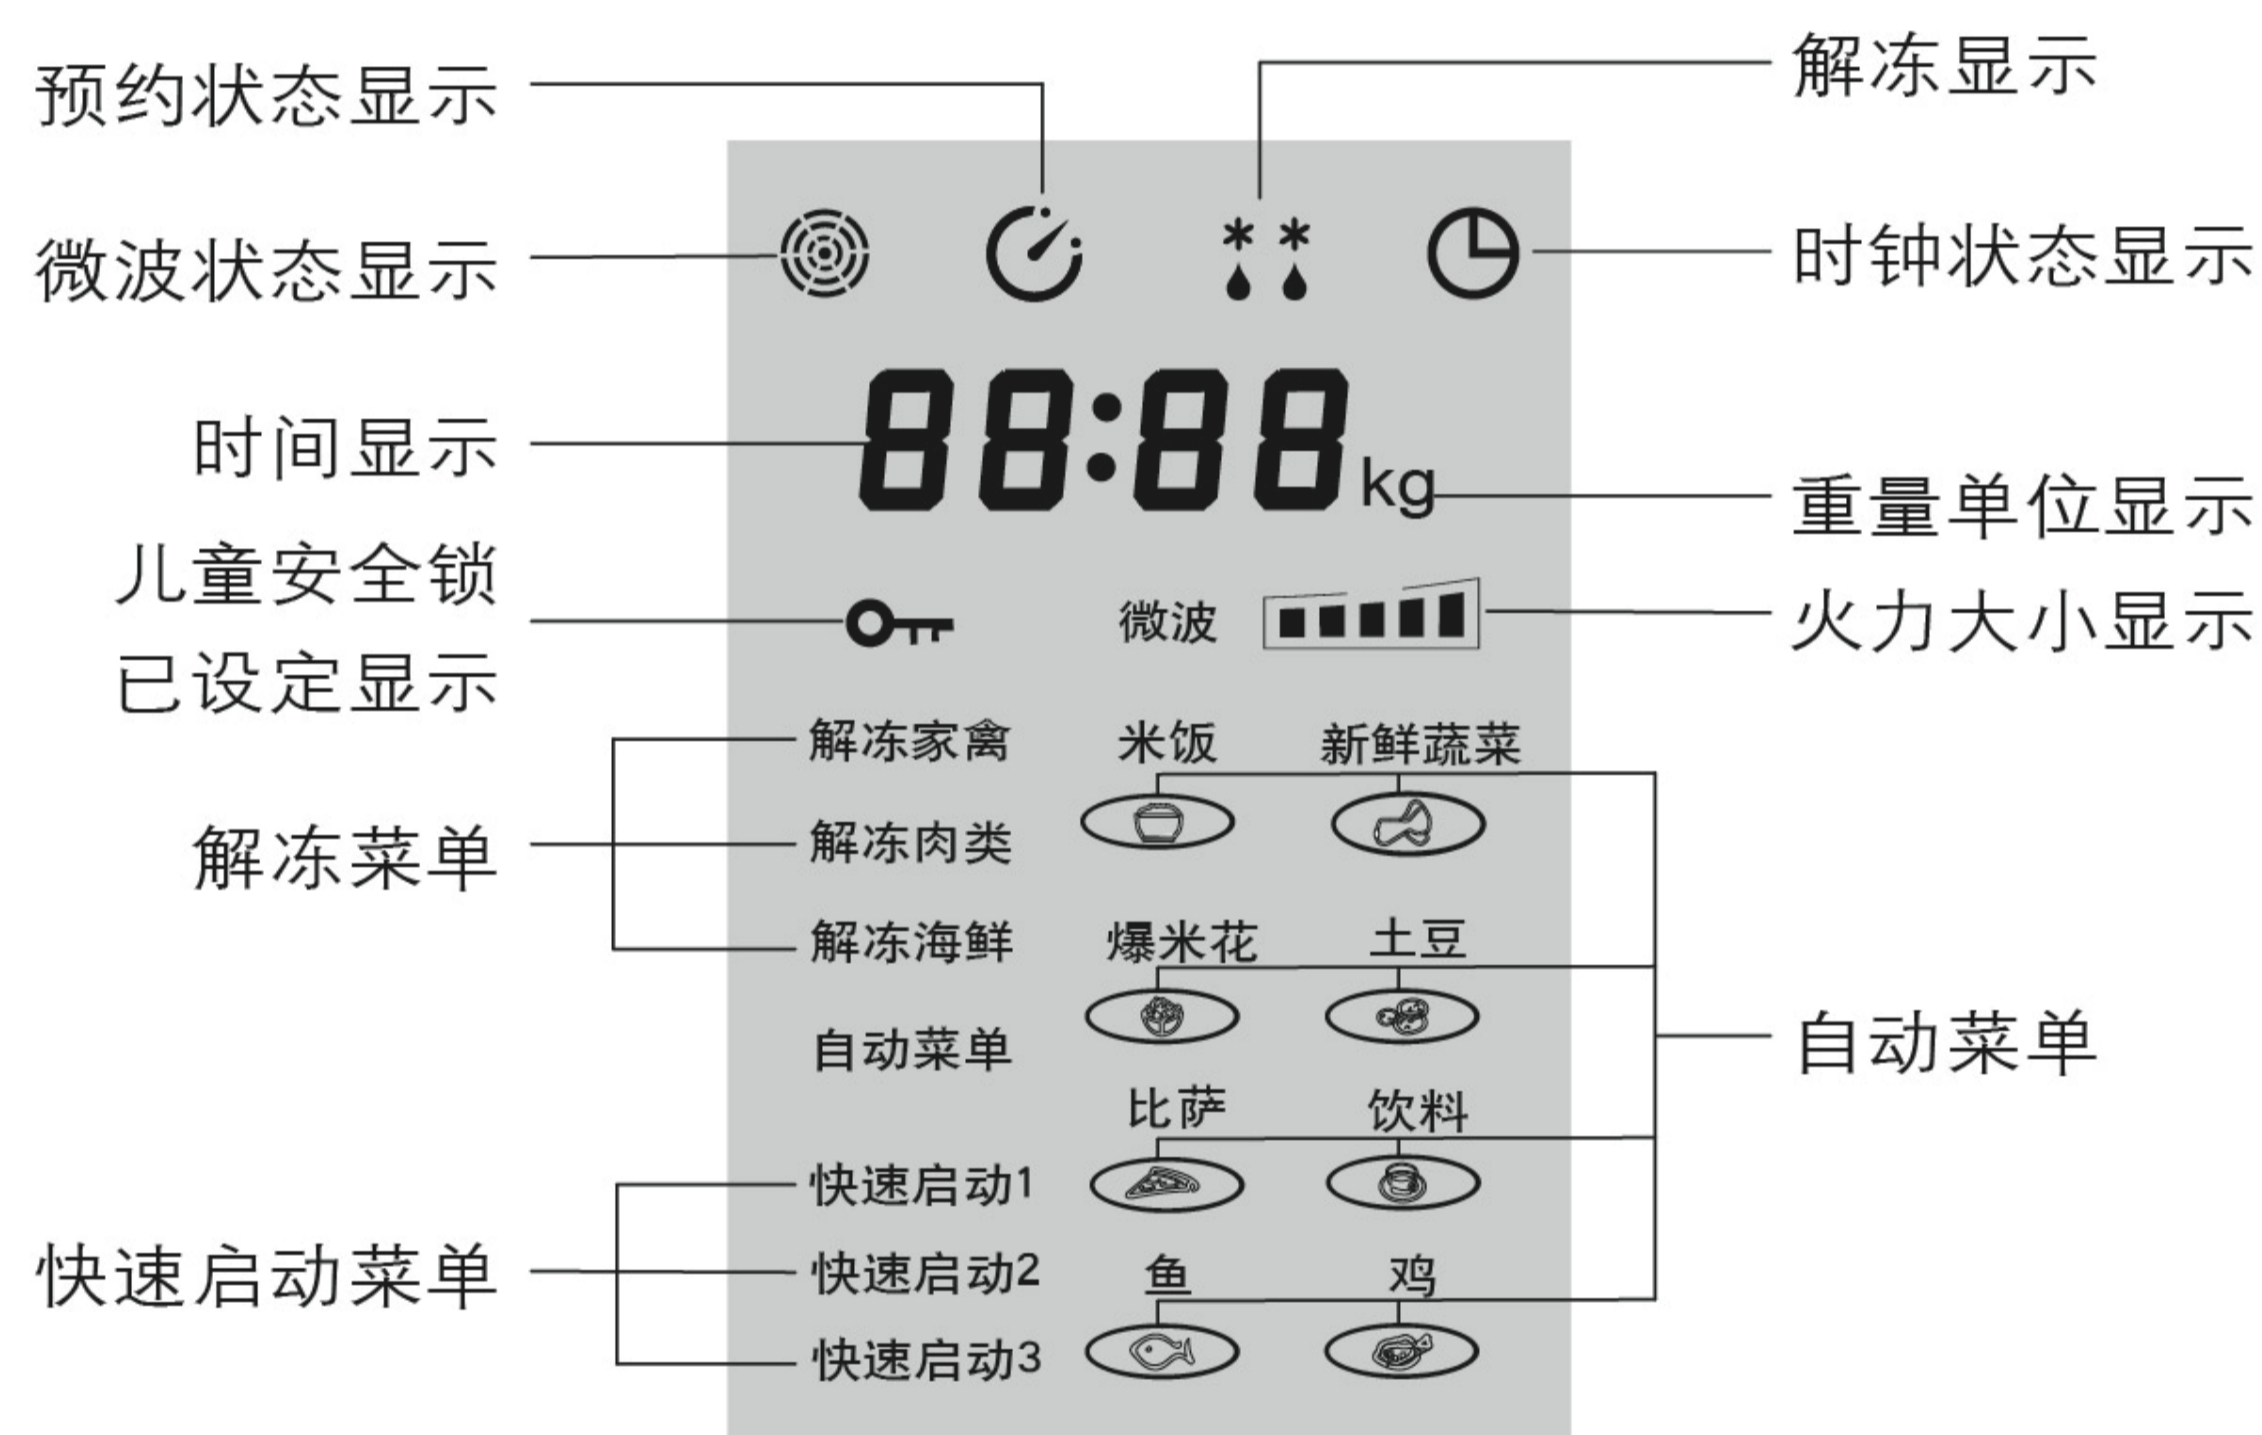

(图8)

1.通电后显示窗会全部点亮显示3秒钟，之后显示窗中的 会闪烁显示。即可输入时钟或设置烹调程序。

2.时钟功能设置

在闪动显示 状态下，按下 键一次，为时钟输入状态，再按 输入小时；再次按键 为分钟设置，再次按 输入分钟；最后按一次 键进行确认(或延时5秒)，完成设置，时钟进入运行状态，并屏显当前时间。

A 修改或重新输入时间，请重复上述步骤。

B 只要不拔掉电源，时钟会连续运转。

C 该时钟为24小时制。

3.微波火力设置

触按 键，依次显P100 → P80 → P60 → P40 → P20→P100循环；此时按 输入时间，按 键即以设定火力和时间进行工作。

P100 ：100%微波火力(高火)煮沸清水，烹调鲜果、蔬菜，烹调蜜饯糖果。

P80 ：80%微波火力(中高火)烹调鱼及海鲜类，烹调肉类、家禽类及蛋类。烹调糕饼。

P60 ：60%微波火力(中火)烹调蛋糕，焖煮食品，溶化黄油、巧克力。

P40 ：40%微波火力(中低火)烹调较韧的肉块，煲汤或炖品，软化黄油，解冻。

P20 ：20%微波火力(低火)食物保温，软化冰淇淋。

4.快速启动

按 键，显示窗会依次显示 0:30-1:00-1:30，0:30，默认的工作时间为30秒。

1:00，默认的工作时间为1分钟。

1:30，默认的工作时间为1分30秒。

按 键，即以选定的时间程序进行高火工作。

5.光波烧烤

按 键，显示窗会显示“光波烧烤”字样，此时按 键，选定所需的工作时间，按 键，即以选定的时间进行工作。

烧烤特别用于烧烤薄块的肉类及海鲜的烘烤，如：牛扒、猪扒、串烧、香肠和鸡翼等，也适合烧烤三文治及烤菜。(W25800S-03G/W25800S-03GE型号的产品不具备此功能。)

6.烧烤、微波组合

按 键，显示窗会依次显示“烧烤组合1—烧烤组合2—烧烤组合3”

烧烤组合1 30%时间微波输出，70%时间烧烤管发热，烧烤效果最佳，适用于西餐牛扒等。

烧烤组合2 55%时间微波输出，45%时间烧烤管发热，微波速度较快，适用于肉类。


烧烤组合3 70%时间微波输出，30%时间烧烤管发热，微波速度最快，适用于整只鸡、鸭、鹅使其内部煮熟。


 

当选定所需的功能时，按 键选定所需的工作时间，按 键，即以选定的时间进行工作。(W25800S-03G/W25800S-03GE型号的产品不具备此功能。)

7.自动解冻




按 键，依次循环显示“解冻家禽-解冻肉类-解冻海鲜”，解冻家禽 ，适合解冻家禽类，解冻范围为0.2kg~2.0kg。

解冻肉类 ，适合解冻肉类，解冻范围为0.1kg~2.0kg。






 



解冻海鲜 ，适合解冻海鲜类，解冻范围为0.1kg~0.9kg。


选择所需的解冻类型后，按   键调整解冻重量。再按  键，即以所选定的程序进行工作。(在解冻过程中，如听到“哗哗”，“哗哗”，“哗哗”的蜂鸣响声，每两声为1秒，应打开炉门将食物翻身、搅拌或重新排放。对于已解冻的部分请及时取出，以免把食物煮熟)。


8. 暂停/取消


按  键可以取消输入火力，烹调或解冻时间及程序，微波炉在工作过程中，按  键一次(或将炉门打开)为暂停工作，按  两次为程序取消，回到待机状态。


9. 自动菜单

按   的“-”键可调出自动菜单，再按   键选择A1-A8菜单。按  键确认自动菜单，按   键输入需加热食物的重量，再按  键开始加热。(W25800S-03G / W25800S-03GE型号的产品按  键可调出自动菜单。):


A.1米飯 ：适合煮0.15kg~0.60kg的米饭


A.2新鲜蔬菜 ：适合煮0.1kg~0.5kg的蔬菜

A.3爆米花 ：适合爆0.1kg的玉米

A.4土豆 ：适合煮0.15kg~0.60kg的土豆

A.5比萨 ：适合加热重约150/300克的比萨

A.6饮料 ：适合加热250克、500克、750克左右重量的饮料








 
A.7鱼 ：适合蒸0.1kg~0.5kg鱼

A.8鸡 ：适合烤0.2kg~1.2kg的鸡肉(工作至一半时间时暂停翻转)





 

 




- 1.以上设置的程序是按食物在20℃~25℃(牛奶是在4℃~6℃)温度下设计的。若食物处于不同的温度下煮食效果会有所不同，请自行调整煮食时间。
- 2.在煮米饭时建议使用带盖的微波炉专用容器，以防止在煮食过程中水分蒸发和米饭溢出。
- 3.在蒸鱼时，建议用一层保鲜纸覆盖食物，以防止在煮食过程中水份蒸发。
- 4.食物的形状，重量及温度会影响到最终的效果。在使用自动菜单时请遵照以上提到的条件，若最终结果不能满意，请自行调节。
- 5.自动菜单烹调的效果受个人的煮熟习惯，食物的摆放，形状大小，份量及电网电压的高低等因素的影响，如有不熟再根据实际情况适当调整烹调时间。

10. 四段连动程序设定



此功能可使您连续设定四个火力段，例：微波最高火力工作10分钟后烧烤工作10分钟，则操作顺序为：按  键屏显100P  时按   键，设定显示时间为“10:00”，再按  键后，通过   键将时间设置为“10:00”，此时按  键即以设定的程序进行工作(先执行第一段程序，时间逐秒递减至“0”后跳到第二程序继续运行---运行直至结束)。




- 注：①自动菜单功能不能用于连动设定 ②选二段程序响两声，选三段程序响三声。
③该功能常用于烹饪稀饭褒烫等需要调节火力大小的食物。

11. 延时功能操作(预约功能)



在时钟状态下，如“8:28”，按正常操作输入程序及烹调时间后，按住  键3秒，即进入延时功能状态，通过   键，输入要延时启动的小时，再按  键，进入分钟设定，再通过   键，输入要延时启动的分钟，设定完成后，按  键进行确认(或5秒钟后自动进入)即进入延时功能状态，显示器回复当前时钟时间，继续运行。查看延时工作时间，按住  键，显示设定的延时工作时间，松开  键回复到当前时钟时间。

进入延时功能后：

 

 


- a.要立即开始烹调工作，按  键；
- b.要取消延时时钟功能，按  键。

(W25800S-03G/W25800S-03GE型号产品，上述  键由  键表示，直接按  键即可。)



12. 功能提示

- a.每次有效的输入操作有“哔”一声蜂鸣响声提示。如果是无效的按键，则提示一声低沉的蜂鸣声。
- b.每个程序(倒计时)工作完后，应有“哔哔”蜂鸣响声提示，每“哔哔”声为1秒，共3秒，并且显示器上显示为“END”状态，若不按  键或不打开门，显示器每隔3分钟，蜂鸣响声提示，打开门，显示器显示  或时钟状态。

13. 儿童保险锁功能设定

在  或时钟状态下，按下  键3秒。此时，蜂鸣声响“哔”声音，显示器上显示为  状态。保险锁被锁上，微波炉便不能操作。解除儿童保险锁功能：按下  键3秒，蜂鸣声响“哔”声音，显示器  消失，保险锁被解开。



- 1.若在设置功能程序过程中，相隔2分钟未继续输入程序则自动复位，并恢复到“:”或时间状态。
- 2.“启动”键，只有在以下两种条件中的任一情况下才是有效的：
 - a: 关上炉门2分钟之内。
 - b: 触按“暂停/取消”键后2分钟之内，否则，启动功能键被锁住，触按无效。
- 3.设置时间时，可长按   键。


14. 省电模式：

在“:”或时钟状态下，不进行任何操作一段时间后显示屏会自动关闭。显示屏关闭状态下按任何按键可以打开显示屏。

15. 风扇延时功能

微波炉停止工作后，风扇会持续运转2分钟。


注：此种方式可大大降低内部电器元件的温升，达到延长微波炉使用寿命的作用，同时降低了橱柜内的温度，对安全更有保障。

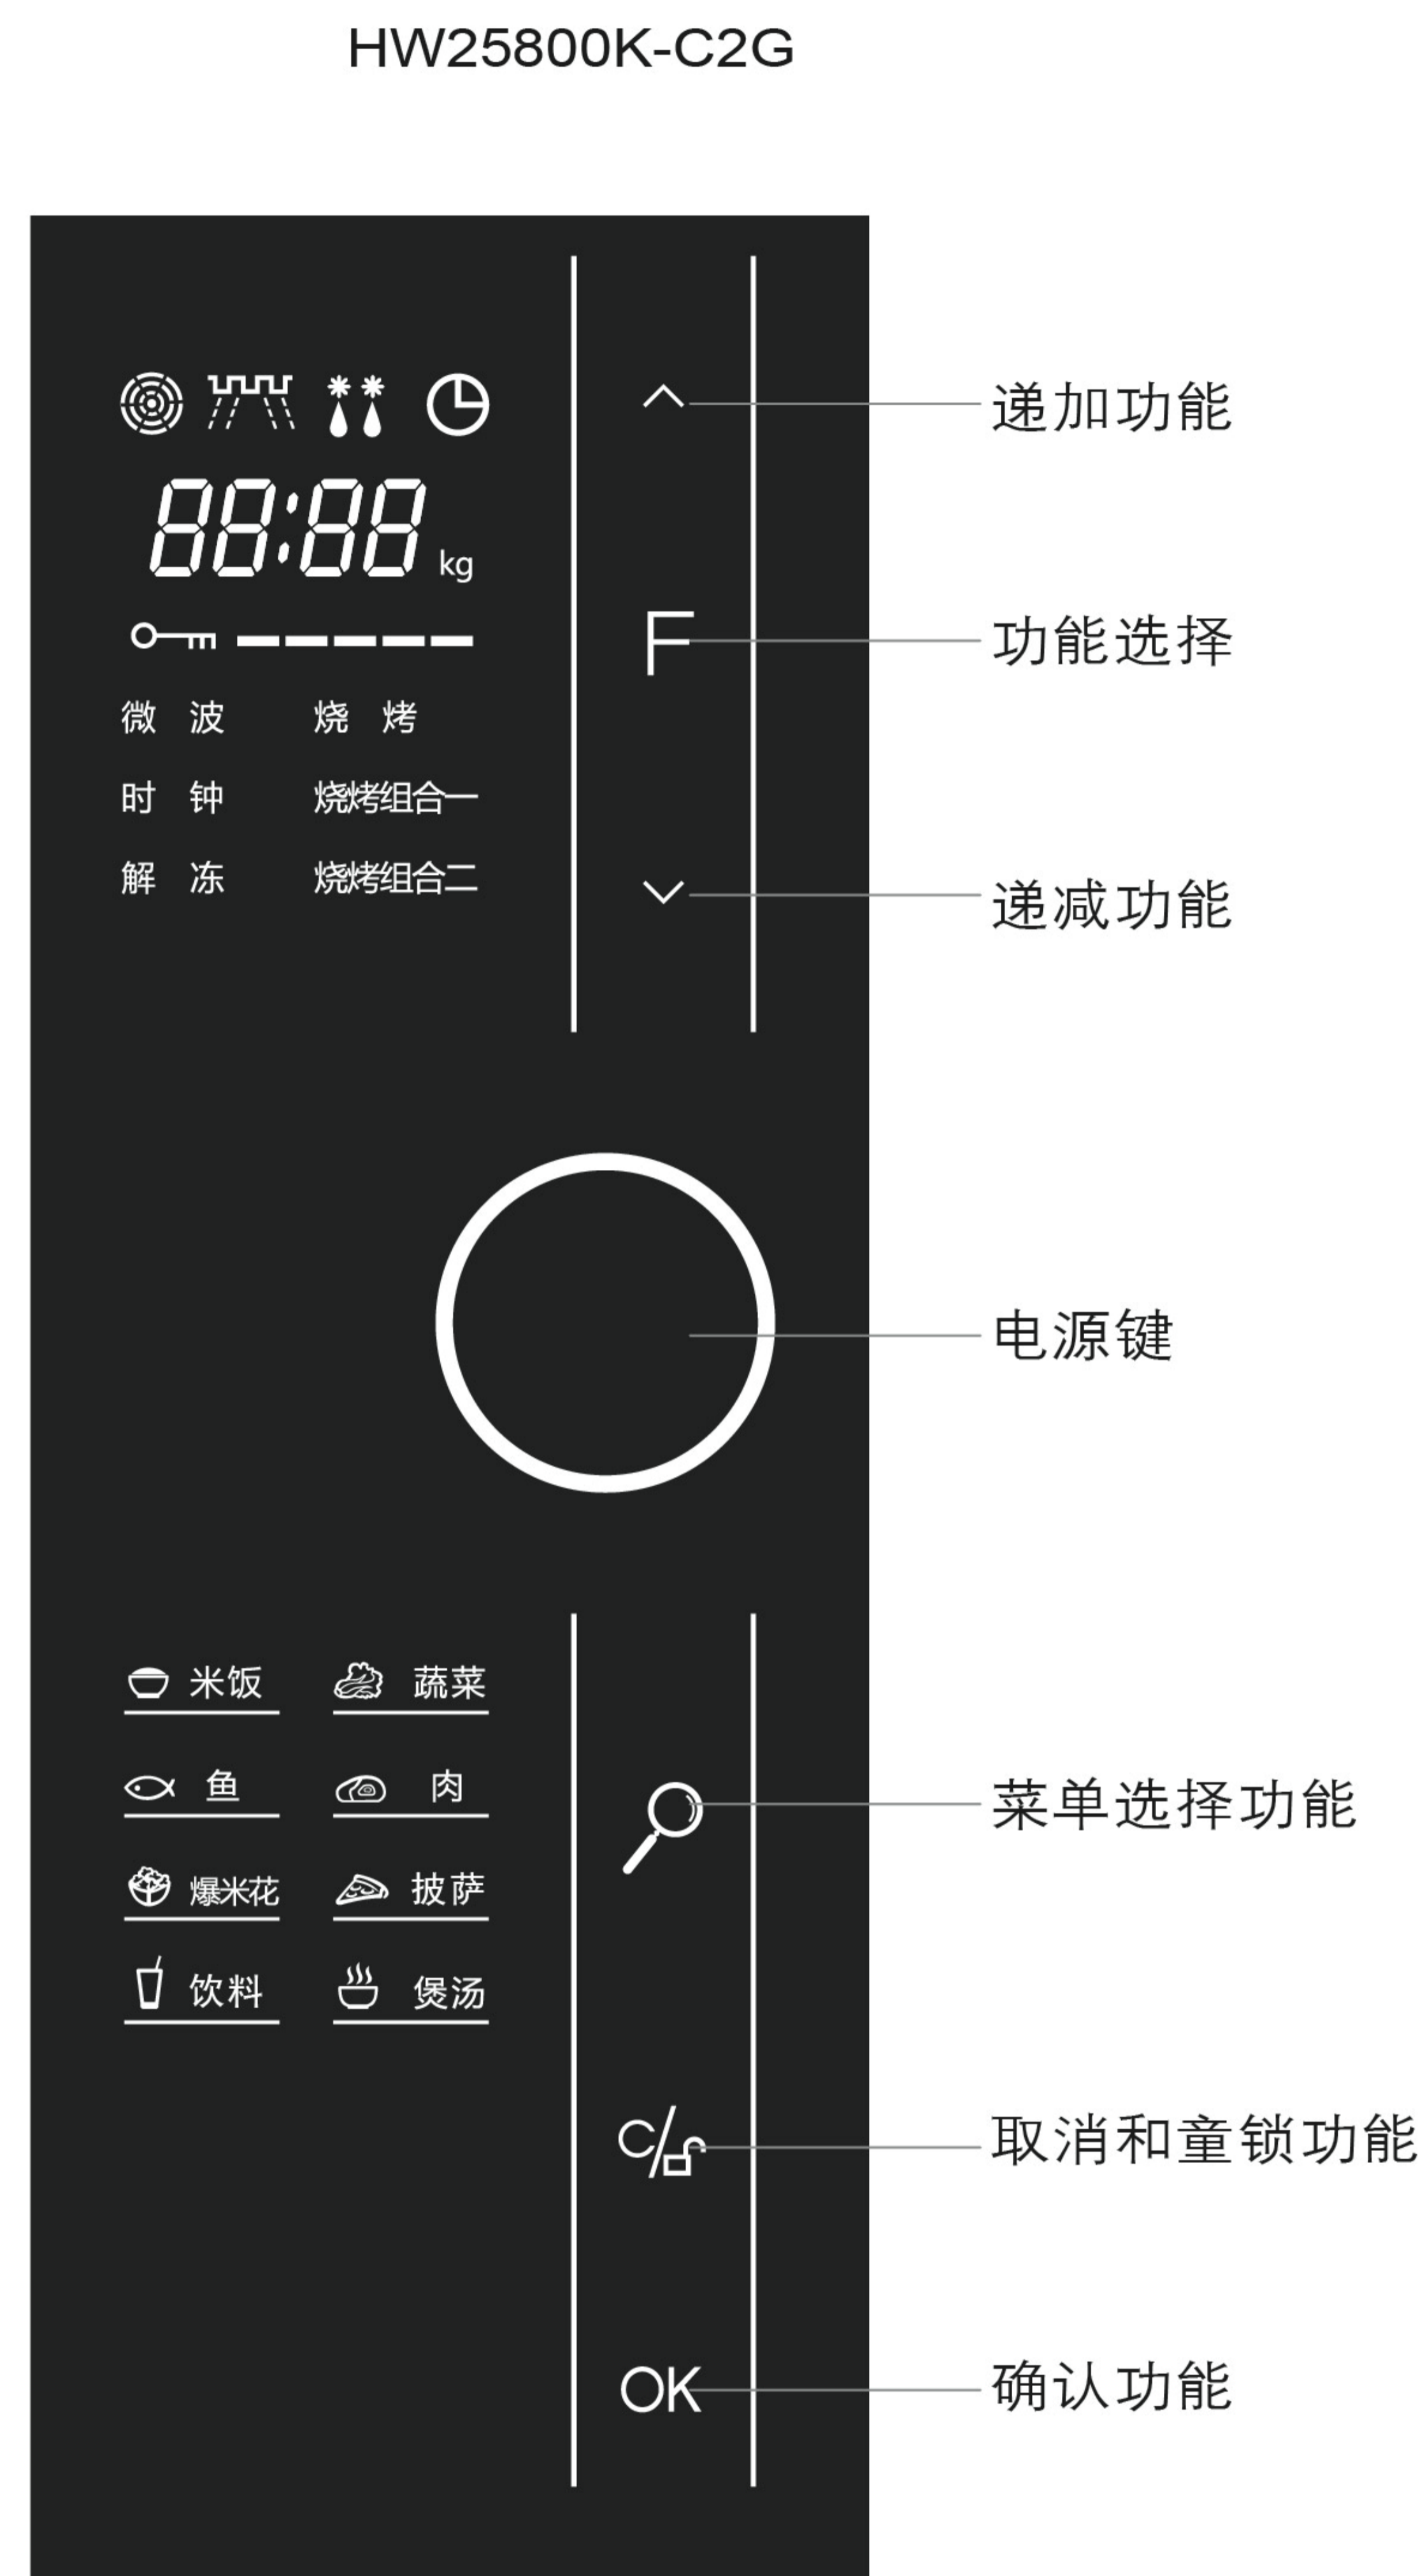

(图4)



(图5)

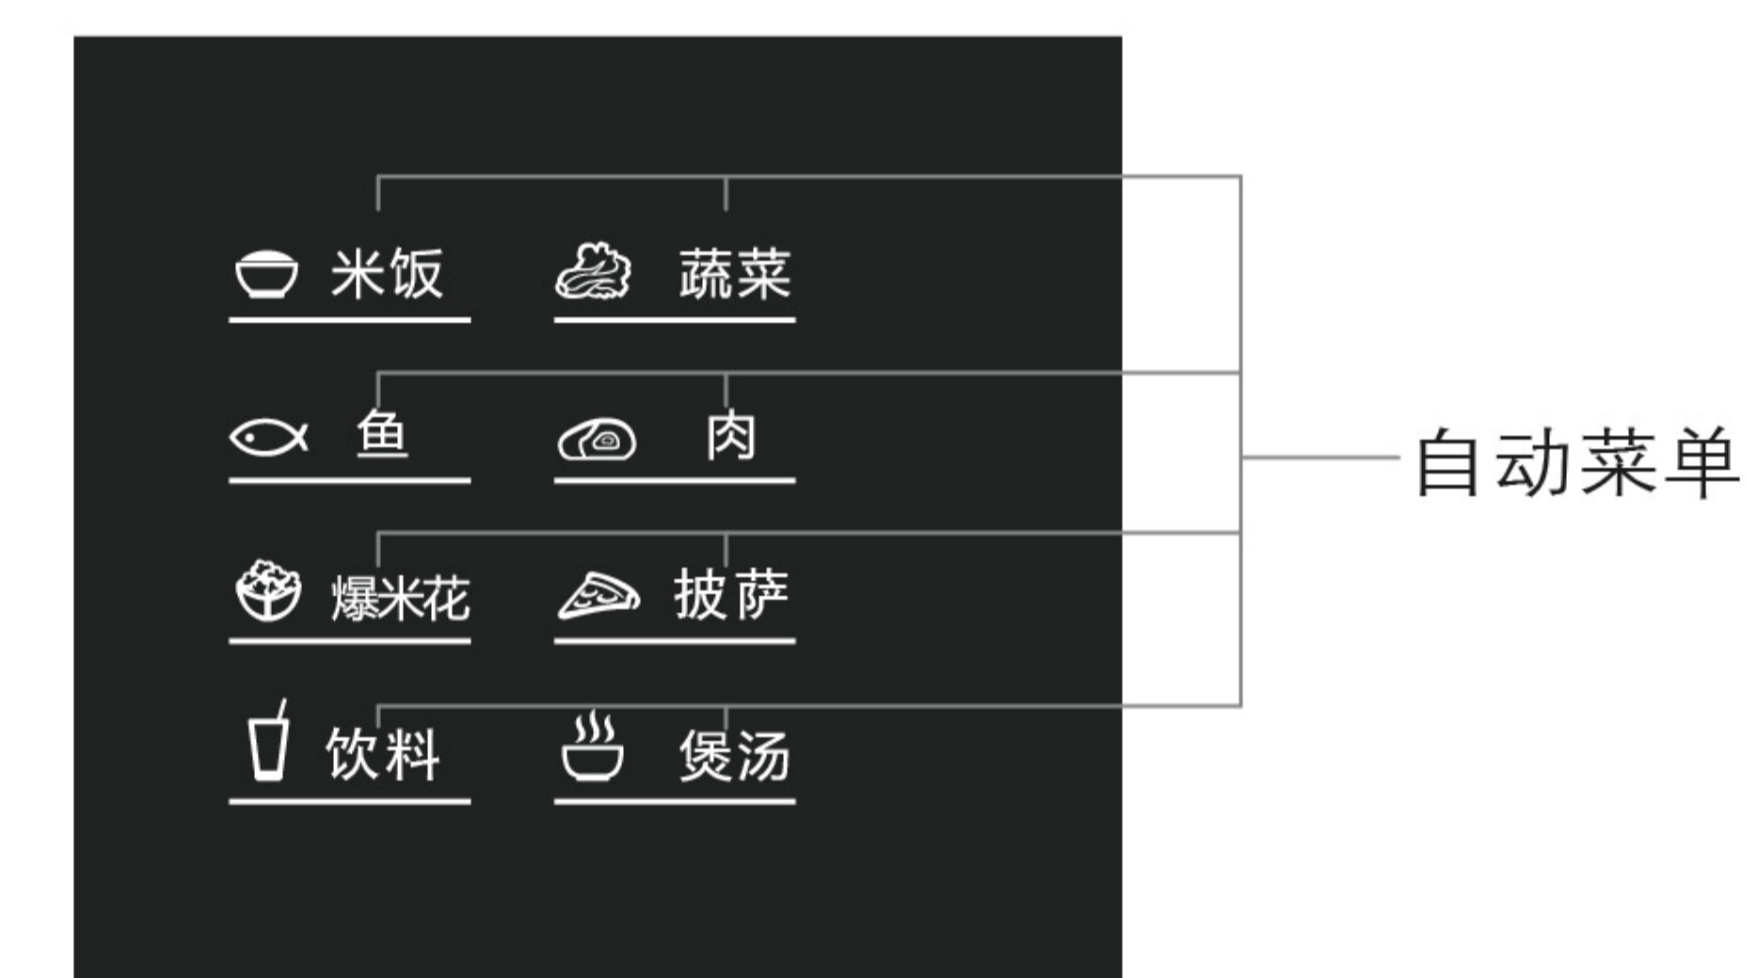

(图6)

1、通电

通电显示屏全部点亮1秒后蜂鸣器响1声，显示屏显示：“⊕”，当前时钟时间0:00，时钟开始计时，进入待机状态。

任何状态下，触摸电源键一次，进入待机状态。

省电功能下，除触摸电源键外其它按键无效，触摸一次电源键恢复到待机状态。

注：待机状态：显示屏只显示当前时间和“⊕”图标。

省电功能：显示屏全部熄灭。


2、微波烹调的设置

① 选择功能：在待机状态下，触摸功能F键，使显示屏显示：“⊙”（闪烁）、“P100”、“微波”（闪烁），“-----”和其它基本功能图标点亮。



② 设置火力：通过“^”键或“v”键可以调整微波火力大小。微波功率循环为“P100 ⇌ P80 ⇌ P60 ⇌ P40 ⇌ P20”，设置好相应的微波火力后，触摸“OK”键确认，时间显示0:10。

③ 设置时间：通过“^”键或“v”键设置微波工作的时间，触摸“OK”键确认，微波开始工作。

3、烧烤烹调的设置

- ① 选择功能：在待机状态下，触摸功能F键，使显示屏显示：“”（闪烁）、“GrL”、“烧烤”（闪烁），其它基本功能图标点亮。
- ② 设置时间：触摸“^”键或“v”键设置烧烤工作的时间，触摸“OK”键确认，烧烤开始工作。

4、烧烤组合烹调的设置


- ① 选择功能：在待机状态下，触摸功能F键，使显示屏显示：“”（闪烁）、“”（闪烁）、“Co-1”、“烧烤组合一”（闪烁），其它基本功能图标点亮。
- ② 设置时间：触摸“^”键或“v”键设置工作的时间，触摸“OK”键确认，烧烤组合一开始工作。

（烧烤组合二的操作方法同上，触摸功能F键，显示为“烧烤组合二”即可设置时间）



烧烤组合一 适合烹调肉类、整鸡、鸭等食物

烧烤组合二 适合烹调西餐、牛扒等食物

 

5、解冻烹调的设置

- ① 选择功能：在待机状态下，触摸功能F键，使显示屏显示：“”（闪烁）、“0.10”、“kg”、“解冻”（闪烁），其它基本功能图标点亮。
- ② 设置重量：触摸“^”键或“v”键设置解冻的重量，重量循环为“0.10 ⇌ 0.20 ⇌ 0.30 ⇌ …… 1.70 ⇌ 1.80”，触摸“OK”键确认，解冻开始工作。


6、时钟设置功能（24小时制）

- ① 选择功能。在待机状态下，触摸功能F键，使显示屏显示：“”（闪烁）、小时位(闪烁)、“时钟”（闪烁），其它基本功能图标点亮。
- ② 设置小时位。触摸“^”键或“v”键调整小时位到需要设置的时间，触摸“OK”键确认。显示屏显示：“”（闪烁）、分钟位(闪烁)、“时钟”（闪烁），其它基本功能图标点亮。
- ③ 设置分钟位。触摸“^”键或“v”键调整分钟位到需要设置的时间，触摸“OK”键确认。时钟设置完成，回到待机状态。

例如：当前为“0:00”，需设置时间为“12:30”。

触摸“F”键六次，显示屏显示：“”（闪烁）、“0:00”（“0:”闪烁）、“时钟”（闪烁），触摸“^”键或“v”键调整小时位到12，触摸“OK”键确认，“12:00”（“:00”闪烁）、其它不变，触摸“^”键或“v”键调整分钟位到30，触摸“OK”键确认，显示屏显示：“12:30”、“”，时钟设置完成。

7、菜单烹调的设置

- ① 选择功能：在待机状态下，触摸菜单功能  键可以选择不同的菜单。
- ② 设置重量。触摸“^”键或“v”键设置选择菜单的不同重量。触摸“OK”键确认，开始进行烹调。

A.1 米饭：适合煮0.15kg-0.60kg的米饭

A.2 蔬菜：适合烹调0.10kg-0.50kg的蔬菜

A.3 肉：适合烹调0.20kg-0.60kg的肉类（工作至蜂鸣器响时，将食物翻转）

A.4 披萨：适合加热重约0.30kg/0.50kg的比萨


A.5 煲汤：适合烹调1.00L、1.50L、2.00L的汤

A.6 饮料：适合加热1-3杯容量为230ml的液体或饮料

A.7 爆米花：适合爆0.07kg/0.13kg的玉米

A.8 鱼：适合蒸0.20kg-0.60kg的鱼

例如：对0.30kg的米饭进行烹调。

 

 
 
在待机状态下，触摸菜单功能  键，使显示屏显示：“0.15kg”、“kg”、“米饭”（闪烁），其它菜单图标点亮。



触摸“^”键或“v”键设置米饭的重量，设置重量为0.30kg，重量调整好后，触摸“OK”键确认，米饭开始烹调。（其它菜单烹调的设置与米饭类似）



- 1.以上设置的程序是按食物在20°C-25°C(牛奶是在4°C-6°C)温度下设计的。若食物处于不同的温度下煮食效果会有所不同，请自行调整煮食时间。
- 2.在煮米饭时建议使用带盖的微波炉专用容器，以防止在煮食过程中水份蒸发和米饭溢出。
- 3.在蒸鱼时，建议用一层保鲜纸覆盖食物。以防止在煮食过程中水份蒸发。
- 4.食物的形状，重量及温度会影响到最终的效果。在使用自动菜单时请遵照以上提到的条件，若最终结果不能满意，请自行调节。
- 5.自动菜单烹调的效果受个人的煮熟习惯，食物的摆放，形状大小，份量及电网电压的高低等因素的影响，如有不熟再根据实际情况适当调整烹调时间。

8、儿童保险锁功能设置

  上锁：在待机状态下，触摸“”键3秒左右，显示屏显示：当前时钟、“”、“”，儿童保险锁设置成功，此时除“”和“电源键”外，其余按键无效。

解锁：在上锁状态时，触摸“”键3秒左右，显示屏显示：当前时钟、“”。儿童保险锁解除。

9、多段功能的设置

多段功能设置时，微波、烧烤、烧烤组合一、烧烤组合二这四个功能可以设置为多段。连续两次不可同时设置为P100微波、或烧烤、或烧烤组合一、或烧烤组合二。多段功能最多可设置三段。例如：煮粥时进行不同微波火力的加热。

- ①：设置第一段功能：按微波设置方法设置P100微波火力6分钟。（不按OK键。）
- ②：设置第二段功能：再次按照微波设置方法设置P40微波火力5分钟。（仍不按OK键）
- ③：设置第三段功能：再按照微波设置方法设置P20微波火力4分钟，然后按OK键，开始工作。

注：该功能常用于烹饪稀饭、煲粥、煲汤等需要调节火力大小的食物。

10、快速启动功能的设置

在待机状态下，触摸“^”键或“v”键，每触摸一次微波时间会增加30秒，最大时间为10分钟，设置好时间后，触摸“OK”键确认，开始微波工作。微波火力默认为P100。

11、取消和暂停功能

在功能设置时，触摸“C/L”键一次，取消当前功能的设置，回到待机状态。
在开始工作后，触摸“C/L”键一次，暂停工作，触摸“OK”键再启动，或再触摸“C/L”键一次回到待机状态。

12、自动返回和省电功能

在设置功能时，未进行任何有效按键操作2分钟，自动返回到待机状态。
在待机状态未进行任何有效按键操作一段时间后，自动关闭显示，按电源键可开启。

13、查询功能

在工作时，触摸F键一次，显示屏显示：“⌚”、当前时钟时间，5秒钟后自动返回到工作界面。

14、风扇延时功能

微波炉停止工作后，风扇会持续运转2分钟。
注：此种方式可大大降低内部电器元件的温升，达到延长微波炉使用寿命的作用，同时降低了橱柜内的温度，对安全更有保障。

15、门控制

门打开炉灯不亮。如果微波炉在工作状态，那么工作停止，效果等同于触摸了一次“C/L”键，关门后仍处于暂停状态，触摸“OK”键可再启动。



- 1、烹调结束，显示屏显示：“End”，并蜂鸣器响，且每隔3分钟响一次。触摸任意键回到待机状态。
- 2、“^”键或“v”键，设置时间或重量时，可间隔触摸，也可一直触摸着按键。

16、OK键保护锁

上锁条件：“在待机状态下”+“关门”+“分钟内未按C/L键。”

解锁三种方法：①拉开门；②按C/L键；③按电源键。

微波和烧烤

微波具有穿透性，可以穿透到食物的内部，能够较快的将食物煮熟，但不能使食物表面变黄、变脆。烧烤是光波管辐射加热，能够将食物表面烤成焦黄色，增加其色泽感，但若食物较厚，有可能是表面已经烤焦了，内部却还未烤熟。

故而使用微波炉的烧烤组合功能，可以根据食物的特点，结合利用微波与烧烤两种加热方式的优点，达到最满意的效果。



警告：在使用微波火力时不可炉内无食物工作，且不可使用金属器皿，以免造成打火现象或发生危险。

解冻说明

将冷冻食物解冻是微波炉的一大特点，微波炉解冻比烤箱解冻快，比室温解冻安全，它不会助长有害细菌的滋生。微波单边穿透食物的厚度不能超过4cm，若是解冻较厚的大块食物时，要不时的翻转，并且要将已解冻的部分取出，以取得较好的解冻效果。否则有可能会造成食物表面已发热，而食物中心仍未解冻。

1. 解冻过程中翻转食物是必要的以保证食物解冻均匀。
2. 解冻的效果以刀能够容易切动效果为佳。
3. 一般解冻食物比煮食物时间相对要长一点。
4. 经解冻后的食物请尽快食用，不宜再放入冰箱内冷冻。

解冻食物方法

★ 排骨

- 用铝箔纸将排骨的较细端裹起来。
- 将排骨单层铺在浅盘上并将最薄的部分放在中央，若排骨连成一块，应尽可能地将其分散。
- 解冻至中途时，把排骨翻转并包裹已解冻的部分。
- 重新放置，关上炉门继续解冻。
- 在解冻之后，让铝箔纸包裹5分钟~15分钟。

★ 牛肉(碎肉)

- 放置牛肉在一个浅盘上，用铝箔纸包裹牛肉的边缘。
- 解冻至中途时，把食物翻转，拿出已经解冻的部分，再用铝箔纸重新包裹边缘。
- 关上炉门继续解冻。
- 在解冻之后，让铝箔纸包裹5分钟~15分钟。

★ 烤肉(牛肉/猪肉/羊肉)

- 用铝箔纸包裹食物边缘。
- 将其放置于浅盘中。
- 解冻至中途时把食物翻转并包裹已解冻部分。
- 关上炉门，继续解冻。
- 在解冻之后，让铝箔纸包裹10分钟~30分钟。

★ 家畜

- 除去原来的包装，用铝箔纸裹住翅膀和脚。
- 将其胸脯朝下放置于浅盘上。
- 解冻至中途把食物翻转并包裹已解冻部分。
- 关上炉门，继续解冻。
- 在解冻之后，让铝箔纸包裹10分钟~30分钟。

★ 鸡块（鸡翅和鸡腿）

- 用铝箔纸包裹暴露的骨头。
- 将鸡块放置在浅盘上。
- 解冻至中途时把鸡块翻转并包裹已解冻的部分，重新放置。
- 关上炉门，继续解冻。
- 在解冻之后，让铝箔纸包裹5分钟~30分钟。

微波烹调技巧

★ 食品的放置：

较厚向外，较薄向内(中央)。

★ 决定烹调时间：

开始时先用较短的烹调时间，然后再根据烹调后的情况而追加时间。若烹调时间过长，会引起食物烧焦、起火。

★ 食品的覆盖：

用耐微波保鲜纸、盖或纸巾把食品覆盖好。这样可以防止汁液飞溅，以及帮助食物均匀烹调。

★ 食品的局部遮盖：

以防止肉块细薄部分烹调过度，解冻时应用铝箔纸把这些部分包好。

★ 食品的搅拌：

必要时于烹调过程中由外至内搅拌食物一至两次。

★ 食品的翻转：

烹调鸡腿、汉堡或扒类时，时间过半翻转，以达均匀的烹调效果。

★ 食品的重新放置：

在烹调中途置换食品的位置，如外围及中部食品的交流，以及上层和下层的交换，以达均匀的烹调效果。

★ 食品的搁置：

烹调之后，应搁置一段适当时间。若有可能，应将食物由炉中取出并搅拌。搁置时加盖，可让食物完全的烹调。

★ 熟度检查：

烹调后食品之颜色及软硬，可作为测试其生熟程度，方法如下：整个食品是否都有蒸气溢出，而非只是局部或边沿；家禽关节部分是否容易撕开；肉块或家禽已无血可见；鱼肉已煮熟(非透明)，且可用刀叉轻易撕碎。

★ 湿气的凝聚：

湿气凝聚是微波炉烹调的正常现象。烹调中，食物内部的水份和湿气受热蒸发，使炉腔内的含水量增加。一般来说，加盖的食物比不加盖的食物所凝聚的湿气较少。故应经常保持微波炉通风畅通无阻。

★ 微波用煎碟：

采用煎碟或可加热之材料用具时，应先用一耐热绝缘体如陶瓷碟把煎碟与陶瓷底板分隔，以免陶瓷底板受热过度而爆裂。而煎碟加热时间也不应超过指定的范围。

★ 微波用保鲜纸：

烹调多油的食物时，由于保鲜纸有溶化的可能，故不可让保鲜纸和食物表面接触。

★ 微波用塑胶厨具：

有些微波炉用的塑胶厨具不宜用来烹调多油或多糖的食物。

清洁与保养

在每次清洁前，先切断电源。

使用过程中，微波炉内部会变得很热。为了避免烫伤，请您等到微波炉冷却以后再做清洁。每次使用之后都应该进行清洁。以免间隔时间太长会给清洁带来不必要的麻烦，长期积攒的污垢可能会无法清洗干净。在某些情况下，严重的污垢甚至会损害电器设备。

★ 微波炉表面：

微波炉表面可用一块沾有中性清洁剂和温水的布清洁，不要使用带有磨损性、腐蚀性的清洁剂，清洁器具。

★ 炉门：

用温热的湿布擦拭门、门窗的两边、密封圈及邻近的部位，不要使用带磨损性、腐蚀性的清洁剂。

★ 控制面板：

在清洁面板时需小心，不要沾过多的水，用一块软布沾适量的水来擦拭(假如控制板被弄湿，请立即用软性干布抹擦)，不要刮，也不要使用磨损性、腐蚀性的清洁剂。

★ 烧烤架：

使用后请及时用中性清洁剂清洗。

★ 内胆：

为了更卫生，在每次使用完后，请用软布沾温水清洁内胆表面和波导管盖，擦去残留的食物渣滓，残留的食物渣滓有可能导致局部过热，不要使用带磨损性、腐蚀性的清洁剂，清洁器具。转盘及转盘支承可用中性清洁剂清洗，晾干后再装上。



微波炉使用一段时间后，炉内可能会出现异味，采用以下三种方法可以消除：

1. 放置一杯柠檬汁在炉中，高火力微波烹调2-3分钟。
2. 放置一杯红茶在炉内，高火力加热2-3分钟。
3. 放置一些橘子皮在炉内，高火力加热1分钟。

维修事项

一、维修前检查

将一杯150ml的水装进玻璃容器里，置于炉内转盘中央，把炉门关妥，让微波炉工作1分钟。

1. 照明灯是否亮？
2. 风扇是否转动？(把手放在前部出风口外)
3. 转盘是否转动？(转盘可沿顺时针或逆时针方向转动)
4. 1分钟后容器内的水是否烧热？

如果以上问题的回答都为“否”，请检查电源插座及保险丝，如果电源插座及保险丝均未出现故障，请立刻与本公司所指定的维修中心联系。

二、维修注意事项

⚠ 注意: 微波辐射!

⚠ 警告: 微波炉内有微波辐射及高压, 除了有资格的维修技术人员, 严禁自行拆修, 以免对人体造成伤害。

易被拆掉并可能触及到250V以上的部件:

1. 磁控管
2. 高压变压器
3. 高压电容器
4. 高压二极管

操作不当或损坏时可导致过度微波泄露的元件:

1. 磁控管在波导管上安装不当。(包括螺钉未拧紧)
2. 门钩及门体固定在上、下铰链上调整不当。
3. 联锁支撑安装不当。
4. 门、门封、外壳发生损坏。

重要警告事项:

⚠ 警告:如果微波炉门或门封已损坏, 则不得再使用, 直到经有资格的维修人员修好为止。

⚠ 警告:除有资格的维修人员外, 其他人来执行检修操作都是危险的, 包括拆下防止微波能量泄漏的防护盖等操作。

⚠ 警告:如果电源软线损坏, 为了避免危险, 必须由制造商、其维修部门或类似部门的专业人员更换。

⚠ 警告:为保障安全和正确使用, 本产品必须由本公司指派的专业人员进行维修。如因消费者委托非本公司指派的人员或消费者自行维修, 而导致产品不能正常使用的, 即使在保修期内, 也不属于免费维修范围, 由此所造成的任何财产损失, 人身损害, 本公司亦不承担任何责任。

三、下列情况均属正常:

1. 微波炉工作时, 收音机及电视机可能会受到干扰。此类干扰类似小型电器, 如搅拌机、吸尘器、电风扇等所引起的干扰, 这并非表示微波炉发生故障。
2. 微波炉必须定期清洗, 特别在使用烧烤和烧烤组合这些功能后, 任何积聚在炉腔顶部及炉壁的油污都会引起白烟冒出。
3. 光波管如进行长时间工作, 会致使炉腔温度升高。为保护光波管, 微波炉会自动熄灭此管, 稍待冷却后继续工作, 这是正常现象。
4. 烹调时, 食物会有蒸气散发, 部分蒸气会在炉门上凝聚, 属正常现象。
5. 高压变压器工作时发出的声音和高速散热风扇的转动声, 属正常现象。


常见故障解答

问题	起因	解决方法
非省电模式下微波炉显示板无显示	没有插紧电源	拔除插头, 待10秒钟后重新插上电源
	保险丝烧掉或电路断路器发生作用	联络指定维修点进行维修
	插座有问题	用其它电器再测试插座是否有问题
微波炉不能启动加热	炉门未关妥	小心关好炉门
	未按[启动]键	按[启动]键
	输入其他程序	按[暂停/取消]键清除已输入的程序, 然后重新输入烹调程序
	烹调程序输入错误	参考说明书, 正确输入烹调程序
	不慎按下[暂停/取消]键	重新输入烹调程序

上述故障排除后, 微波炉仍不能正常工作, 请与本公司的售后服务部门联系维修。


安装位置使用环境

1. 把微波炉内的包装物取出, 然后仔细检查微波炉是否有损坏。
如: a 炉体有无受撞击, 重压迹象。
b 炉门是否平整, 开关是否顺畅灵活。
c 炉门上金属绝缘网孔是否弯曲或变形。
d 电源线有无破损松脱现象。若发现以上情况, 请立与本公司当地售后服务中心联系处理。
2. 微波炉必须平放在通风干燥, 无腐蚀性的环境中使用, 远离高温及蒸气。
3. 微波炉应该远离电视机, 收音机和天线(一般大于5m), 否则会产生干扰。
4. 微波炉应放置在电源线方便插到的地方, 为了防止触电, 必须确保微波炉接地良好。

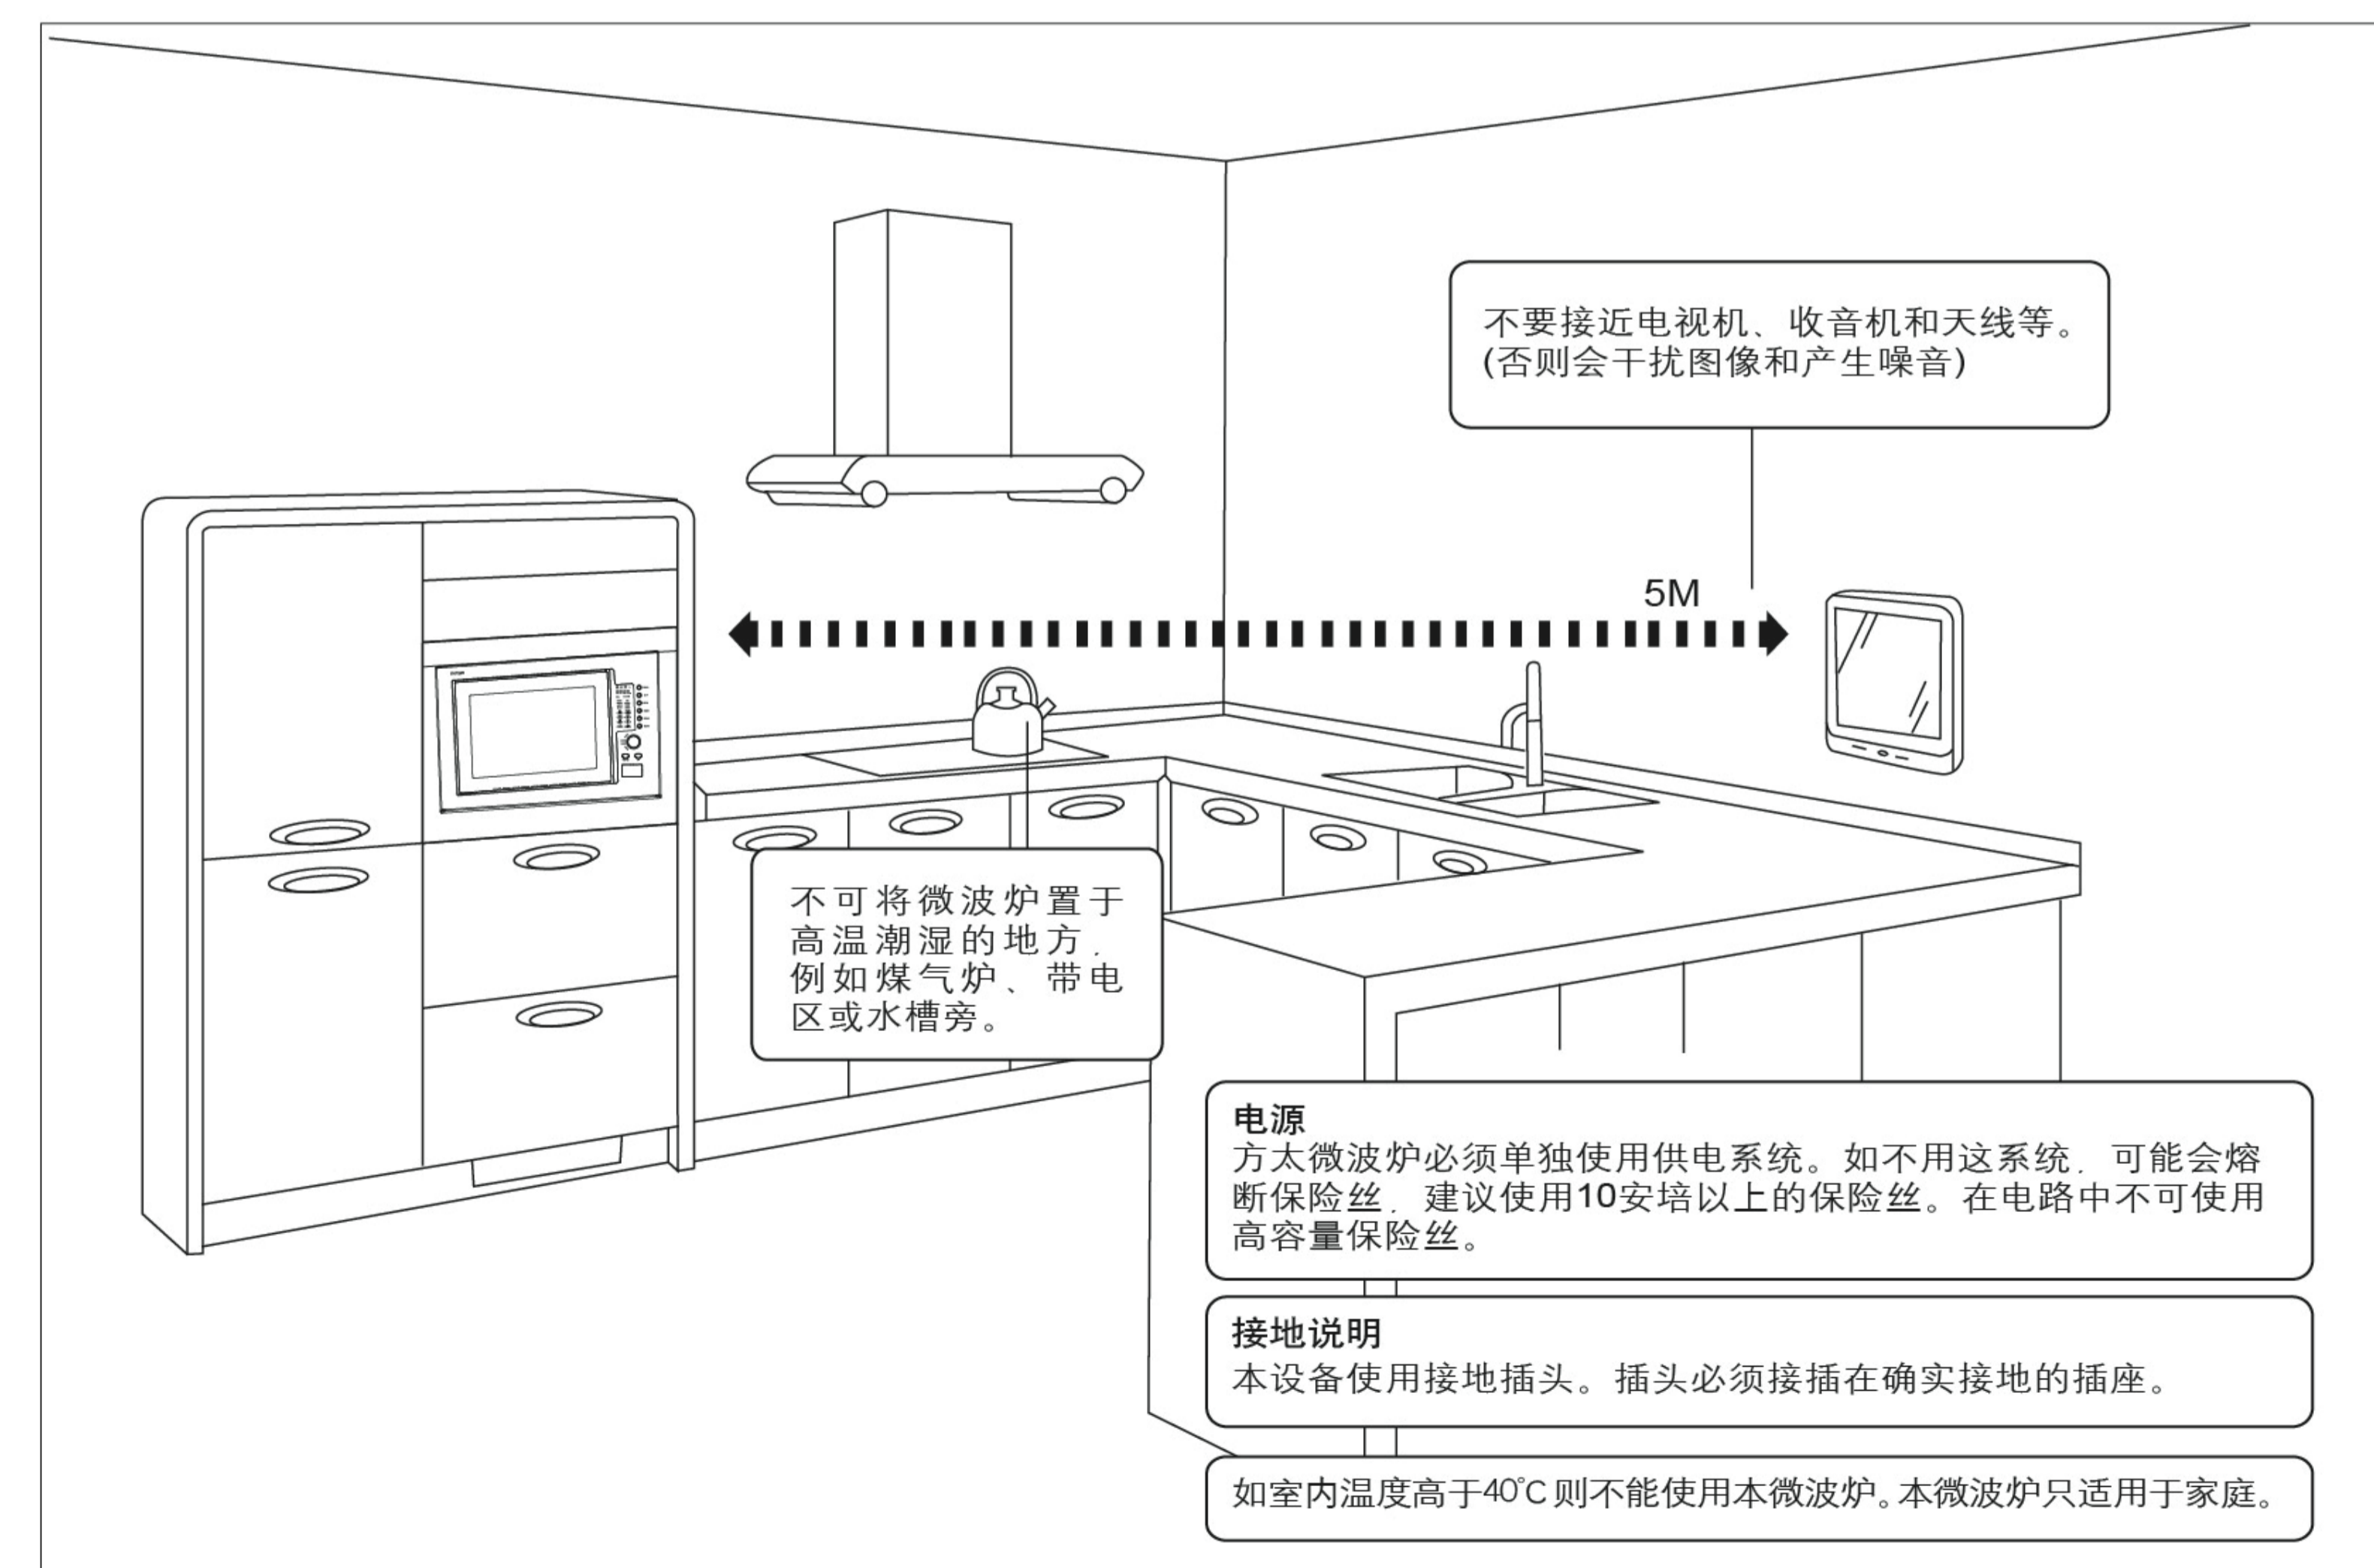


(图6)

(单位: inch)

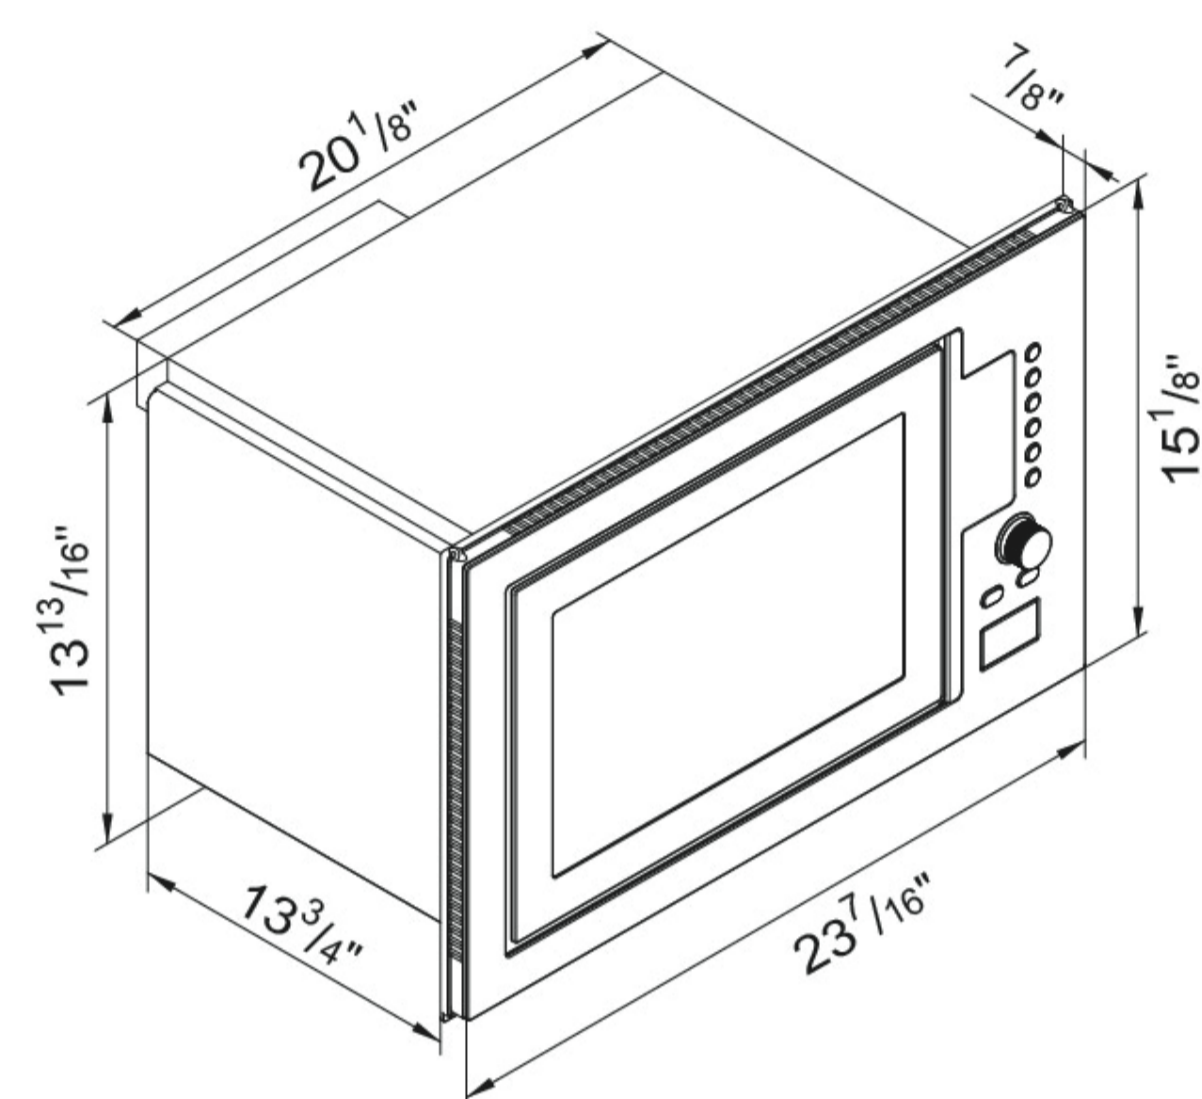

图(7)

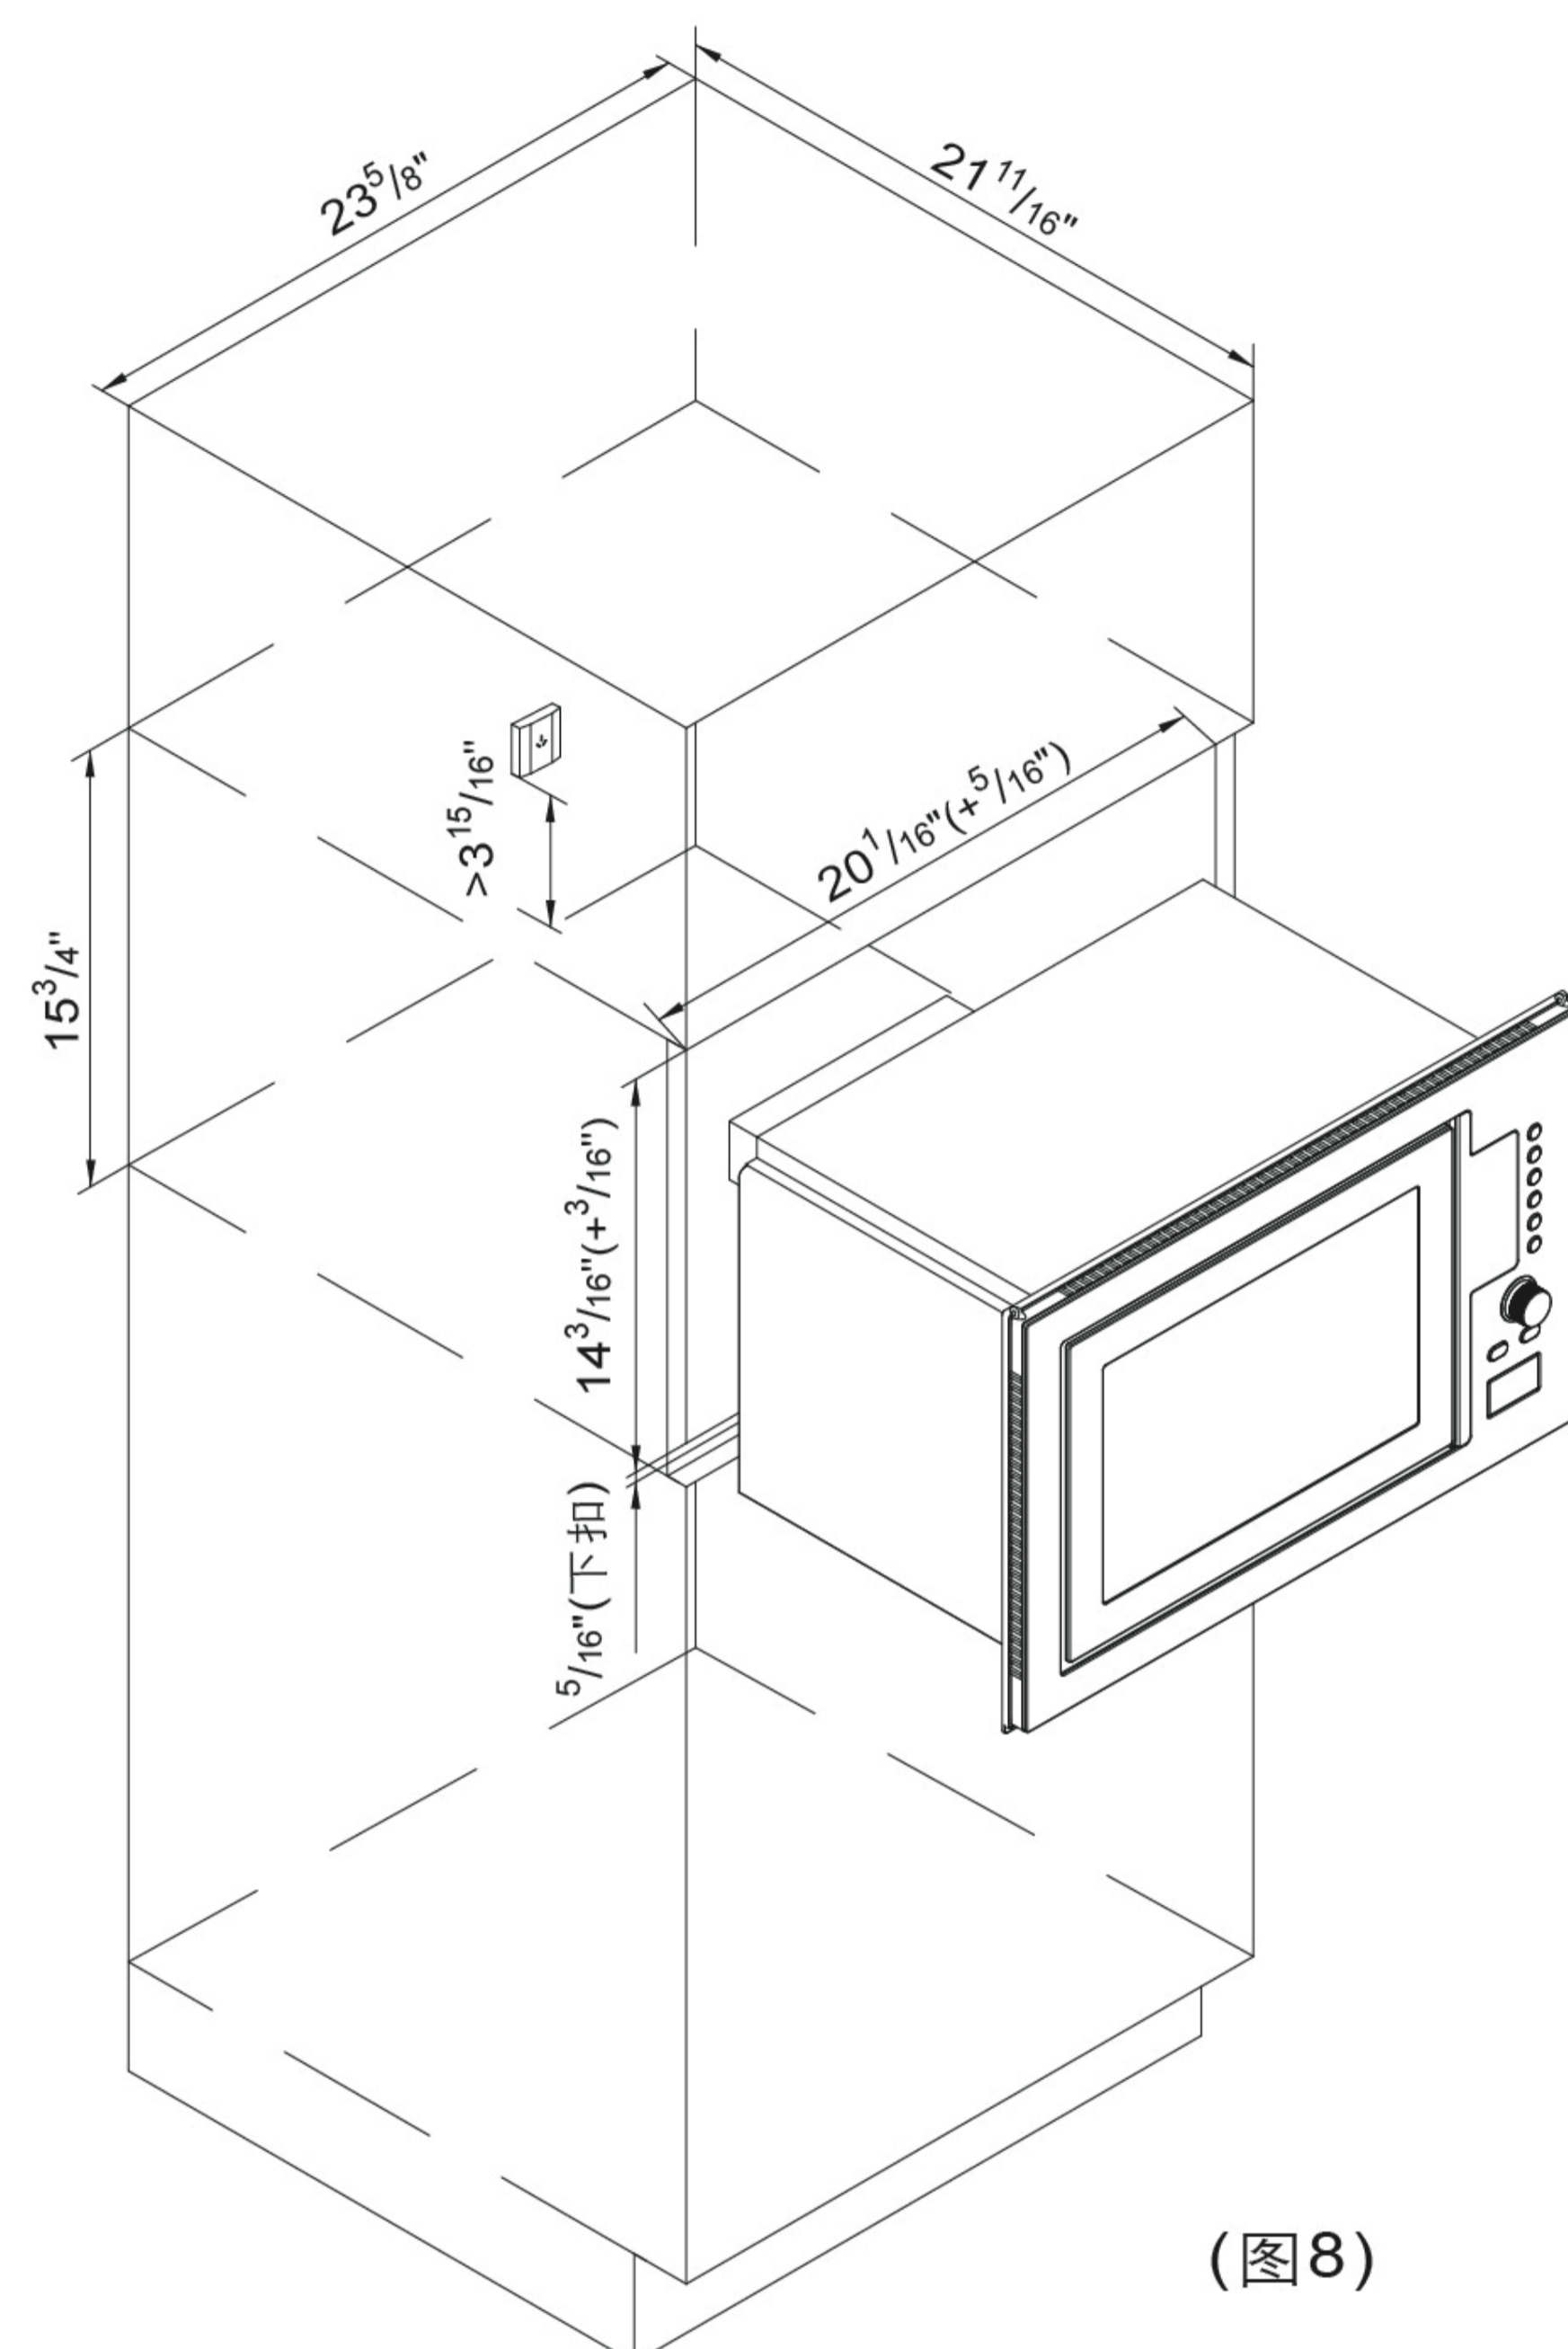

(图8)

1. 将微波炉放入上图所示的橱柜中。
2. 用四颗4 × 25的木螺钉将微波炉固定在橱柜上。
3. 微波炉嵌入柜盖住橱柜板 $5/16$ inch。
4. 插座安装位置需高于橱柜安装板 $3^{15}/16$ inch。(最好安装于高柜的上层, 以便于拔除电源。)
5. 微波炉顶部与橱柜板留 $3/8$ inch空隙。

独立风道技术:

行业首创自主循环通风设计, 采用前进前出的排风系统, 更有效的解决了嵌入式微波炉散热难的问题, 安装时只需将微波炉放入橱柜固定即可, 不需要对橱柜额外制作复杂的散热通道, 即能方便安全使用。

FOTILE

USER'S HANDBOOK

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND KEEP FOR
FUTURE REFERENC

MICROWAVE OVEN

HW25800K-01AG
HW25800K-03G
HW25800K-C2G



Thank you for choosing our products please read the handbook carefully before use and keep it for future reference.

CONTENTS

Warning and Safety Instructions	1
Important safety instructions	1
Precautions	3
Applicable Utensils	3
Avoid Fire Explosion and Scalding	5
Packing List	6
Specification and Structure of Microwave Oven	7
Installation	8
Precautions	8
Installation Steps	9
Operation Instruction	9
Navigation	9
Initial Use	10
Microwave and Grill	10
Defrost Function	10
Control Panel	11
Cleaning and Maintenance	19
Cooking Tips	20
Cooking by Microwave	20
Method of Defrosting Foods	21
Normal Phenomena and Trouble Shooting	22
Precautions	22
Normal Phenomena	22
Trouble Shooting	22

This manual contains the information updated till the time when it is printed. We keen on technical innovation, we will reserve the rights to improve or modify the product and user's manual without any prior notices. Some of the illustrations in this manual are for reference purpose only and subject to the actual products if there are any differences.

Warning and Safety Instructions

● Important safety instructions

- **WARNING:** Accessible parts may become hot when grill is in use. Children should be kept away.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person;
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy and high voltage;
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode;
- **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that child is able to use the oven in a safe way and understands the hazards of improper use;
- The appliance is not intended for use by persons (including children) with reducing physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
- Contact your local government for information regarding the collection systems available.
- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.
- When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposing at least free of charge.



IMPORTANT NOTE:

When using any microwave oven generating heat, there are certain safety precautions you should follow. These precautions are listed in the Wolf drawer microwave oven use & care guide provided with the unit. Read all and follow carefully.

- **WARNING:** If the information in this guide is not followed exactly, a fire or electrical shock may result that could cause property damage, personal injury or death.
- **WARNING:** To reduce the risk of tipping, the drawer microwave oven must be secured by properly installed anti-tip blocking. This microwave oven must be electrically grounded in accordance with local codes. Make sure the wall coverings and the cabinets around the appliance can withstand the heat generated by a microwave oven.
- **WARNING:** Improper use of the grounding plug can result in a risk of electric shock. Do not use an extension cord. If the power cord is too short, have a qualified electrician or service technician install an outlet near the appliance.

IMPORTANT NOTE:

To ensure this product is installed and operated as safely and efficiently as possible, take note of the following types of highlighted information throughout this guide:

- **IMPORTANT NOTE** highlights information that is especially important.
- **CAUTION** indicates a situation where minor injury or product damage may occur if instructions are not followed.
- **WARNING** states a hazard that may cause serious injury or death if precautions are not followed.
- **IMPORTANT NOTE:** Throughout this guide, dimensions in parentheses are millimeters unless otherwise specified.

IMPORTANT INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

- Do not attempt to operate this microwave oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the microwave oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the microwave oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The microwave oven should not be adjusted or repaired by anyone except properly qualified service personnel.

When using electrical appliances, basic safety precautions should be followed, including the following:

- **WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy, observe the following:

- Read all instructions before using the appliance.
- Read and follow the specific PRECAUTIONS TO

AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY.

- This appliance must be properly grounded. See GROUNDING INSTRUCTIONS in the installation guide.
- Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers (e.g. closed glass jars) are able to explode and should not be heated in this oven.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped.

IMPORTANT INSTRUCTIONS

- Use this appliance only for its intended use as described in this guide. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.
- As with any appliance, close supervision is necessary when used by children.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors. Do not use this product near water (e.g. near a kitchen sink, in a wet basement or near a swimming pool, or similar locations).
- Do not immerse cord or plug in water.
- Keep cord away from heated surfaces.
- Do not let cord hang over edge of table or counter.
- When cleaning appliance sealing surfaces that come together on closing the drawer, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth. Refer to care recommendations on page 13.
- Liquids, such as water, coffee or tea are able to be overheated beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when the container is disturbed or a utensil is inserted into the liquid.

TO REDUCE THE RISK OF FIRE IN THE OVEN


- Do not overcook food. Carefully attend appliance when paper, plastic or other combustible materials are placed inside the oven to facilitate cooking.
- Remove wire twist ties from paper or plastic bags before placing bag in oven.
- If materials inside the oven ignite, keep oven drawer closed, turn oven off and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
- Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.



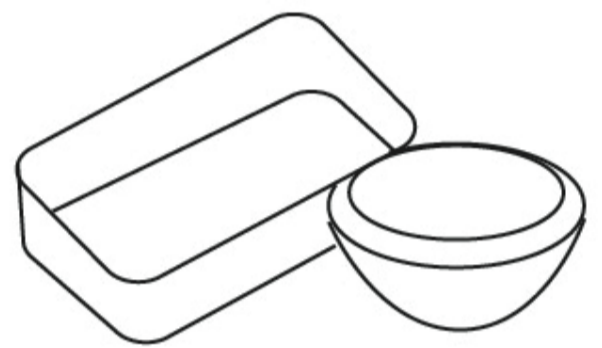
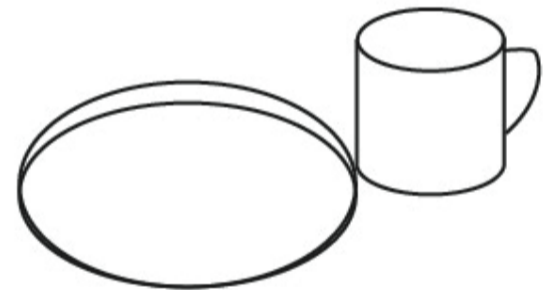
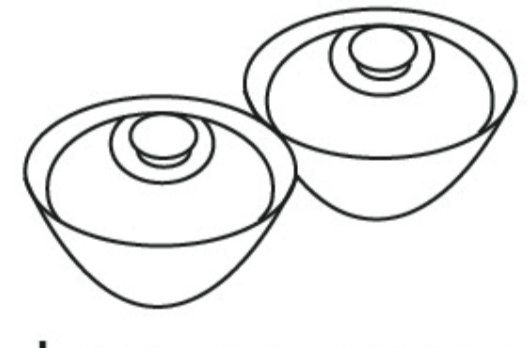
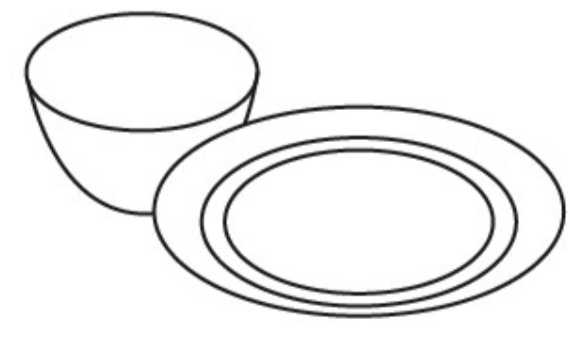
SAVE THESE INSTRUCTIONS






● Precautions

1. Please read this user's manual carefully before initial use.
2. This appliance is for residential use only to cook, defrost, reheat and to grill food. Any other usage is not supported by the manufacturer and could be dangerous. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
3. The appliance is not intended for using by children or the disabled person unless they are supervised or properly instructed.
4. Make sure that the actual voltage and frequency are accorded with the ones clarified in this User's Manual to avoid any possible damages to the oven and be sure the unit is safe grounded.
5. Make sure that your oven is connected to a standard power socket with safe grounding to avoid electric shock.
6. Place the oven horizontally in a place of well ventilation and without the risk of corruption. It should stay away from high temperature and steam.
7. Place the oven as far as possible from TV set, radio and antenna to avoid any interference. A minimum distance of 5 meters is recommended.
8. Installation and repairs may only be carried out by a suitably qualified and competent person in accordance with national and local safety regulations. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorized work.
9. Never open the casing of the appliance. Tampering with electrical connections or components and mechanical parts is highly dangerous and can cause operational faults or electric shock.
10. Do not block the ventilation hole of the oven to ensure well ventilation.
11. Do not have the oven working without putting any food inside, which may damage the appliance. After using, put a full glass of water on the glass tray in order to avoid any damage to the appliance.
12. Before serving, remember to allow a sufficient standing time and then always check the temperature of the actual food itself after taking it out of the microwave. The temperature of the container is not an indication of the temperature of the food or liquid in it.
13. Never put regular mercury or liquid thermometer into the oven for heating and measuring, since it's liable to sparkle or do damage to the appliance. Interrupt the cooking process before check food temperature.
14. Do not use the microwave if
 - the door is warped.
 - the door hinges are loose.
 - holes or cracks are visible in the casing, the door or the oven interior walls.Operating the appliance with this type of damage will result in microwave leakage and present a hazard to the user.
15. Please do as follows to keep the glass tray from damage:
 - Do not wash the tray with water until it's cool.
 - Do not put red-hot food or utensils on cool tray.
 - Do not cold food or utensils on red-hot tray.
 - Do not put anything exceeding 5Kg on the tray.
 - Do not use the oven for food storage purpose.
 - Only use accessories which are authorized by FOTILE.

● Applicable Utensils

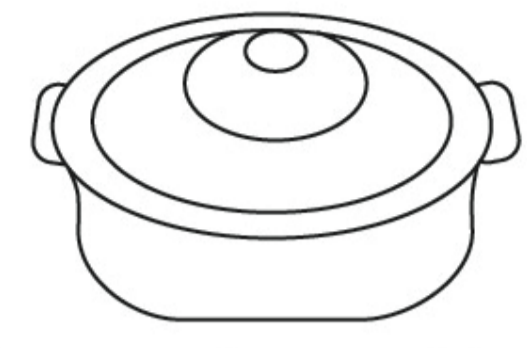- ★ Only use utensils that are suitable for using in microwave ovens:
- ★ How to check whether the utensils are suitable for microwave oven.
 - Tips  Put the utensil into microwave oven along with a glass of 300ml cold water, and choose MICROWAVE mode to cook for 1 minute. It is the applicable utensil if it keeps cool while water gets hot. On the contrary, it cannot be used in microwave oven if the utensil gets hot, that means it has absorbed a certain content of microwaves. This method is inapplicable for plastic utensils.
- ★ Improper utensils used in microwave oven would not only bring bad taste to the food, but also do damage to the oven or the utensil. Please take the following table for reference.

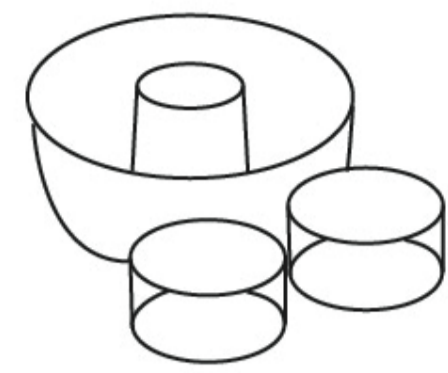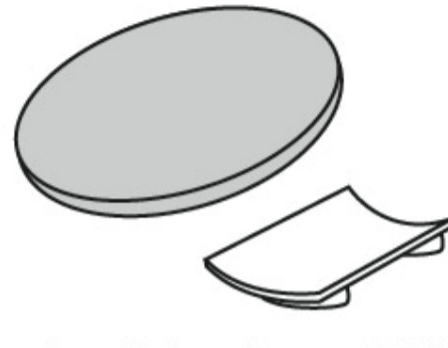Type of Utensil	Microwave	Grill	Grill Combi
 Heat-resistant Glass Vessels	Applicable ⚠ When cooking jams, please use super heat-resistant glass vessels that can endure sudden cold or hot	Inapplicable	Inapplicable
 Non-heat-resistant Glass Vessels	Inapplicable ⚠ Including cut-glass and tempered glass	Inapplicable	Inapplicable
 Heat-resistant Plastic Vessels	Applicable ⚠ Please use the vessels marked "For Microwave Oven Use". ⚠ Pay attention to those plastic covers which are not heat-resistant. ⚠ Avoid using covers with good air-tightness ⚠ Never cook food containing high content of oil or sugar, which creates abundant heat.	Inapplicable ⚠ Plastics for grill purpose is applicable.	Inapplicable
 Non-heat-resistant Plastic Vessels	Inapplicable ⚠ Never use any materials that can be deteriorated by microwave, such as polythene, melamine, hydroxybenzene and carbamide resin, etc. ⚠ Foam tray is applicable only for defrosting fresh food.	Inapplicable	Inapplicable
 Lacquer wares	Inapplicable ⚠ The painting may fall off or rupture.	Inapplicable	Inapplicable
 Ceramic Vessels	Applicable ⚠ Vessels with paintings or gold/silver decorations is not applicable since it tends to cause scratches and sparkles.	Applicable ⚠ Never use ceramics with painting inside, which will fall off.	Applicable

Type of Utensil	Microwave	Grill	Grill Combi
 Vessels Made of Metals (such as Aluminum)	Inapplicable ⚠ Never use metal meshwork or metal bunches which may cause sparkles. ⚠ Even the metal painting plate for microwave oven use is not applicable.	Applicable ⚠ Do not use the vessel with resin handle. Inapplicable	Inapplicable
 Vessels Made of Wood, Bamboo and Paper	Inapplicable ⚠ These kind of vessels are flammable.	Inapplicable ⚠ Paper vessels made by heat-resistant processing are applicable.	Inapplicable
 Grill Rack	Inapplicable	Applicable	Applicable
 Cling Film for Microwave Purpose	Applicable ⚠ Foods containing high content of oil are not applicable.	Inapplicable ⚠ It will melt in high temperature.	Inapplicable
 Aluminum Foil	Inapplicable ⚠ It's available if making use of the reflective character of microwave to defrost fresh foods.	Applicable ⚠ Pack foods in aluminum foil to grill.	Inapplicable

● **Avoid Fire, Explosion and Scalding**

1. In order to avoid the inside of oven catches fire, please do as follows:
 - a. Never sealed the foods before cooking.
 - b. Before cooking the food which packed by paper or plastic bag, please take the binding away.
 - c. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
 - d. When cooking foods with one-off utensils, please pay attention to the status inside oven.
 - e. Never cook alcohol, oil or fried foods, for it is not easy to control the temperature of oil.
 - f. When cooking small quantity of food, care enough to avoid the hazard of fire due to overheating.
 - g. Each time after cooking, use a piece of wet cloth and dry cloth one after another to wipe off the offscourings or oil on the mica or walls of the oven, in order to avoid any black smoke or fire.
 - h. When the cooking utensil catches fire, switch off the appliance immediately. Effective extinguishing measures must be taken at once, such as keep the door closed.

- i. Exercise caution when cooking or reheating food with a high sugar content. If heated for too long, the sugar may caramelize or ignite.
 - j. To avoid fuelling and flames, do not open the oven door if smoke occurs in the oven interior. Interrupt the process, turn off the oven and remove the plug. Do not open the door until the smoke has dispersed.
 - k. The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burning;
2. In order to avoid explosion, please do as follows:
- a. Never cook foods with sealed vessels, such as nursing-bottle with lid or nipple.
 - b. When cooking liquid, please use a broad rim vessel, and reserve enough space in the vessel for boiling.
 - c. Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container;
 - d. Before cooking any round or columniform food such as potatoes, chestnuts or sausages, please use knife or fork to perforate in order to avoid explosion.
 - e. Do not take the cooked eggs or liquid out of oven immediately to avoid delaying spurting. In order to avoid explosion, never cook fresh or cooked eggs with eggshell.
 - f. Do not take the poached egg or rice glue ball out of oven immediately to avoid explosion. Wait a moment after opening the door.
3. In order to avoid scalding of sudden boiling, please do as follows.
- a. Take cooked food out of oven with gloves instead of bare hands to avoid scalding by steam.
 - b. When quartz tube is red-hot or the food is just done, do not touch the upper board of the cavity. Thus cooking food in GRILL mode, use gloves only to overturn the food since the temperature inside is very high.
 - c. In order to avoid scalding the content of nursing-bottles or baby food cans shall be stirred or shaken and the temperature shall be checked before consumption.

Packing List


1. Take the packing material out of oven, and examine carefully whether the oven is intact.
 - a. Is the oven impacted or pressed by heavy object?
 - b. Is the oven door flat and switch unhindered?
 - c. Is the metal meshwork on door curved or deformed?
 - d. Is the power cord damaged or loose?
 If you find any one of the above happens, please contact FOTILE authorized service people.

2. Packing list


Name	Quantity
Microwave Oven	1
User's Manual	1
Cruciform Slot Round Weeden Screws M4 x 24 black zinc galvanized	4
Grill Rack	1
Glass Tray	1
Turntables Shaft	1

Specification and Structure of Microwave Oven


Model	HW25800K-01AG	HW25800K-03G	HW25800K-C2G
Rated Voltage	120V 60Hz		
Rated Input Power	1300W (Microwave) 800W (Grill)		
Rated Output Power(Microwave)	800W		
Rated Frequency(Microwave)	2450MHz		
External Dimension(L x W x H)	23 ^{7/16} inch×15 ^{1/8} inch×14 ^{1/2} inch	23 ^{7/16} inch×15 ^{1/8} inch×16 ^{3/8} inch	
Oven Capacity	25L		
Accessory for Heating Only	Special Glass Tray		
Net Weight	20kg	22kg	20kg

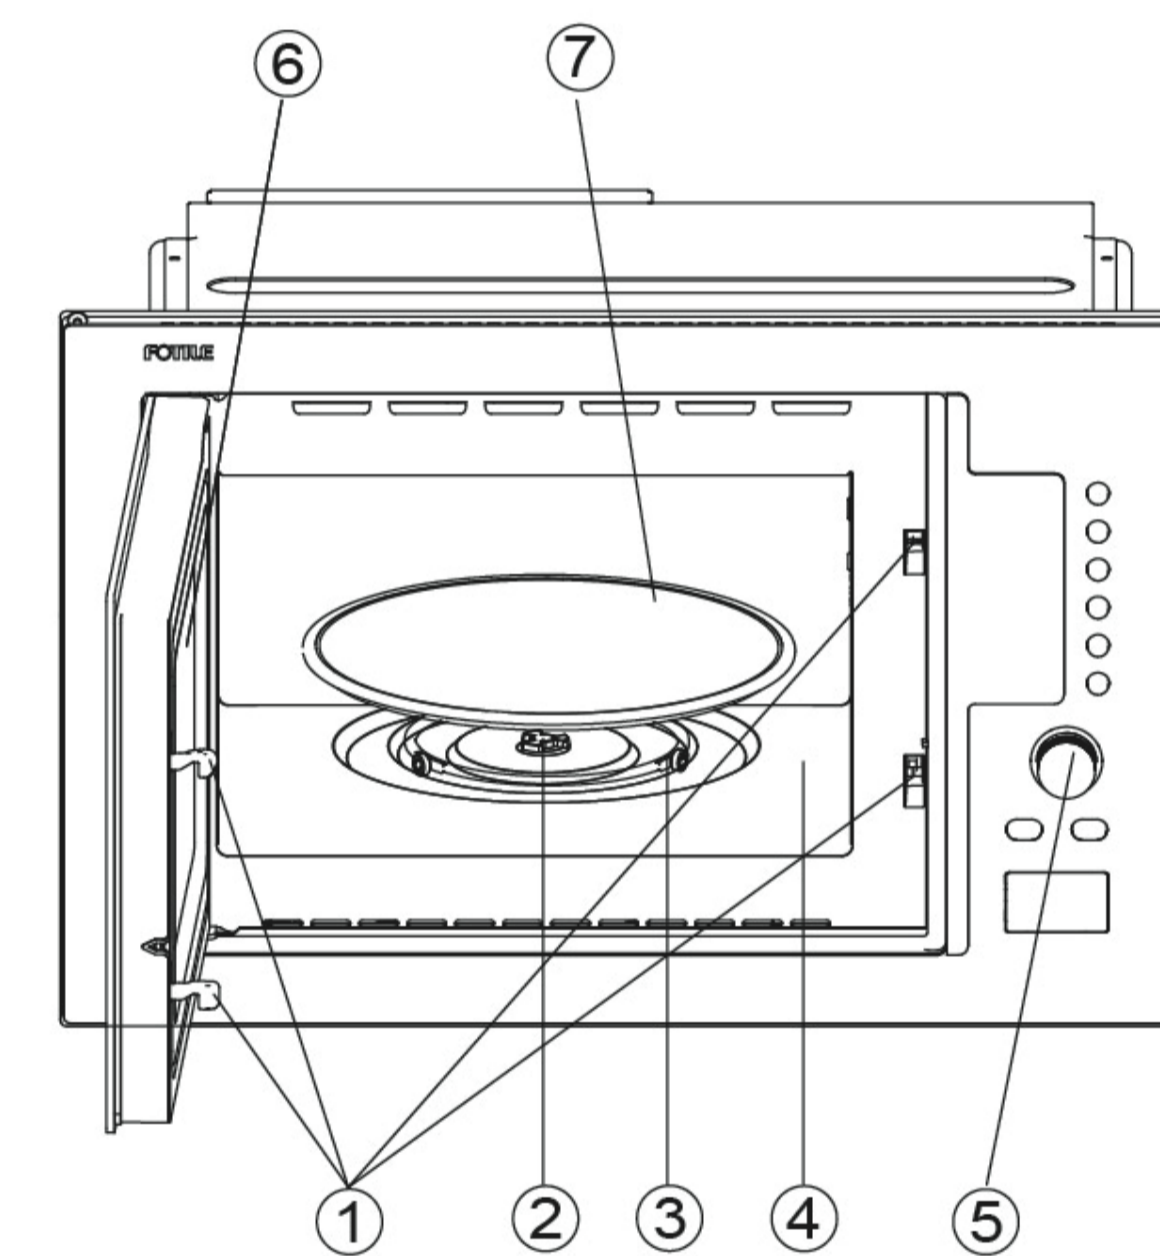



HW25800K-01AG

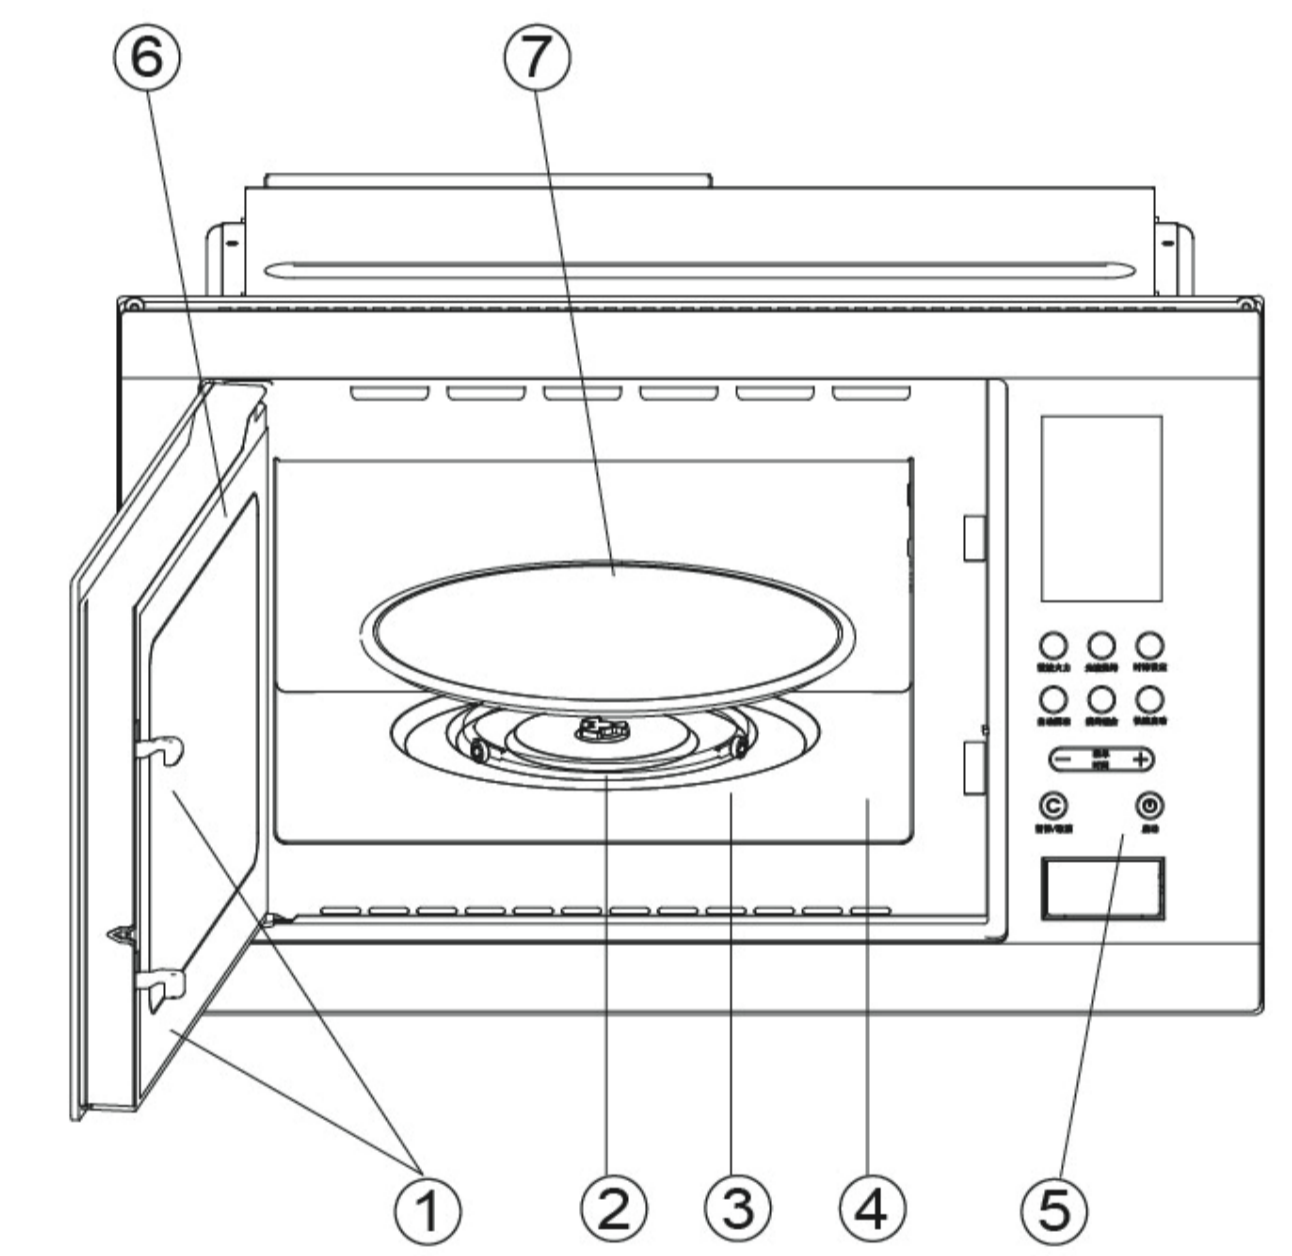

HW25800K-03G

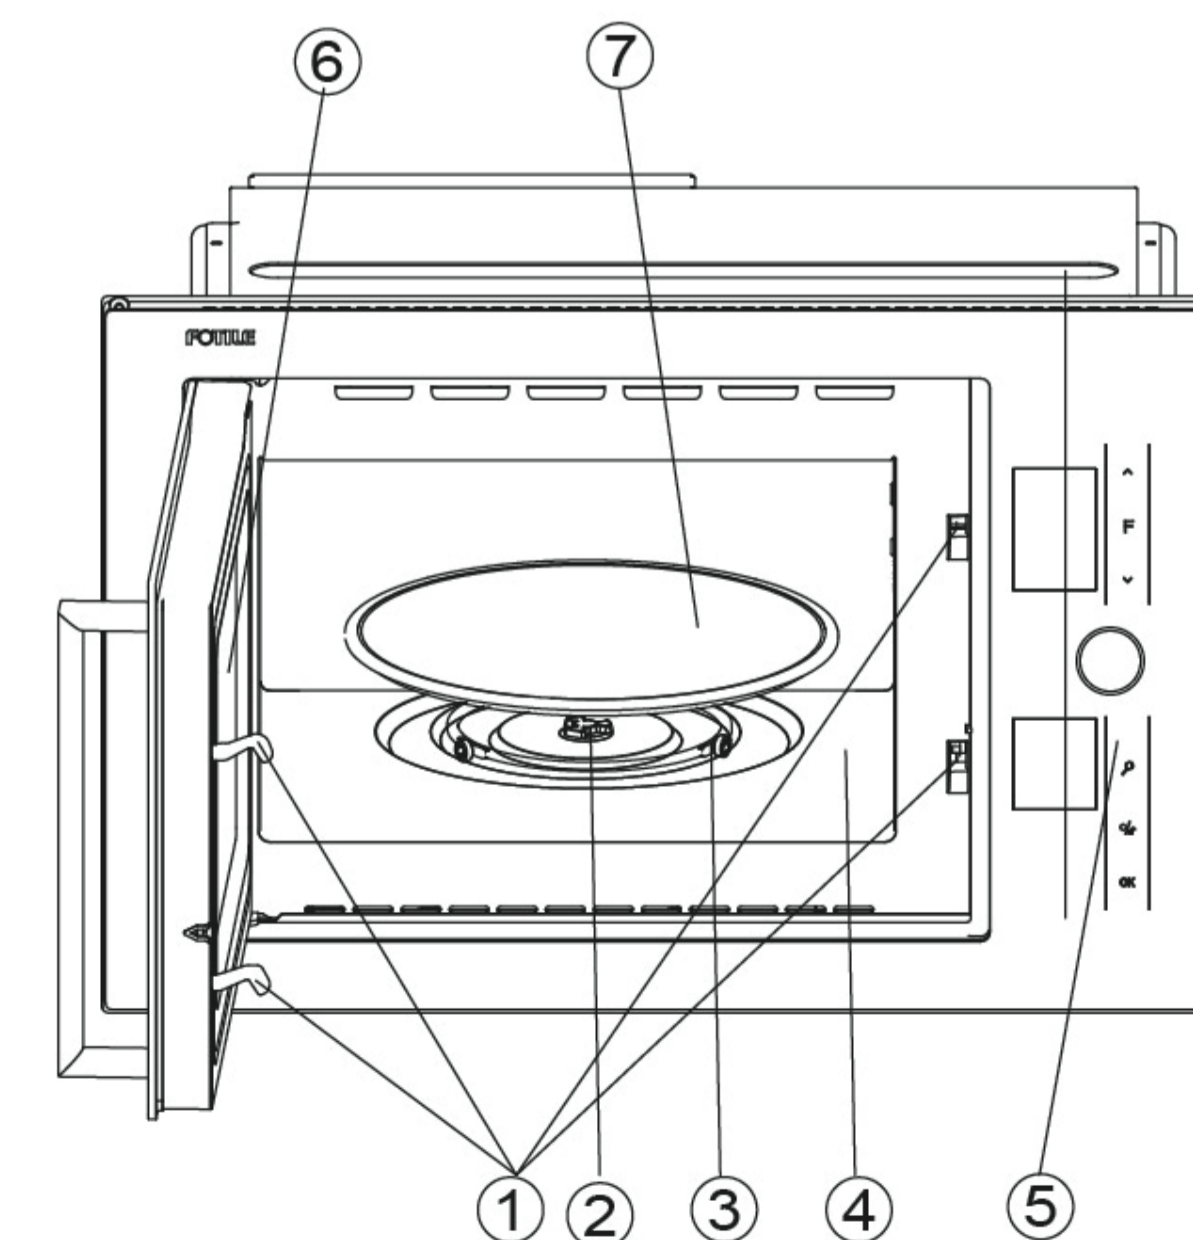

HW25800K-C2G

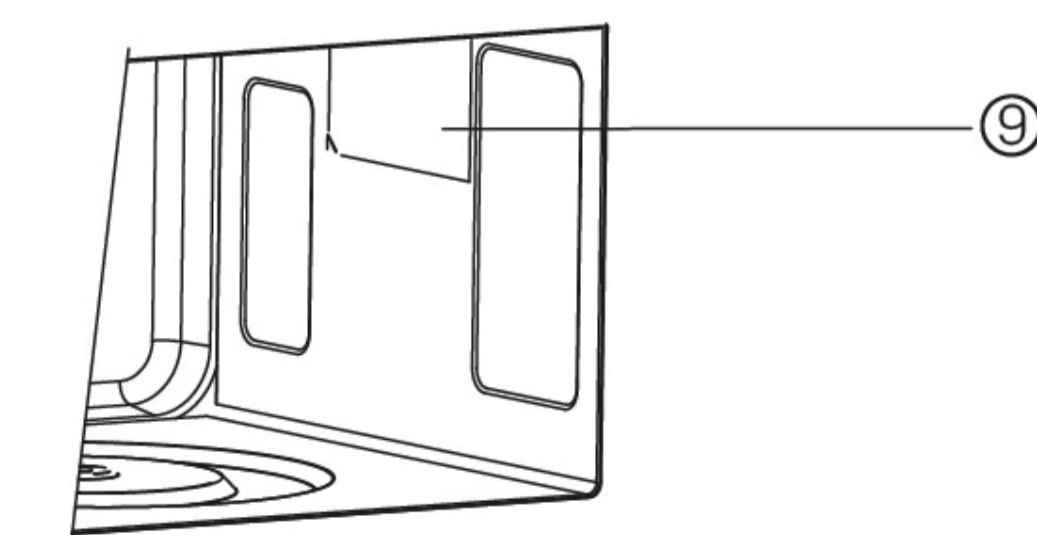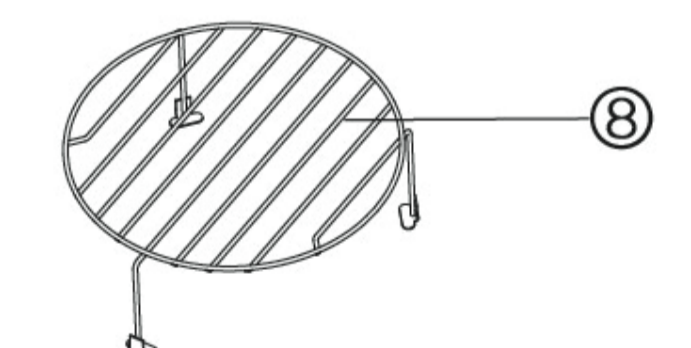


● **Illustration**

- ① Safety interlock system: To ensure the oven does not work unless the door is closed.
- ② Turnable shaft: To make the glass tray turning.
- ③ Turnable ring assembly: support the glass turntable and rotate along its path.
- ④ Oven cavity.
- ⑤ Control panel: Please refer to the description for control panel.
- ⑥ Observation window: To watch the food inside through a metal shielding meshwork.
- ⑦ Glass tray: The vessel containing food is put on the tray, which turns to get the food heated uniformly.
- ⑧ Grill rack: Only use for grill or combined modes.
- ⑨ Mica: To avoid vapor or grease entering into the tube the mica must not be removed, which could effect the operation of microwave.


Installation

● **Precautions**

Microwave oven must be installed one the 3 cupboards as demonstrated below (ground cupboard, wall cupboard, and high cupboard), which has ventilation channels. If the user does not install the oven in these 3 types of cupboards, FOTILE is not responsible for any accident caused.

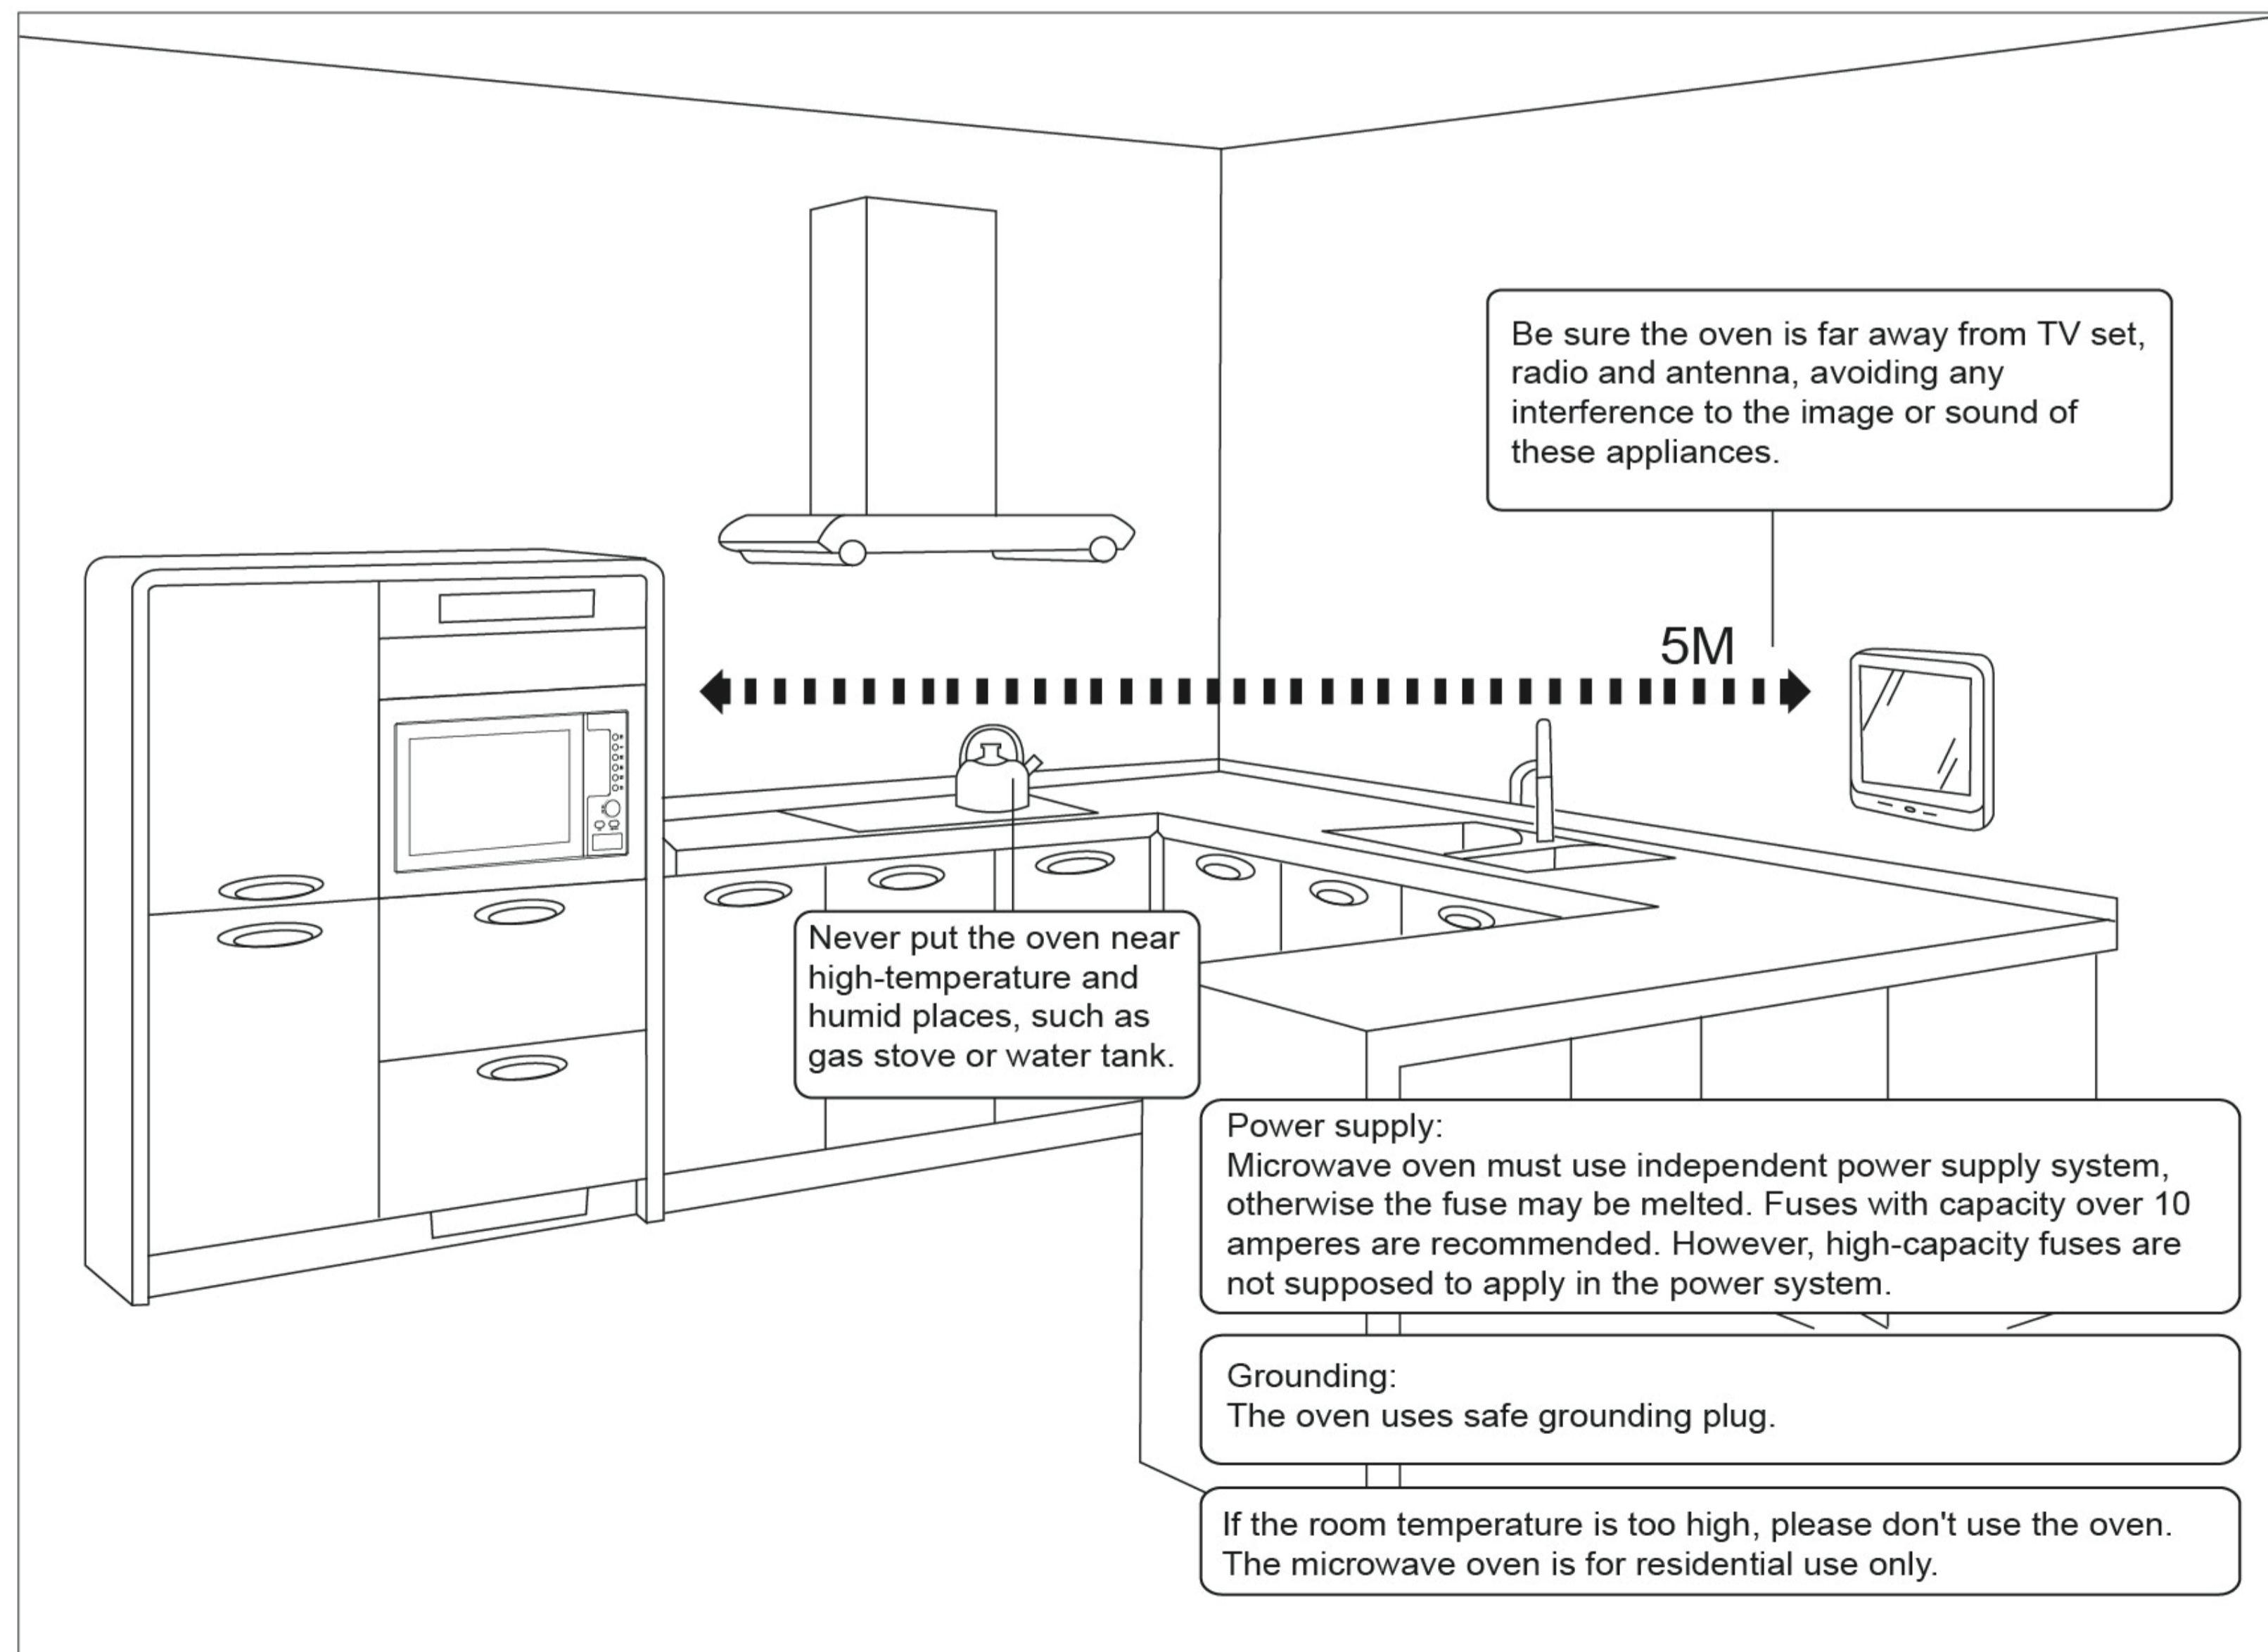

● **Installation Steps**

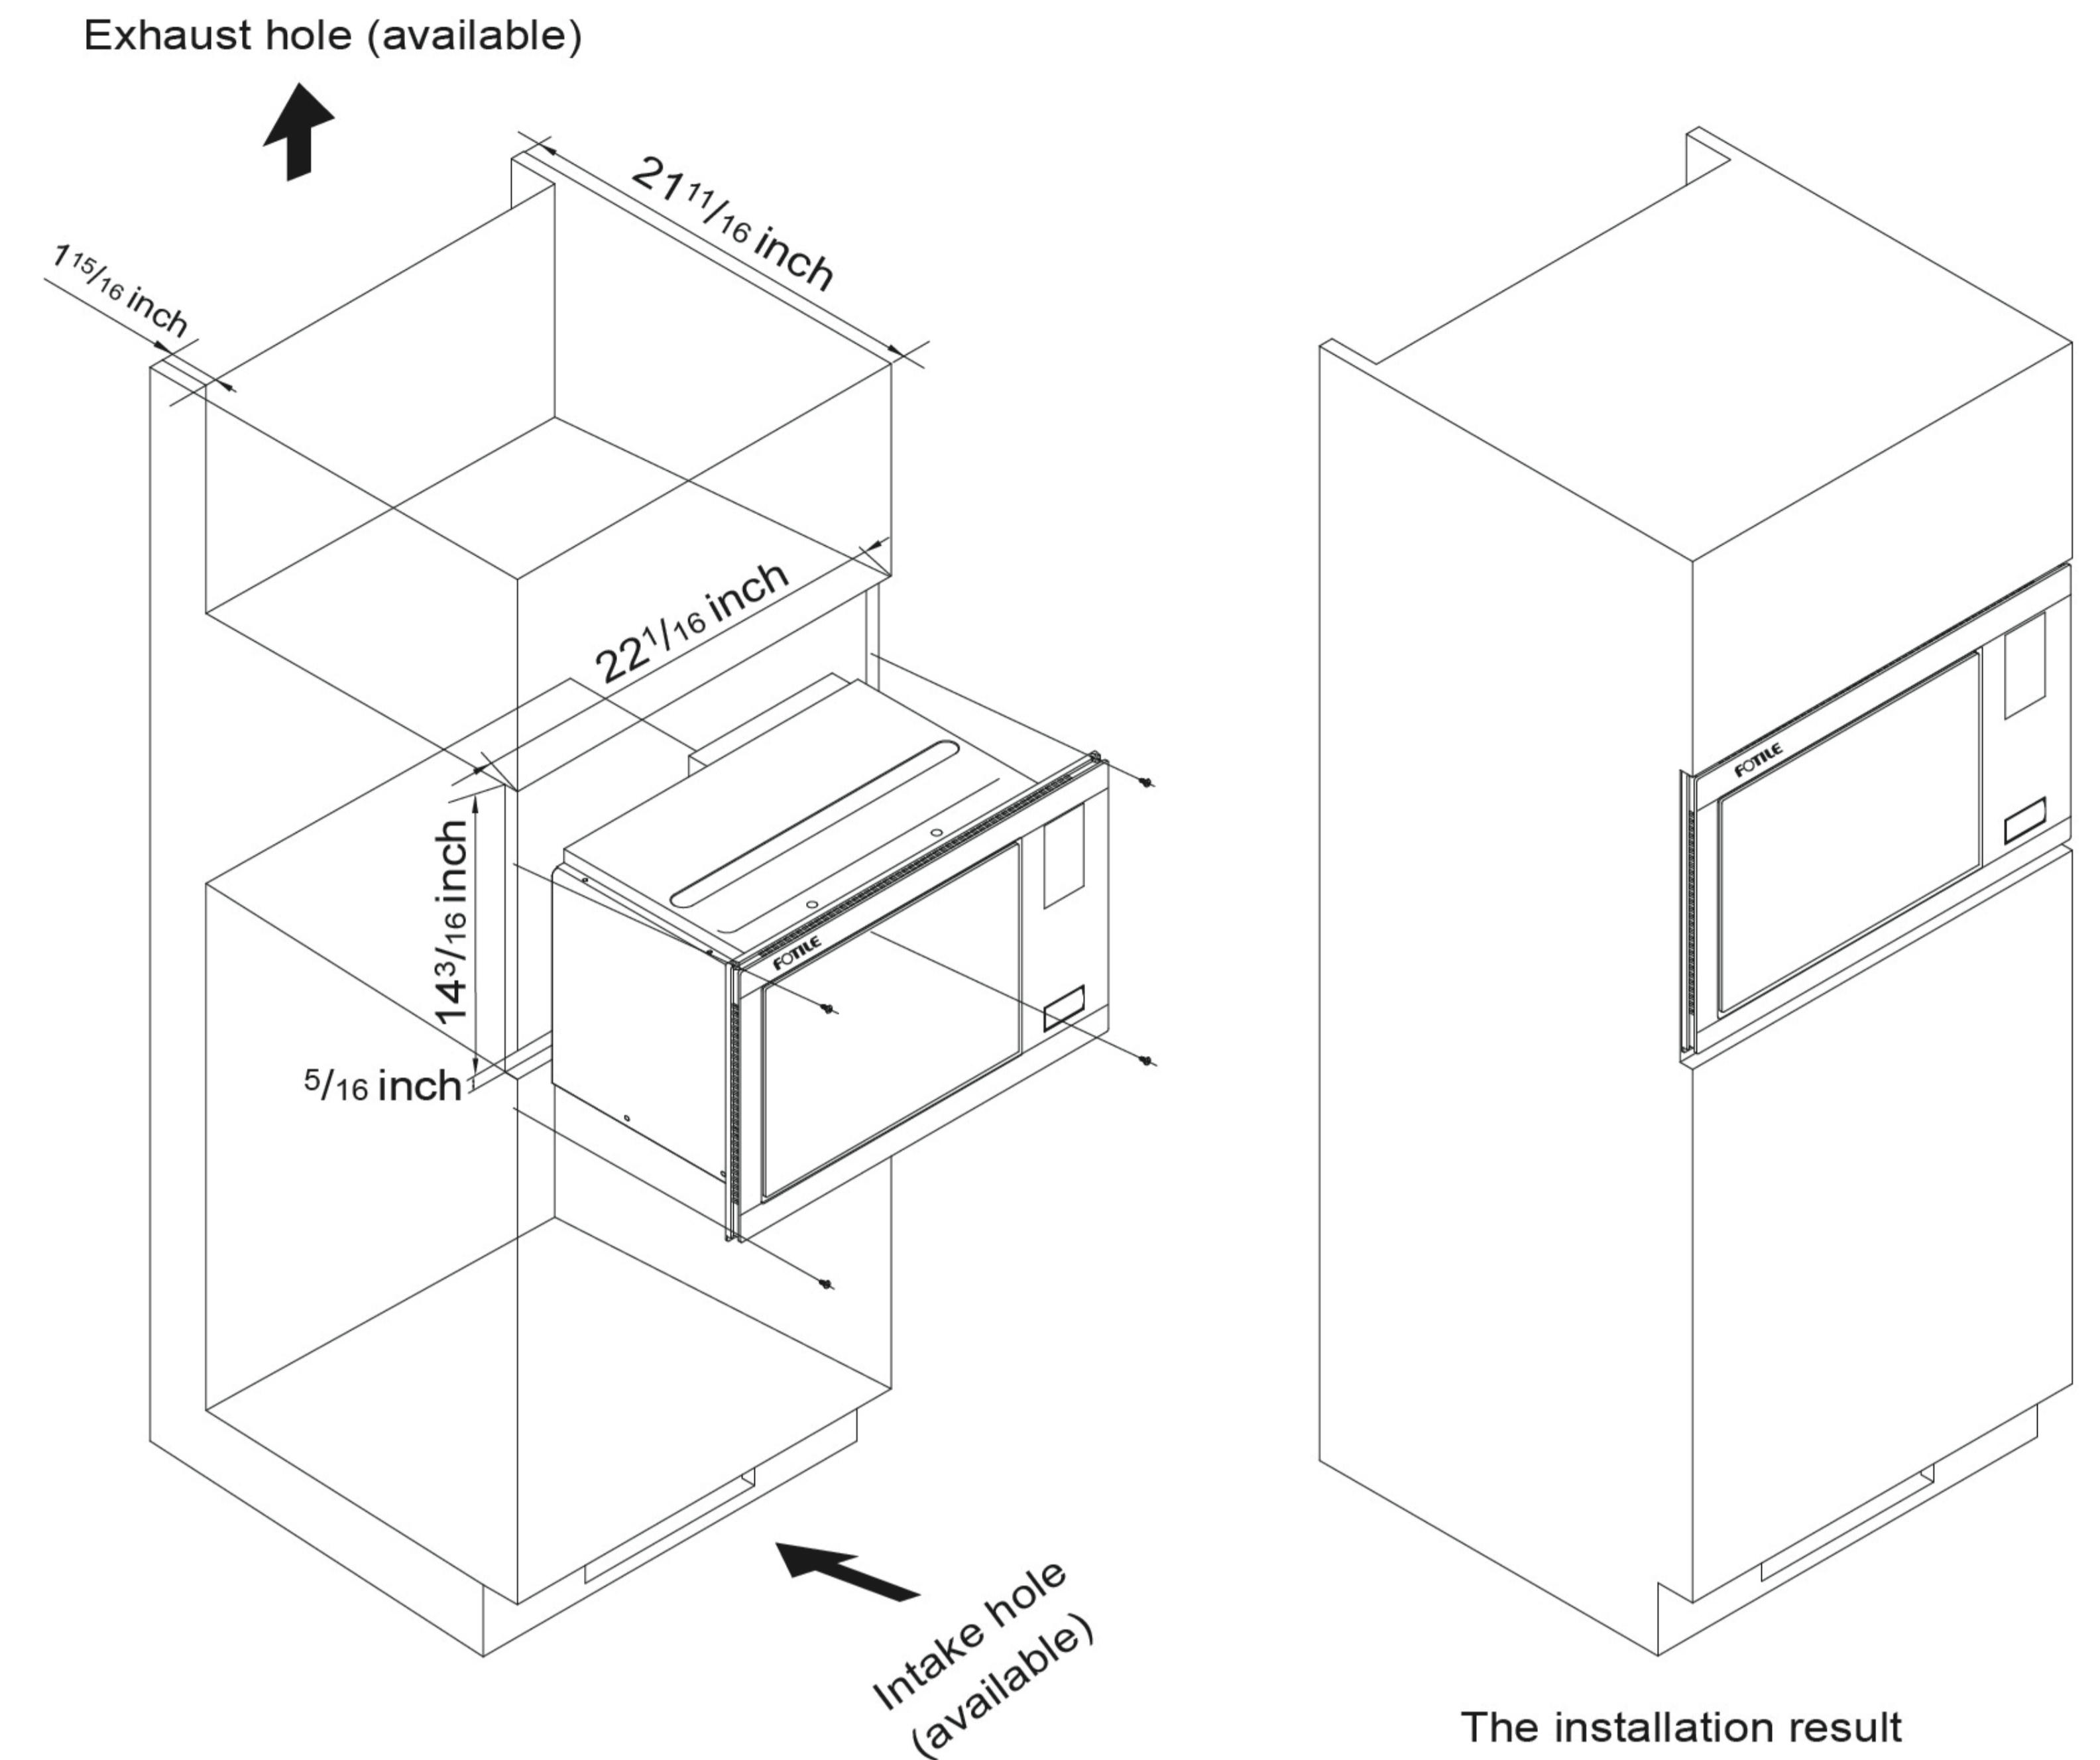

1. Push the microwave oven into the cabinet.
2. The distance for the microwave oven frame and the carbinet is 8mm.
3. Fixing the microwave oven in the cabinet by the four screws which type are ST4 x 25.

Operation Instruction

★ **Operation Instruction for HW25800K-03G/01AG**

● **Navigation**

1. Plug in the power supply.
2. Put food onto the glass tray, and close the oven door. Be careful that never switch on the appliance without food inside, in order to avoid damage to the oven.
3. Choose cooking mode.
 - a. The grill rack must be taken out if "Microwave" function is chosen.
 - b. Make sure that the distance between food and heating tube must be 5cm at least if combination function is chosen. The food must be turned over during operation.

4. Set cooking time.
5. The microwave oven starts cooking with set program. The program will pause if the microwave oven door is opened, on the contrary the microwave oven will resume operation after "Start" button is pressed.
6. It's definitely suggested to wear glove to take or turn over food. Do not touch the walls of the cavity.
7. In combination mode or grill mode, do not touch the top, the door, and both sides of the oven because they are very hot. Only the control panel can be touched.
8. When food is cooked, the buzzer beeps for 3 times before the oven stops working, and the indication light is off.

● Initial Use

When using microwave oven for the first time, you may catch bad smell and even see white smoke from the oven. It's a normal phenomenon, and after using it for several times, it will not happen again. Be sure that the door and window open in your room to keep good ventilation. Anyway, you can take the following steps to avoid this phenomenon:

1. Before initial use choosing GRILL mode to dry cook for several times.



Dry cook is only available in GRILL mode. Not for MICROWAVE mode or a combination mode.

2. Before initial use choosing MICROWAVE mode and putting a glass of water on the glass tray to cook in high power for several times.

● Microwave and Grill

1. Microwave is penetrable. It can penetrate into the food and cook the food in a short time without losing water of the food. However, it cannot turn the surface of food brown and the food crispy.
2. The energy of grill function comes from radiation of the heating tube, which can make the surface of food brown. But if the food is too thick, it could be possible that the inside of food remains uncooked while its surface is charred.

Therefore, the combination of microwave and grill can take both advantages to make the food look good and taste good.



Do not use microwave when the oven is empty-loaded. And never use metal utensils that may cause spark or potential risks.

● Defrost Function

It's one of the characteristics of microwave oven to defrost food. Microwave defrosts is quicker than electric ovens and safer than defrosting at room temperature, since no harmful bacteria will breed in microwave. Turn the function knob to choose defrost function, and then turn the timer knob to set defrost time according to the weight of food. As microwave can not penetrate 4cm from one side, you have to turn over the food from time to time if it's large and thick. It's suggested to take out the defrosted part and make the rest of food easier to defrost; otherwise it's possible that the surface of food gets defrosted, while its inside is still frozen.

1. It's very necessary to turn over the food during defrosting in order to ensure the food defrosted averagely.

2. Defrosting is done when the food can be cut off by knife.
3. Defrosting take longer time than normal cooking.
4. The defrosted food should be consumed as soon as possible. Do not put it into refrigerator again.

● Control Panel






1. Switch on the appliance. The LED flashes for 3 times to display all functions, then ":" flashes. Choose time or cooking functions.

2. Clock Setting (24 hours).

When ":" displays, press "preset clock" key, and operate the "Timer /Weight/Auto Menu" knob/key to confirm hour. Press "preset clock" key, and operate the "Timer /Weight/Auto Menu" knob/key to confirm minute. Finally, press "preset clock" key to confirm the above steps. Clock setting is completed, and current time is displayed. To reset or change the time, please repeat the above steps.

3. Power Setting.

Press "Microwave" button each time, "100P", "80P", "60P", "40P", "20P" will display in turn. Operate the "Timer /Weight/Auto Menu" knob/key to set time, and press " Start " to start cooking with set power.

- 100P  : 100% microwave (high power). Boiling water, cooking fresh fruit, vegetables and candied fruit.
- 80P  : 80% microwave (high-medium power). Cooking fish, seafood, meat, poultry, eggs and cakes.
- 60P  : 60% microwave (medium power). Cooking cakes, boiling food, melting butter and chocolate.
- 40P  : 40% microwave (medium-low power). Cooking cuts of meat, stewing soup, softening butter.
- 20P  : 20% microwave (low power). Keeping warm, softening ice cream.

4. Quick Start.

Press "Express" each time, and LED displays "0:30", "1:00", and "1:30" sequentially.

0:30: Default time is 30 seconds.

1:00: Default time is 1 minute.

1:30: Default time is 1 minute and 30 seconds.

Press " Start " to start cooking with high power in chosen time.

5. Light Wave Grill

Press " Grill " key, and then operate the "Timer /Weight/Auto Menu" knob/key to set time. Press "Start" to cook in chosen time. "Light Wave Grill" function is for the purpose of cooking sliced meat such as beefsteak, pork steak, barbecue, sausage and chicken wings. It is also applicable for cooking sandwich and making food crispy.

6. Microwave + Grill (Combination)

Press "Grill combi" key each time, and LED displays "Grill combi1", "Grill combi2" and "Grill combi3" sequentially.

Grill combi1: 30% cooking time in microwave, and 70% cooking time in grill, best for grill, recommended for western-style food such as beefsteak.

Grill combi2: 55% cooking time in microwave, and 45% cooking time in grill, relatively quicker in cooking, recommended for a whole piece of poultry such as chicken, duck and goose.

Grill combi3: 70% cooking time in microwave, and 30% cooking time in grill, quickest in cooking, recommended for a whole piece of poultry such as chicken, duck and goose.

When the combination function is chosen, operate the "Timer /Weight/Auto Menu" knob/key to set time. Press "Start" to cook in chosen time.



In combination mode, all heating elements including grill rack and cooking utensils are very hot. Be careful when taking foods out of oven you can use thick cloth or special gloves for microwave oven purpose in order to avoid scalding.

Pre-heating is unnecessary in "Grill" mode.

7. Auto Defrost

Press "Auto Defrost", and LED displays "Defrost Meat", "Defrost Poultry" and "Defrost Seafood" sequentially.

Defrost Meat: for defrosting meat, with weight ranging from 0.1Kg to 2.0Kg.

Defrost Poultry: for defrosting poultry, with weight ranging from 0.2Kg to 3.0Kg(for HW25800K-01AG) 0.1Kg to 2.0Kg (for HW25800K-03G/03BG).

Defrost Seafood: for defrosting seafood, with weight ranging from 0.1Kg to 0.9Kg.

When the defrost function is chosen, operate the "Timer /Weight/Auto Menu" knob/key to set the weight.

Press "Start" when the program detects that the food needs to be turned over, the buzzer sounds twice a second to remind you.

8. Pause/Cancel

Press "Pause/Cancel" , the operation of setting power, cooking time or defrost time can be canceled.

When the oven is working, "Pause/Cancel" one time or open the oven door, the oven will pause; press the button twice, the program is cancelled.

9. Adjust the Auto Menu by rotating the coder leftward.

A.1 Rice: for cooking rice with weight ranging from 0.15Kg to 0.6Kg (for HW25800K-01AG) 0.1Kg to 0.5Kg (for HW25800K-03G/03BG);

A.2 Fresh Vegetable: for cooking vegetables with weight ranging from 0.1Kg to 0.5Kg (for HW25800K-01AG) 0.15Kg to 0.6Kg (for HW25800K-03G/03BG);

A.3 Popcorn: for making popcorn with corn weight ranging from 0.07Kg to 0.13Kg (for HW25800K-01AG) 0.1Kg (for HW25800K-03G/03BG);

A.4 Potato: for cooking 1,2 or 3 of potato(each weighing about 0.3Kg) (for HW25800K-01AG).Or with weight ranging from 0.15Kg to 0.6Kg (for HW25800K-03G/03BG);

A.5 Pizza: for heating pizza with a proximate weight ranging from 300g to 500g (for HW25800K-01AG) 150g to 300g (for HW25800K-03G/03BG);

A.6 Beverage: for heating 1 to 3 cup of liquid,(each capacity about 230ml) (for HW25800K-01AG), Or a cup of liquid weight 250g,500g and 700g(for HW25800K-03G/03BG);

A.7 Fish: for cooking fish with weight ranging from 0.2Kg to 0.6Kg (for HW25800K-01AG) 0.1Kg to 0.5Kg (for HW25800K-03G/03BG)(this function will pause at the first half of working time, reminding user to turn over the fish);

A.8 Chicken: for grilling chicken with weight ranging from 0.8Kg to 1.4Kg(for HW25800K-01AG) 0.2Kg to 1.2Kg (for HW25800K-03G/03BG) (this function will pause at the first half of working time, reminding user to turn over the fish).



1. As the above programs are designed for foods within the temperature range 20°C -25°C, doneness of food is subject to the actual temperature. Please adjust time by yourself.

2. It's suggested to use cling film to cover food when cooking potatoes or fish, in order to avoid evaporation of water.

3. The taste is determined by the shape, weight and temperature of the food. When using "Auto Menu" function, please follow the above instructions, and make adjustment by yourself if the food is not well done.

4. Auto Menu

Doneness of food in "Auto Menu" function is determined by personal favor, size, quantity and placement of food and the working voltage. If the food is not well done, please adjust cooking time according to actual conditions.

10. Combination Cooking Program

Combination: For each time (or each phase), the maximum time to be set is 30 minutes(HW25800W-01AG) 60 minutes(for HW25800K-03G/03BG). Users can operate in 4 phases. For example, If you want to set 10 minutes of maximum microwave power plus 10 minutes of grill, you should follow this sequence: press "Microwave" button, the LED displays 100P; then turn "Timer /Weight/Auto Menu" knob to set the time as "10:00"; press "Grill" and turn "Timer /Weight/Auto Menu" knob; when the LED displays "10:00", press "Start" and the appliance will start cooking according to the program set. It will execute the first phase of program, until time decrease to "0"; then the second phase of program goes on until it ends.



Combination cooking program can not be set in "Auto Menu" mode.

11. Delay Time Function

When regular program and cooking time is set, the LED displays time, "8:28" for example, press "Preset clock" key button for 3 seconds, it's in delay time state now. When the defrost function is chosen, operate the "Timer /Weight/Auto Menu" knob/key to put into hour, and then press "Preset clock" key, and When the defrost function is chosen, operate the "Timer /Weight/Auto Menu" knob/key to set minute. Finally, press "Preset clock" key or waiting for 5 seconds later to start this function. The LED will display current time.

When checking delayed time, press "Clock Setting" button, and the LED will display delayed time. Release the button, the LED resumes current time.



When "Delay Time" function is activated:


- a. Press "Start" if you want to start cooking immediately.
- b. Press " Pause/Candle " button if you want to cancel this function.

12. Reminder Tone

- a. The buzzer beeps for each valid operation. And low buzzer beeps for invalid operation.
- b. When each program ends, the buzzer will reminder for 3 times, and the LED displays "END". If the "Pause/Cancel" button is not pressed or the oven door not opened, the buzzer will beep every 3 minutes for reminding. When the door is opened, the LED will display ":" or current time.
- c. When the oven is cooking something, press "Microwave" button, and current cooking power will be displayed on LED. Release the button, the LED will display the residual time of cooking. Operation of the oven is not affected.

13. Child Lock Function


When LED displays " : " or current time, keep pressing "Pause/Cancel" button for 3 seconds. Child lock function is activated when the buzzer beeps and the LED "  " displays. The appliance can not be operated in this state. In order to unlock the oven, keep pressing " Pause/Cancle " button for 3 seconds, the buzzer beeps and the "  " disappears from LED.


-  1. In the process of setting functions, if no program is input for 2 minutes, it will display ":" or current time.
2. The "Start" button is activated in one of the following two conditions:
- a. The oven door is closed in 2 minutes;
 - b. The "Pause/Cancel" button is press within 2 minutes, otherwise it's locked.

14. Fan Delay Function:


After the microwave oven stops working, the fan will continue to work for 2 minutes.
 REMARK: this method can greatly reduce the rising of temperature of inner electric elements, by which to reach the target of prolong the lifespan of microwave oven. Also the temperature in the kitchen cabinet and be much safer.


15. The Door Control:

When the door is opened the light will be off. If the microwave oven is in the state of working, if the work stops it means the key of  is pressed for once. After the door is opened, press the key of "OK" to restart.

-  1. After the cooking, the display screen shows: "End" and the buzzer beeps once every 3 minutes. To press any key to go back to the standby model
2. The key " ^ " or " v " , when setting time or weight, the intermittent press or non-stop press are both allowed.

★ Operation Instruction for HW2500K-C2G

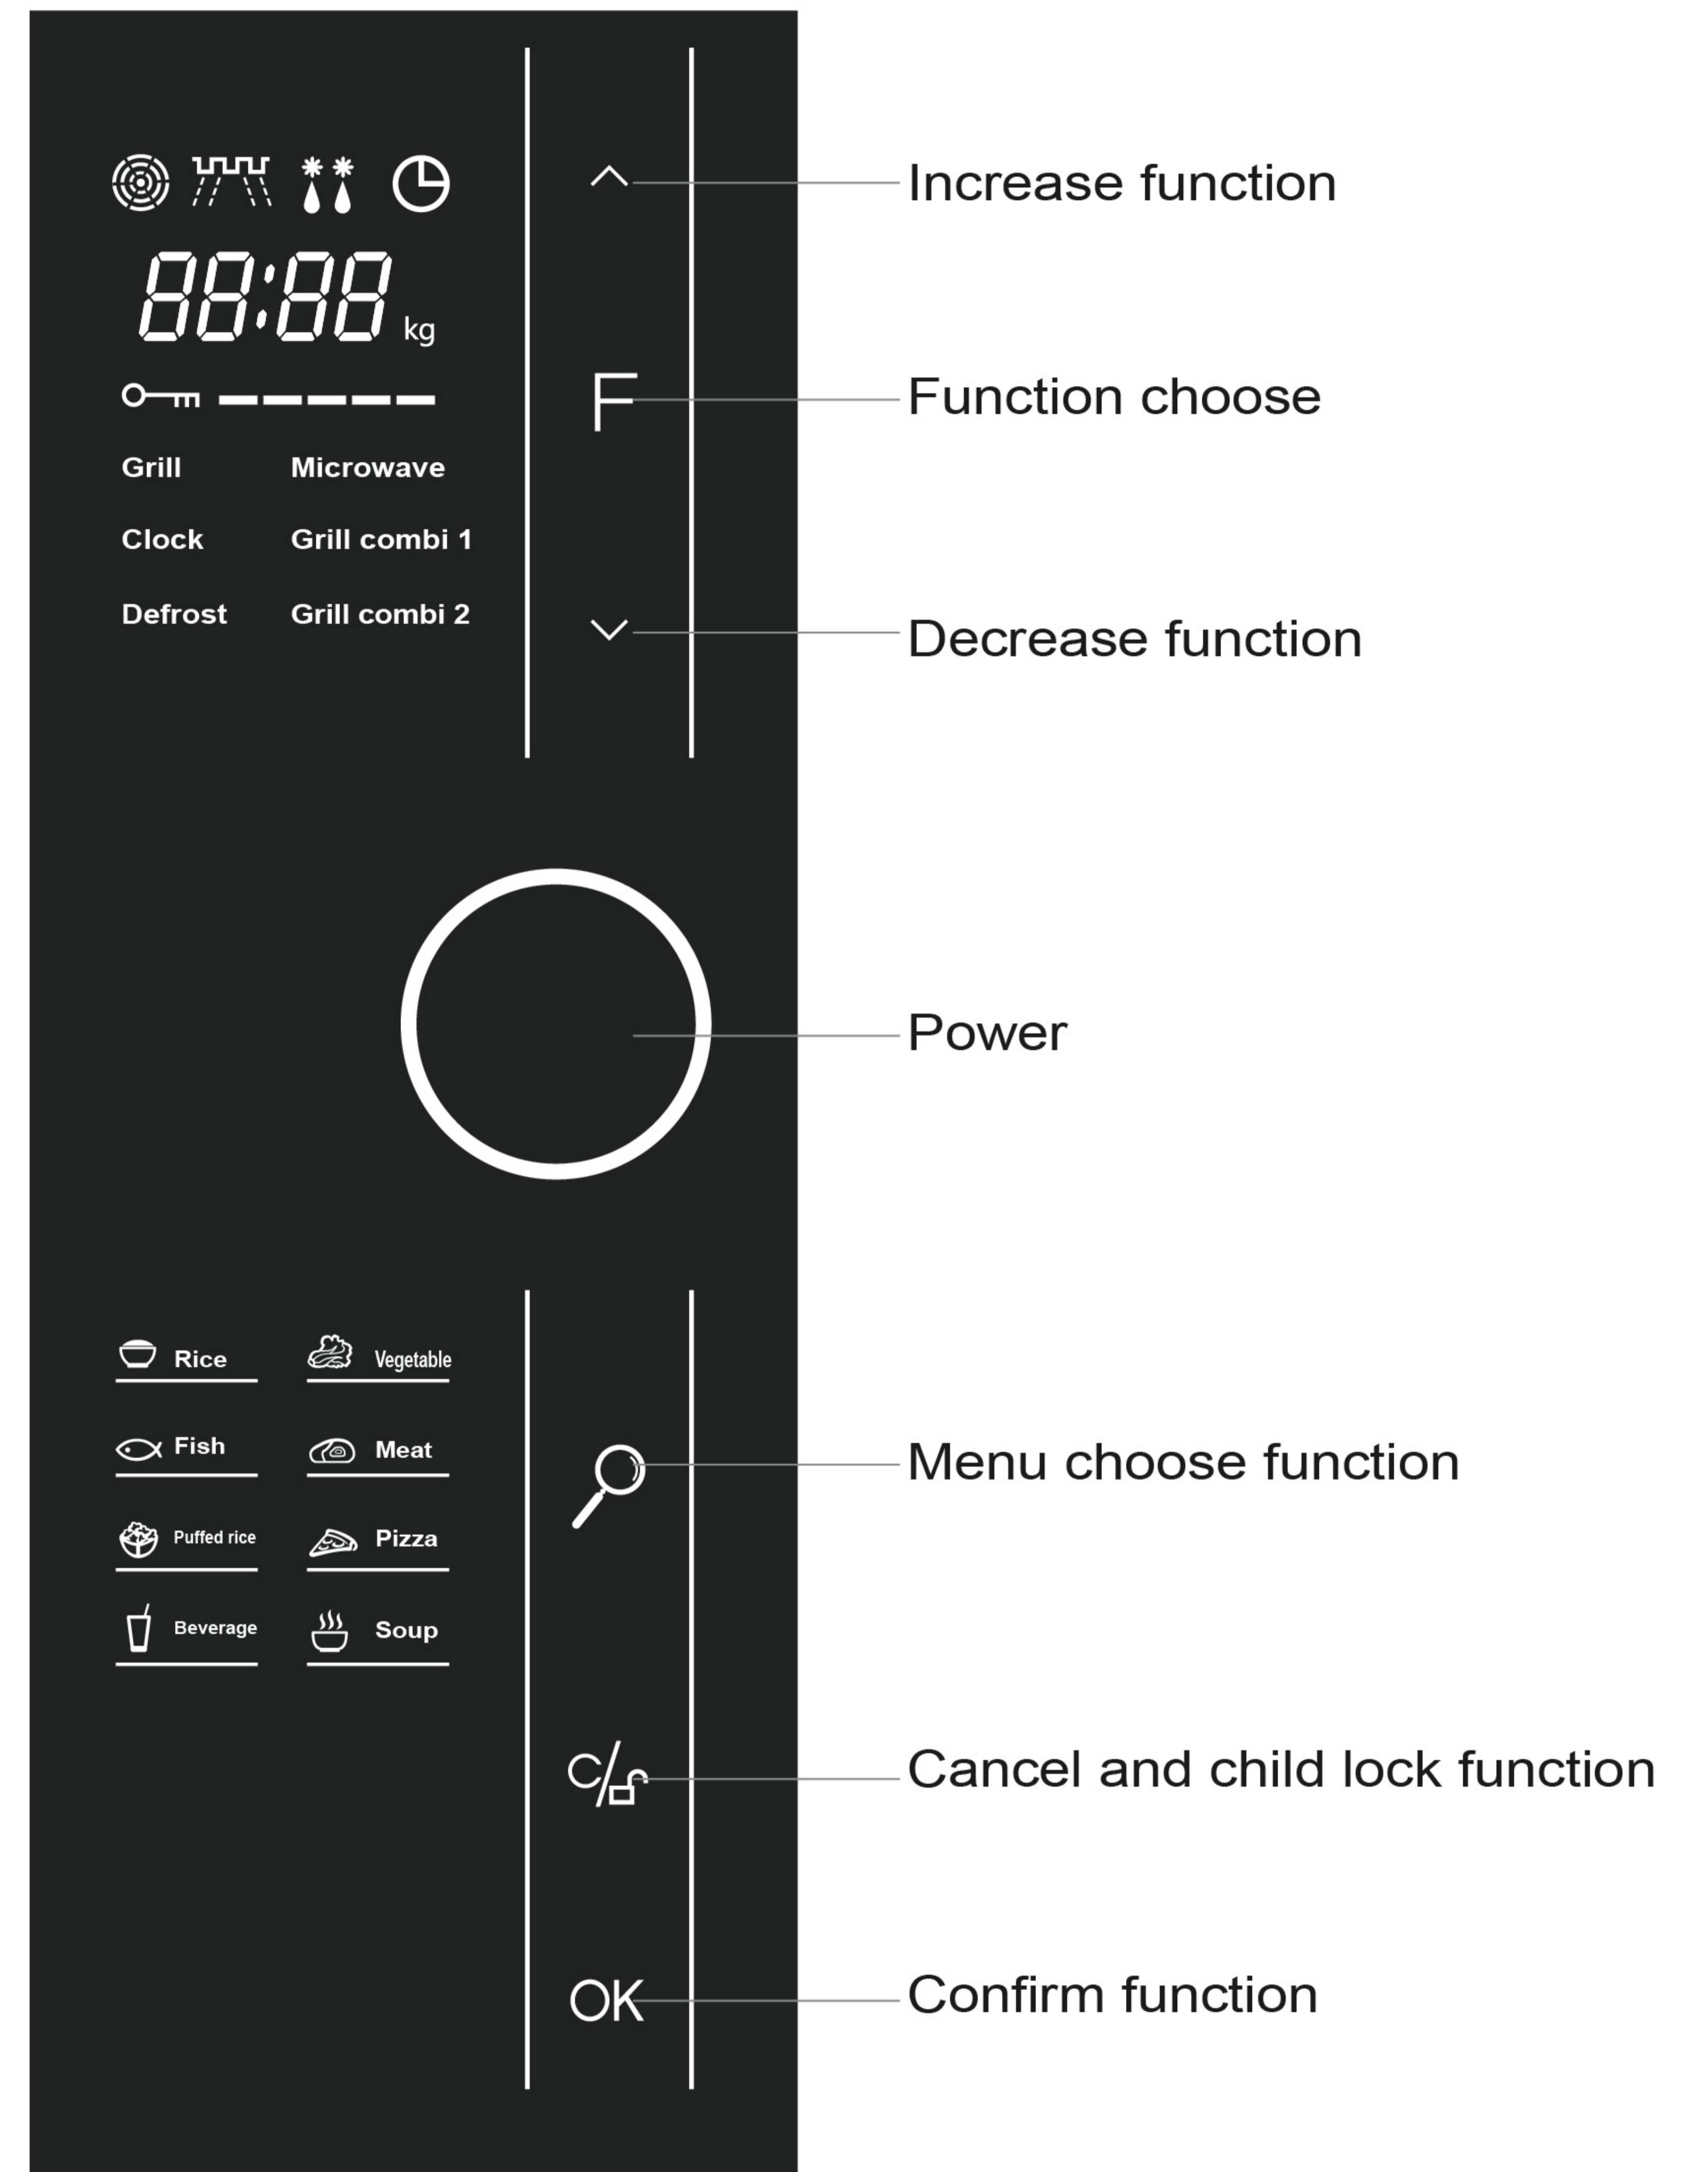

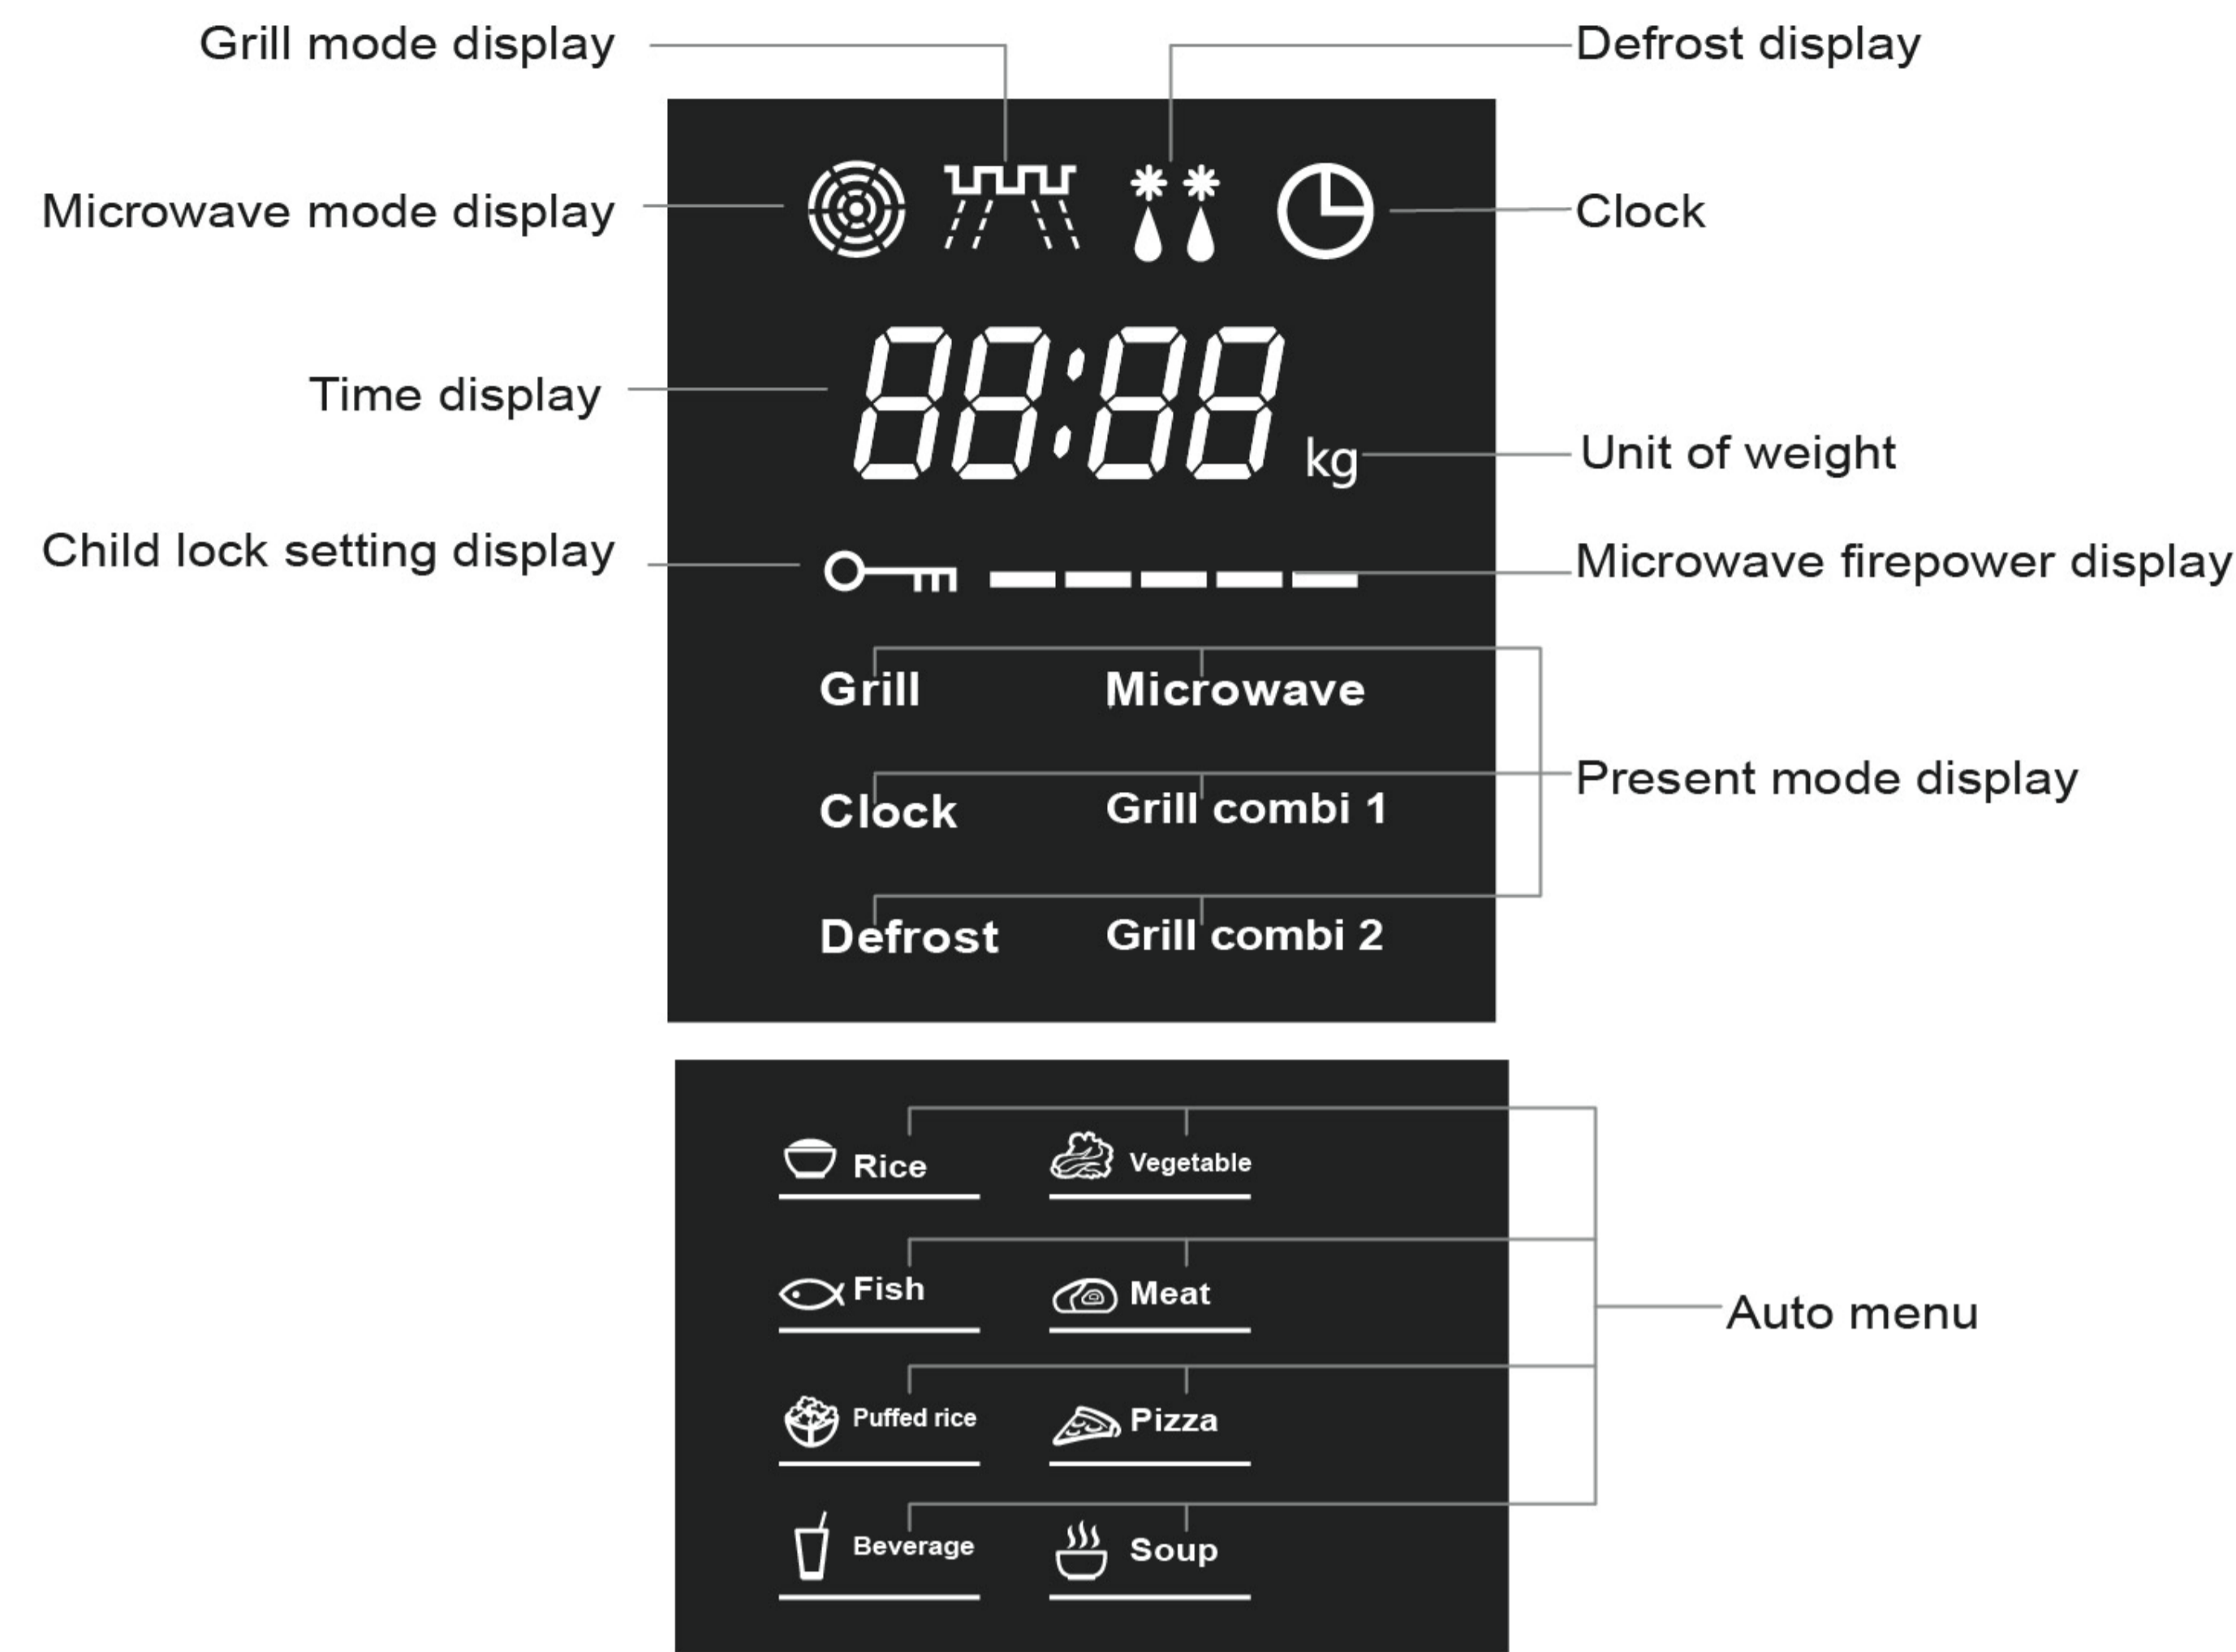

● Power on

When power is on, the display screen is totally illuminated and after one second the buzzer beeps for one time, and then the display screen goes out.

To touch the power key and the display screen shows “⌚” the present time is 0:00, the clock begins to time and it goes into standby mode.

At any mode once touching the power key for once, the power is off.

At the model of power off, when touching the other keys except power key they will be invalid, and when touching one time it will go back to standby mode.

REMARK: at standby mode the display screen shows only present time and the “⌚” icon.

1. The setting of microwave oven cooking

- Function choosing: at standby mode when touching the “F” key, the display screen will show “🌀” (flashes), “P100” “MW”(flashes), “-----” and the other basic function key to let illuminated.
- Firepower setting: the microwave firepower can be controlled by key of “^” or “v”. The microwave power cycling is “P100 ⇌ P80 ⇌ P60 ⇌ P40 ⇌ P20”. When the corresponding microwave power is set, touch the key “OK” to confirm, and the time begins from 0:10.
- Time setting: microwave working time can be set by the key “^” or “v”, and press key “OK” to confirm then the microwave starts working.

2. The setting of grilling cooking:

- Function choosing: at standby mode when touching the “F” key, the display screen will show “🔥” (flashes), “Gr” “Grill”(flashes) and the other basic function key to let illuminated.
- Time setting: microwave working time can be set by the key “^” or “v”, and press key “OK” to confirm then the grilling cooking starts working.

3. The setting of baking and grilling combination cooking:

- Function choosing: at standby mode when touching the “F” key, the display screen will show “🌀” (flashes), “🔥” “Co-1”, “baking and grilling combination 1” and the other basic function key to let illuminated.

- Time setting: microwave working time can be set by the key “^” or “v”, and press key “OK” to confirm then the baking and grilling combination starts working.

(The operation procedures of combination 2 are the same as above, to touch the “F” key, the display screen will show “baking and grilling combination 2” and the time will be set.)

The baking and grilling combination 1: are suitable for cooking of flesh, a whole chicken or duck, food like this.

The baking and grilling combination 2: are suitable for cooking of cuisine occidental, grilled fillet steak and so on.

4. The setting of defrosting:

- Function choosing: at standby mode when touching the “F” key, the display screen will show “❄️” (flashes), “0.10” “kg”, “Defrost” and the other basic function key to let illuminated.
- Weight setting: the defrost weight can be set by the key “^” or “v”, “0.10 ⇌ 0.20 ⇌ 0.30 …… 1.70 ⇌ 1.80”, and press key “^” or “v” to confirm then the defrost starts working.

5. The setting of clock function(24 hours system)

- Function choosing: at standby mode when touching the “F” key, the display screen will show “⌚” (flashes), “Hour”(flashes) “Clock” (flashes), and the other basic function key to let illuminated.
- Hour setting: press the key “^” or “v” to adjust the “Hour” into the time needed to be set, and press key “ok” to confirm. The display shows (flashes) “minute” (flashes), “clock” (flashes), and then the other basic function key to let illuminated.
- Minute setting: press the key “^” or “v” to adjust the “Hour” into the time needed to be set, and press key “ok” to confirm. Clock setting being finished, goes back to mode of standby.

F.E:

The present time is “0:00”, and the time needed to be set is “12:30”.

Touch “F” key for six times, and the display screen shows (flashes), “clock” (flashes) Press key “^” or “v” to adjust the “hour” to “12”, and press “OK” to confirm. “12:00” (“:00” flashes) and the others do not change. Then press key “^” or “v” to adjust the “minute” to “30”, and press “OK” to confirm, the display screen shows: “12:30” and “⌚”, the setting of clock is finished.

6. The setting menu cooking:

- Function choosing: At standby mode, touching the “🍲” key to choose the menu.
- Weight setting: press the key “^” or “v” to set the different weight for menu. Press key “OK”
 - Rice: suit to cooking rice with weight from 0.15kg to 0.60kg;
 - Vegetable: suit to cooking vegetable with weight from 0.10kg to 0.50kg;
 - Meat: suit to cooking meat with weight from 0.20kg to 0.60kg(to turn over the food when the buzzer beeps);
 - Pizza: suit to heat pizza with weight about 0.30kg/0.50;
 - Beverage: suit to heat beverage or liquid with capacity of 230ml for 1-3 cups.
 - Puffed rice: suit to puff corn with weight from 0.07kg to 0.13kg;
 - Fish: suit to steam the fish with weight from 0.20kg to 0.60kg;

F.E: to cook rice of 0.30kg.

At the model of standby, to press the key “🍲”, and the display shows "0.15kg", "kg", "rice"(flashes), and the other basic Function key to let illuminated.

Press the key “^” or “v” to set the weight of rice, and the weight set is 0.30kg. After the confirmation to the weight, Press key “OK” to confirm, the cooking of rice begins.(the setting of the other menu are similar with rice)



1. As the above programs are designed for foods within the temperature range 20°C-25°C, doneness of food is subject to the actual temperature. Please adjust time by yourself.
2. It is suggested to use special microwave vessel when cooking rice, in order to avoid evaporation of water or rice.
3. it's suggested to use cling film to cover food when cooking potatoes or fish, in order to avoid evaporation of water.
4. The taste is determined by the shape, weight and temperature of the food. When using "Auto Menu" function, please follow the above instructions, and make adjustment by yourself if the food is not well done.
5. Auto Menu
Doneness of food in "Auto Menu" function is determined by personal favor, size, quantity and placement of food and the working voltage. If the food is not well done, please adjust cooking time according to actual conditions.

7. The setting of child locks function:

Lock: at the mode of standby, to touch the key of “C/F” for 3 seconds. The display will shows: present clock “⊖” “0-m”, and then the child lock is set successfully. At this moment all the keys are invalid except “C/F” and “power”.

Unlock: at the mode of standby, to touch the key of “C/F” for 3 seconds. The display will shows: present clock “⊖” and then the child lock is set successfully.

8. The setting of multi section function:

When the multi section function is set, microwave, grilling, the baking and grilling combination 1 and baking and grilling combination 2 set can be set at multi section. It is forbidden to set P100 microwave, or grilling, or the baking and grilling combination 1 and baking and grilling Combination 2 at the same time. Multi section can be set as three sections at most.

F.E: to heat in different firepower when making soup.

- (1). To set the first section: to set microwave P100 firepower for 6 minutes according to the microwave setting methods.(Don't press key "OK")
- (2). To set the second section: to set microwave P40 firepower for 5 minutes according to the microwave setting methods.(Don't press key "OK")
- (3). To set the third section: to set microwave P20 firepower for 4 minutes according to the microwave setting methods. Then press the key "OK" to start working.

REMARK: this function are used to the cooking the food need the adjustment of firepower like making soup, porridge, etc.

9. The setting of quick start:

At the mode of standby, to touch the key “^” or “v”, the time will increase for 30 seconds by one touch, the maximum time will be 10 minutes. After the setting of time, press the key of "OK" to confirm, and the microwave starts working. The Acquiescent firepower will be P100.

10. The function of cancel and pause:

When setting the function to press the key “C/F” for once, the present function setting is cancelled and it goes back to standby mode.

After start working, to press the key “C/F” for once, it will pause. Touching key "OK" to restart, or to touch the “C/F” again to go back to standby mode directly.

11. Auto return function:

When setting functions, it will go back to standby mode when there is no any effective key operation.

12. Inquiry function:

When the machine is working, to touch the key "F" for once, and the display shows “⊖” the time on present clock, it will go back to working interface.

13. Fan delay function:

After the microwave oven stops working, the fan will continue to work for 2 minutes.

REMARK: this method can greatly reduce the rising of temperature of inner electric elements, by which to reach the target of prolong the lifespan of microwave oven. Also the temperature in the kitchen cabinet and be much safer.

14. The door control:

When the door is opened the light will be off. If the microwave oven is in the state of working, if the work stops it means the key of “C/F” is pressed for once. After the door is opened, press the key of "OK" to restart.



1. After the cooking, the display screen shows: “End” and the buzzer beeps once every 3 minutes. To press any key to go back to the standby model
2. The key “^” or “v”, when setting time or weight, the intermittent press or non-stop press are both allowed.

Cleaning and Maintenance

Unplug this appliance before cleaning.

- ★ The oven should be cleaned regularly, Do not use a steam-cleaner to clean this appliance. Pressurized steam could reach the electrical components and cause a short circuit.If the food or liquids containing salt splash the cavity interior, wipe these away thoroughly to avoid corrosion on the cavity surface.
- ★ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- ★ Surface of Microwave Oven
 - Clean the surface with a wet cloth containing neutral detergent. Do not use any corrosive detergent or damaging tools.
- ★ Oven Door
 - Clean the doorframe, window, seal and adjacent parts with warm and wet cloth. Do not use any corrosive detergent.
- ★ Control Panel
 - Be careful when cleaning the control panel. Use a soft cloth with certain amount of water to clean it (if the panel gets wet, use a dry soft cloth instead). Do not scrape the panel or clean it with corrosive detergent.
- ★ Grill Rack
 - After using, clean the rack with neutral detergent.
- ★ Oven Cavity
 - Clean the cavity and the cover of wave-guide tube with wet warm cloth. Wipe off the food residue, which may cause partial overheating inside oven.Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass. Clean the turnable ring and glass tray with neutral detergent and dry them before putting back into oven.



Peculiar smell may exist in the oven after long-term usage. You can get rid of the smell by one of the following ways:

1. Put several slices of fresh lemon or spoons of lemon juice in a glass, and cook it in oven for 2-3 minutes with high microwave power.
2. Put a glass of black tea into oven, and cook it for 2-3 minutes with high microwave power.
3. Put some orange pericarp inside the oven, and cook for 1 minute with high power.

Cooking Tips

● Cooking by Microwave

- ★ Placement of food
 - Put the thick part outward, and the thin part inward (in the middle).
- ★ Setting Cooking Time
 - Set a short cooking time first to see whether the food is cooked well. If not, set longer time to continue cooking. If a long time is set at the beginning the food might be burnt.
- ★ Covering of Food
 - Cover the food with cling film, lid or napkin that are applicable for microwave. This could prevent splash of liquid and make the food cooked averagely.
- ★ Partial Wrapping of Food
 - Partial wrapping can keep the thin part of food from being overcooked. Wrap these parts with aluminum foil for defrosting.
- ★ Stirring of Food
 - If necessary, stir the food for one or two times during cooking.
- ★ Turning of Food
 - When cooking foods such as chicken leg, hamburger or steaks, turn the food over when it's half done in order to make it cooked averagely.
- ★ Re-placement of Food
 - The position of food shall be changed during cooking, in order to make the food averagely cooked. For example, exchange the positions between the outward part and inward part, or between the upper part and lower part.
- ★ Keeping of Food
 - When the food is cooked, keep it in the oven for a while, better with some coverings. If possible, take the food out of oven and stir it.
- ★ Checking Doneness
 - Doneness of food can be judged by the color and hardness of food. For example, observe whether there's vapor rising from the whole piece instead of part or edge of food, or whether the joint of poultry is easy to tear apart, or whether there's any fresh blood on meat or poultry, or whether the fish is transparent and easy to cut off by knife and fork.
- ★ Concentration of Vapor
 - It's a normal phenomenon that vapor concentrates during microwave cooking when the water inside food is vaporized. Generally speaking, food with coverings concentrates less vapor than that without coverings. Therefore, good ventilation shall be kept inside the oven.

- ★ Frying Pan for Microwave Purpose
 - Before using frying pan or other utensils, segregate the pan from ceramic bottom with a heat-resistant ware such as ceramic plate, in order to avoid crack of ceramic bottom due to overheating. The frying pan shall not work too long time in the oven.
- ★ Preservative Paper for Microwave Purpose
 - When cooking grease food, make sure that the preservative paper is not in contact with food since the paper is very likely to melt.
- ★ Plastic Cookware for Microwave Purpose
 - Some plastic cookware for microwave purpose can not be used to cook food containing too much oil or sugar.
- ★ Plastic Cookware for Microwave Purpose
 - Some plastic cookware for microwave purpose can not be used to cook food containing too much oil or sugar.

● Method of Defrosting Foods

- ★ Steak
 - Wrap the slim end of the steaks with aluminum foil.
 - Lay the steakes on a pan with the thinnest part in the middle. Make sure that the steaks are chopped apart entirely.
 - Turn over the steaks when they are half done, and wrap up the defrosted part with aluminum foil.
 - Put the steaks back on pan, and close oven door to resume defrosting.
 - When defrosting is done, keep the steaks in aluminum foil for 5-15 minutes.
- ★ Beef (Chopped Meat)
 - Wrap the edge of beef with aluminum foil, and put it on a pan.
 - Turn over the beef when they are half done. Take out the defrosted part, and wrap the beef again.
 - Close oven door to resume defrosting.
 - When defrosting is done, keep the beef in aluminum foil for 5-15 minutes.
- ★ Roasted Meat (Beef/Pork/Lamb)
 - Wrap the edge of meat ith aluminum foil.
 - Put it on a pan.
 - Turn over the meat when it's half done, and wrap the defrosted part.
 - Close oven door to resume defrosting.
 - When defrosting is done, keep the meat in aluminum foil for 10-30 minutes.
- ★ Poultry
 - Remove commercial packing of the poultry, and wrap the wings and feet with aluminum foil.
 - Put it on a pan with its chest downward.
 - Turn over the poultry when it's half done, and wrap the defrosted part.
 - Close oven door to resume defrosting.
 - When defrosting is done, keep the poultry in aluminum foil for 10-30 minutes.
- ★ Chicken Chips (Wings and Legs)
 - Wrap the bare bones with aluminum foil.
 - Put the chips on a pan.
 - Turn over the chips when it's half done, and wrap the defrosted part.
 - Close oven door to resume defrosting.
 - When defrosting is done, keep the chips in aluminum foil for 5-30 minutes.

Normal Phenomena and Trouble Shooting

● Precautions



Be careful of microwave radiation.

There's microwave radiation and high voltage inside the oven. In order to reduce the risk of hazard to human being, do not disassemble this appliance by yourself except for qualified service people and never expose yourself in the radiation from microwave generator or transmitter.

1. If the oven door or seal is damaged, do not use the oven anymore until it's fixed by qualified service people.
2. If the socket and fuse are not in good condition, please contact FOTILE's after-sales service center or qualified service people.
3. Except for qualified service people, do not allow anyone to make any inspection on the oven, including disassembling the cover.

● Normal Phenomena

1. Radio and TV reception may be interfered when microwave oven operating. It's similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It's normal.
2. Although the microwave oven will not be damaged when operating empty loaded for a short time, the user should try best to avoid this from happening.
3. The microwave oven must be cleaned regularly, especially when microwave or grill functions are applied, because the oil stain accumulating at the top of cavity and walls may cause smoke.
4. The temperature inside cavity will rise if the magnetron operates for a long time. In order to protect the magnetron, the oven will shut off automatically and resume operation shortly afterwards. It's normal.

● Trouble Shooting

Trouble	Possible Cause	Solution
No display on LED	Power cord not plugged in tightly.	Unplug, then plug again after 10 seconds.
	Fuse blowing or circuit breaker works.	Contact FOTILE authorized service people.
	Trouble with socket.	Test socket with other appliances.
	In standby mode.	Press any button to end standby.
Microwave oven can not be started.	Door not closed well.	Close door well.
	Pressing "Start/OK" button not pressed yet.	Press "Start" button.
	Other programs are chosen.	Press Pause / Cancele" button to cancel chosen program and choose a new program.
	Mistake in choosing programs	Choose correct program based on the manual.
	Mistake in pressing " Pause / Cancele" button.	Choose correct cooking program.