FOTILE

吸油烟机

使用安装说明书 | EMG9063-GR

如有任何需要，请联系方太授权的服务中心。本说明书部分图片为示意图，仅供参考，若图片与实物不符，以实物为准。

WWW.FOTILEGLOBAL.COM

1101000946240

尊敬的用户，您好！感谢您选购方太公司为您精心制造的方太系列产品，

使用前请通读本《使用安装说明书》（以下简称说明书），此说明书将有利于您熟悉油烟机安全信息、操作和保养维修等，并让您享受到全新的下厨乐趣。

请您在使用前务必认真阅读说明书，并遵从说明书要求进行使用。本说明书的操作说明对于维持产品的良好工作状况十分重要，若因使用不当造成产品故障，您将失去免费保修的权利，任何直接或间接的免费保修申请将不被本公司各地授权的服务中心所接受。同时我们建议您在质量保修期内及保修期后，如有需要维修时请与方太公司当地授权的服务中心联系，这对您和我们都是非常重要的。

我们授权的服务中心将为您提供方太公司专业的零部件及技术支持，使您的产品得到优质快捷的维修保障，同时让您得到最轻松细心的服务。

如果您需要服务，您将需要提供产品型号和序列号。

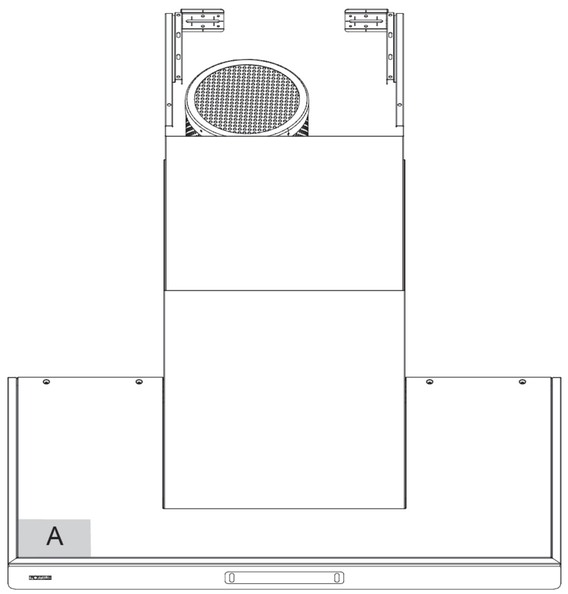

目 录

警告和安全说明 ---------- 1

安装 ---------- 5

装箱单 ---------- 5

安装警告 ---------- 6

产品尺寸图 ---------- 7

安装建议 ---------- 7

安装步骤 ---------- 9

安装后的调试 ---------- 12

清洗保养 ---------- 12

使用方法 ---------- 14

主要技术参数 ---------- 14

操作说明 ---------- 14

关于吸油烟机与灶具一体控制的说明 ---------- 15

常见故障的识别和处理 ---------- 16

产品特征和参数会在无通知情况下随时更改，并且可能与此说明书略有不同。
请访问我们的官网www.fotileglobal.com，获取最新信息。

警告和安全说明

特别说明:

请严格按照本说明书规定使用，由于本产品不当使用造成的任何财产损失、人身损害，本公司不承担责任。

⚠警告:

器具不打算由存在肢体、感官或精神能力缺陷或缺少使用经验和知识的人（包括儿童）使用，除非有负责他们安全的人对他们进行与器具使用有关的监督或指导。
此产品不适用于（包括8岁以下儿童）身体、感知或精神能力减弱或缺乏经验或知识的人群，除非在对其安全负责的人监督或指导如何安全使用此产品的情况下（针对欧盟市场）。
应照看好儿童，确保他们不玩耍本器具。
注意：当使用烹饪器具时，易触及部件可能会发烫。

a. 请定期倒去积油；每次使用吸油烟机后，请擦拭吸油烟机外表面。
b. 为了更加舒适地使用，请经常对吸油烟机外表面和油杯进行清洁。
c. 如果不按说明书规定的方法清洗，吸油烟机有起火的危险。

⚠ 严格执行

接 地	插头必须插在合理安装并接地的电源插座上，以确保安全。接地线不得与煤气管、自来水管、避雷针、电话线等连接。接地不良可能会引起触电或其他事故。
	本器具含有仅用于实现功能用途的接地连接。
	由于本吸油烟机的安装程序比较复杂，且重量较重，应由专业安装维修人员按照说明书进行安装。未按说明书要求安装螺钉或固定装置可能会导致触电、脱落、起火等危险。
	使用此新产品之前请开封检查此产品是否受损，如果发现此产品有明显的损坏，请勿安装使用，请您立即联系方太授权的服务中心。
Safety Guideline	请遵照加热设备厂家的安全指南，同时要遵照消防等管理部门颁布的安全标准进行。

>30mm	安装吸油烟机的墙壁要有足够的支撑强度，对于中空墙壁，中空板实心层的厚度必须大于30mm以上，对于混凝土墙壁可直接打安装孔。整机必须牢固安装在墙壁上。
	当在墙壁、天花板上进行切割或者钻孔时，请注意不要损坏电线以及其他隐藏的设备。
	本产品仅供家庭日常使用，请不要用于商业用途或在其它特殊环境中使用（例如：室外）；也不能用来排出有危险的或者容易爆炸的物质或者气体。如您在特殊环境中使用本产品，方太将不承担责任。
	当吸油烟机与燃烧燃气或其他燃料的器具同时使用时，房间必须通风良好（该条不适用于把气体排回室内的器具）。
ON OFF	油锅着火时，请立即关闭吸油烟机（吸油烟机的运行会助燃火势）。采用有效的灭火方法灭火。例如，用金属的盖子将明火盖住，立即关闭燃气总阀门，并使易燃物远离明火。
	出风管必须确保排到室外。为了避免火灾的发生并保持空气清新，请将废气排到室外。请不要将废气排到墙内、阁楼、车库中（只适用于有出风管的吸油烟机）。
T≤40℃	吸油烟机使用环境的温度不能超过40℃。
	请按照本说明书规定的方法清洗油烟机，否则吸油烟机有起火的危险。
	当油杯内的储油达到油杯容积的三分之二时，请及时清理，防止溢出。油杯中所收集的废油请勿食用！
ON OFF	在移动吸油烟机进行安装、清洁或者修理前，务必切断电源，以免触电；在进行安装、清洁或修理时，应佩戴防护手套，以防被吸油烟机内金属板快口伤手。

	安装完成后，插头应在能够到的位置。吸油烟机若长期不用，请切断电源。
	如果电源软线损坏，为了避免危险，必须由制造商、其服务机构或类似的专业人员更换。
	出现异常现象时，关闭吸油烟机电源开关，拔下电源插头或者切断总电源，马上致电方太授权的服务中心。异常状态下连续运转易发生触电、火灾等危险。
	请不要让儿童自己单独使用，或放到婴儿能够接触到的地方，否则有可能导致烧伤、触电或者其他意外伤害。
	请勿让儿童玩耍塑料薄膜和包装箱，这可能会产生窒息事故，所以请让包装材料远离儿童，包装材料不是玩具。孩童应严格监管以确保他们不会玩耍产品。

⚠ 禁止

	如果不按本说明书规定的方法清洗油烟机，吸油烟机有起火的风险。
	请不要对电源线进行改制、拉伸、结扣以及施加重物、挤压等，否则易导致电源线破损而发生触电和火灾等事故。
	禁止私自改动吸油烟机内部布线，否则有可能会发生异常动作导致人体受伤。不当修理可能发生触电、火灾等危险。
	器具排出的气体不应排到用于排出从燃烧燃气或其他燃料的器具中产生的烟气的烟道中（该条不适用于把气体排回室内的器具）。 必须执行气体排放的有关规定。
	禁止在没有锅具的情况下使用燃气灶，否则会损害上方的吸油烟机。禁止火焰直接烘烤吸油烟机。

	请勿触摸已经开启或者刚关闭不久的灯泡，以免烫伤。
	吸油烟机运行时不要将手或其他物品伸入叶轮中以免造成伤害。
	严禁电机、开关、接插件等电气部件沾水；禁止用水冲洗吸油烟机。吸油烟机被水淋湿后，请不要使用；如果使用会导致漏电、触电等事故。
	请不要用潮湿的手触摸电源插头、电器部件以及操作电源开关，否则易发生触电事故。

a. 保修服务须由方太公司授权的服务机构或人员执行。如私自拆机维修，产品将不享受保修。

b. 为避免任何可能对产品的损害，请确保实际电压和频率与本说明书中阐明的一致。

c. 当吸油烟机与使用非电能的设备同时使用时，室内负压不得超过4Pa（4x10-5bar）（针对德国市场）。

d. 其他燃烧器具产生的燃烧气体可能由于回流会对安全产生不利影响，这些气体可能导致一氧化碳中毒，因此在安装抽油烟机后，应由专业人员测试烟管，以确保燃烧气体不会回流（针对澳洲市场）。

e. 本公司产品上使用了钢化玻璃，玻璃的钢化机理决定这种玻璃存在极小概率的自爆。一旦发生非使用不当的自爆，我公司承诺免费提供该配件。钢化玻璃在以下情况，发生破裂的几率可能会大大提高，请避免发生：例如用炊具或其他硬物敲击玻璃，特别是敲击玻璃四个角部；打开油烟机周围橱柜门时撞击到玻璃；玻璃处于过冷和过热、冷热交替严重的环境等情况。

安装

装箱单

主机（轴测图）	1
密封胶带 + 内循环滤筒	1
	1
挂钩	1
保修卡	1
膨胀管Φ10×60	8
木螺钉 ST4.5×60	8
出风罩螺钉 M4×18mm	8
风机架螺钉 M4×6mm	2

左装饰罩挂钩	1
右装饰罩挂钩	1
挂钩支架	2
装饰罩挂钩安装纸板	1
蝶翼板	1
出风罩 + 上密封垫	1
	1
产品使用说明书	1
装饰罩挂钩固定螺钉 M4×8	2
出风管螺钉 ST3.9×9.5mm	4

装饰罩	1
风机外罩	1
油杯	1

安装警告

⚠注　意	
注 意　建议厨房装修完成后再安装吸油烟机。	严格执行　如果安装吸油烟机前需要移动燃气灶，请在移动前关闭燃气阀门或关闭电灶电源。
严格执行　确保吸油烟机安装的墙面平整，吸油烟机必须保持水平。	严格执行　安装吸油烟机后，请确保机器能够正常运行，并仔细阅读和保存好产品使用说明书。
严格执行　新油烟机的包装：请以环保的方式处置这些包装材料，保持一个良好的环境。请勿让儿童玩耍塑料薄膜和包装箱，这可能会产生窒息事故，所以请让包装材料远离儿童，包装材料不是玩具。	严格执行　为了保护环境，请妥善处理不能使用的旧油烟机。
严格执行　吸油烟机较重，且安装过程复杂，因此请联系专业人员按照产品使用说明书安装。	严格执行　吸油烟机可能有非常锋利的边，在进行安装、清洁或修理时，请佩戴合格的防护手套，谨防被吸油烟机内金属板快口等划伤和擦伤。
严格执行　在墙上或天花板上开凿或钻孔时，请注意不要损坏电线和其他隐藏的设备。安装时请切断吸油烟机电源。	严格执行　请使用专用电源插座，并且专用电源插座应有可靠接地。
严格执行　安装吸油烟机的墙壁要有足够的支撑强度，否则吸油烟机可能掉落损坏。	严格执行　建议内循环油烟机搭配非燃烧器具使用，若在使用燃烧器具时使用内循环油烟机，应适当开窗通风。

墙面安装

安装吸油烟机的墙壁要有足够的支撑强度，对于中空墙壁，中空板实心层的厚度必须大于30mm以上，对于混凝土墙壁可直接打安装孔。整机必须牢固安装在墙壁上。

产品尺寸图

EMG9063-GR

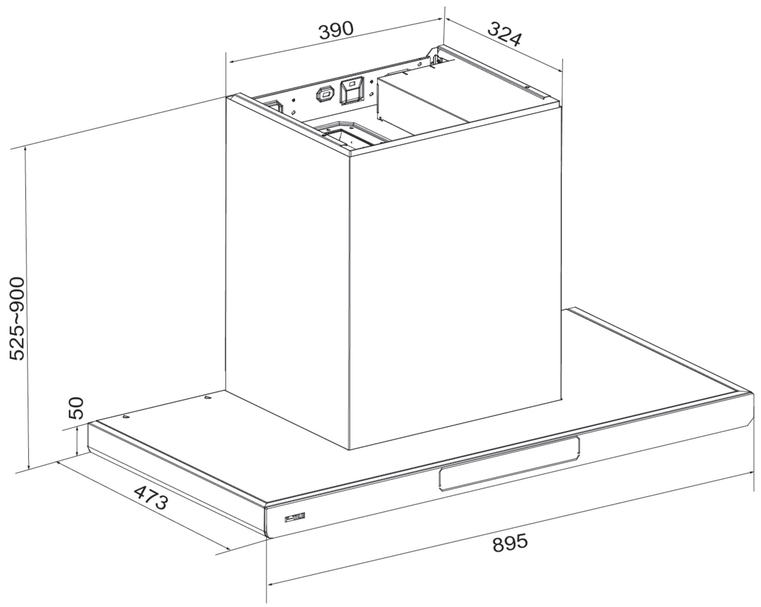

产品基本尺寸(单位：mm)

安装建议

■ 安装位置

1. 该吸油烟机只能安装于家庭厨房；请勿在其他场合使用该吸油烟机。
2. 吸油烟机必须安装在灶具的上方， 吸油烟机必须保持水平。
3. 吸油烟机周围环境的温度不能超过40℃。
4. 安装墙面应为不可燃物，严禁安装在木质等易燃的墙面上。

■ 吸油烟机与橱柜安装示意图（单位：mm）

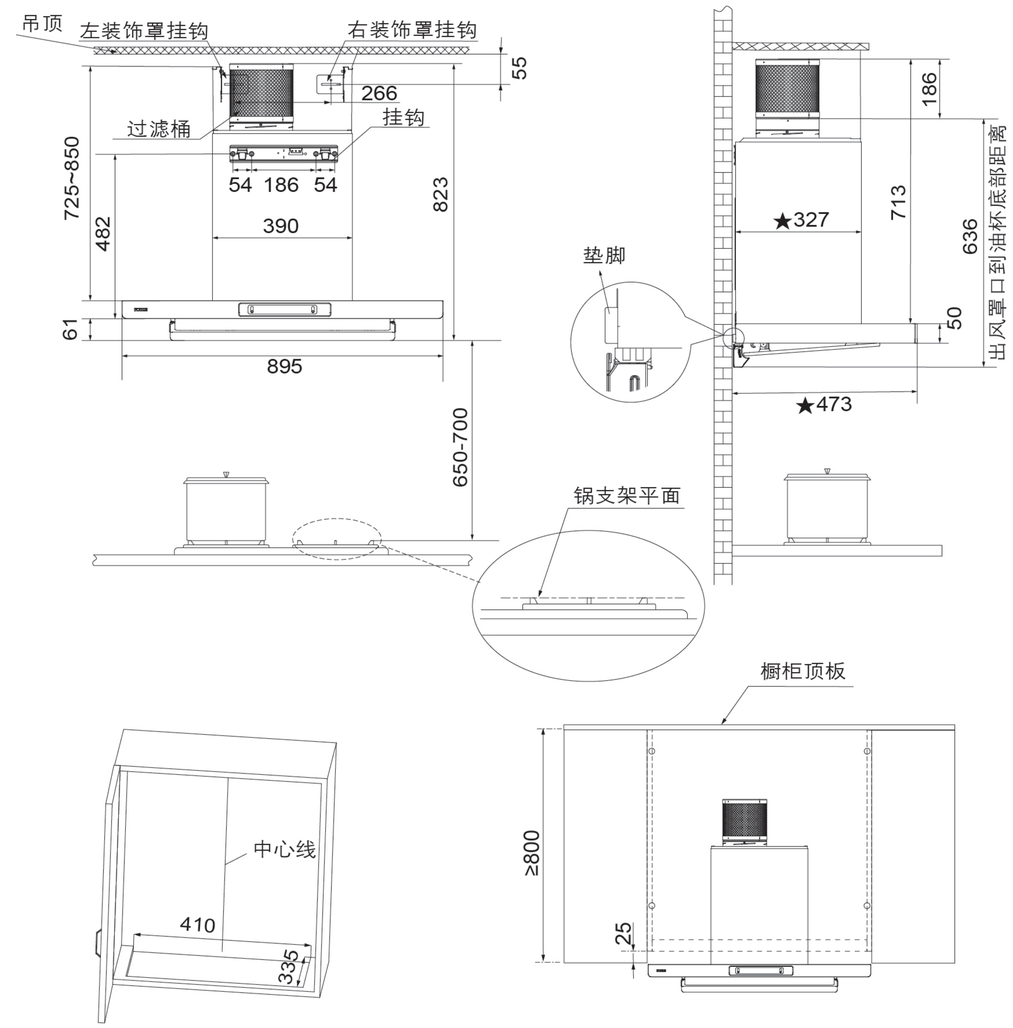

EMG9063-GR 安装示意图
（★表示到墙的距离）

注意:
吸油烟机的安装高度（即灶具上烹饪器具的支承面与吸油烟机最低部位的距离）燃气灶不得低于650mm，电灶不得低于600mm。
如灶具安装说明规定了较大的安装距离则对此应予考虑。为保证吸油烟效果，请在推荐安装高度内安装吸油烟机。若实际安装高度超过推荐安装高度，则产品的吸油烟效果可能会受到一定影响。如所属地区有相关法律规定油烟机安装高度，建议遵守相关法律。

■ 安装前的准备工作

1. 警告：

(1) 为了不对吸油烟机造成损害，请确保不要让杂物等进入排风口。

(2) 估算吸油烟机通到室外的出风管的位置，参见安装示意图。

(3) 一个直线的、较短的出风管将使得吸油烟机的排烟更加顺畅。

(4) 出风管与墙孔的连接处使用管道胶带严格进行密封。必须确保出风管与出风罩连接牢固。

(5) 墙洞过小会影响排烟效果，在保证安全的前提下，建议扩孔至出风管尺寸。

2. 工具准备

安装本吸油烟机应具备以下工具（包括并不限于以下工具）

(1) 冲击电钻（带钻头φ8）　　(2) 十字螺丝刀

(3) 卷尺　　(4) 水平尺

安装步骤

1. 冲击电钻应配备冲击钻头备用。
2. 包装箱内抬出整机，拧下油烟机背部固定风机外罩的4颗螺钉，取下风机外罩和装饰罩。
3. 固定主机挂钩与装饰罩挂钩

(1)如安装示意图所示，在打孔标识处用电钻打Φ10mm孔，并埋设Φ10×60mm膨胀管，用ST4.5×60mm挂钩螺钉固定挂钩，并用水平尺确保挂钩水平。

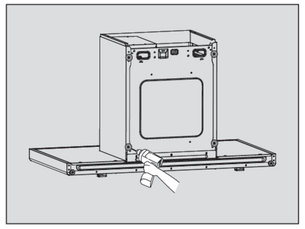

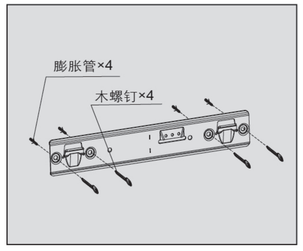

图1

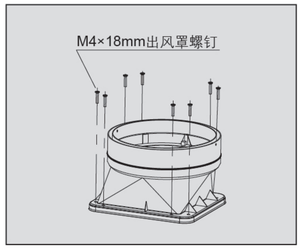

图2

(2)将装饰罩左挂钩和挂钩支架组合并用1颗不锈钢螺钉固定；用同样方法固定右挂钩和挂钩支架；

注：挂钩支架通用

(3)将装饰罩挂钩安装纸板，按照指定方向靠在安装墙壁上；

(4)根据装饰罩挂钩安装纸板的预留孔位进行开孔；

在打孔标识处用电钻打Φ10mm孔，并埋设Φ10×60mm膨胀管，用ST4.5×60mm挂钩螺钉固定挂钩，注意：确保左右装饰罩挂钩安装牢固，无转动。

4. 如图2所示，用8颗M4×18mm出风罩螺钉将出风罩及密封圈固定在主机顶部上。
5. 抬起主机，将背部挂钩孔挂入挂钩，用水平尺确认主机水平，并用风机架螺钉M4×6mm将风机架与挂钩固定。

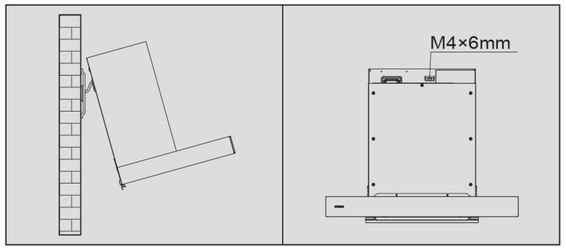

6. 安装内循环滤筒，将内循环滤筒插入出风罩内，再用密封胶带把内循环滤筒和出风罩密封固定。

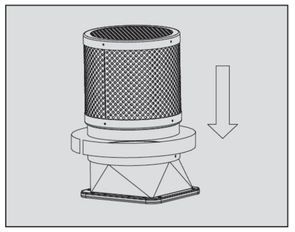

7. 风机外罩、装饰罩安装：

(1)将装饰罩放入风机外罩；

(2)把风机外罩、装饰罩同时拿起，先把装饰罩卡入装饰罩挂钩内，然后同时将装饰罩、风机外罩沿装饰罩挂钩组件推到底；

(3)把装饰罩、风机外罩推到底后，风机外罩缓缓滑下来，将风机外罩卡扣卡入风机架，然后将风机外罩插入顶板与风机架的间隙内。

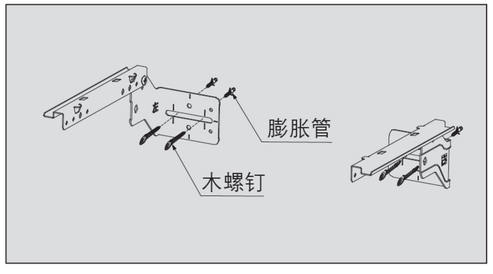

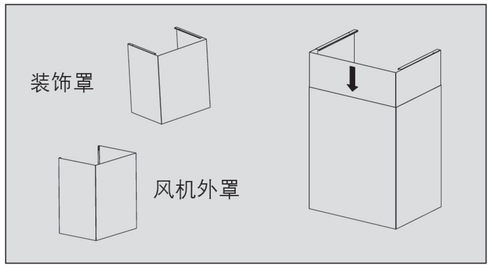

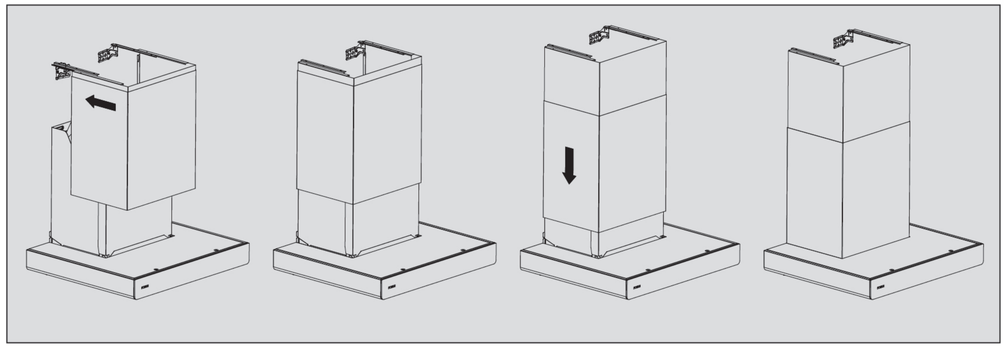

8. 安装蝶翼板：

(1)双手紧握蝶翼板前侧，将蝶翼板后侧的左右挂钩，放入集烟罩底部的挂钩架内；

(2)双手托住蝶翼板，使其向上旋转，然后用力将蝶衣板卡扣卡入集烟罩的碰扣内。

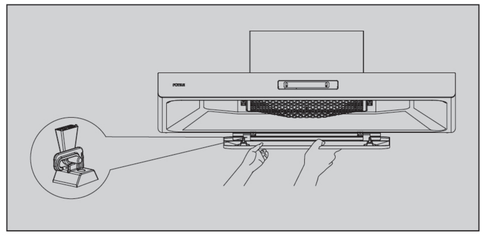

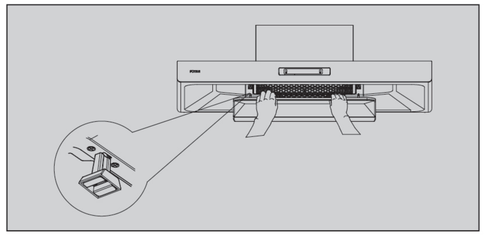

9.安装油杯：

用双手拖住油杯两端，保持水平推进，感受到“噔”一声，油杯挂钩中限位珠卡到油杯限位孔中，证明油杯安装到位。

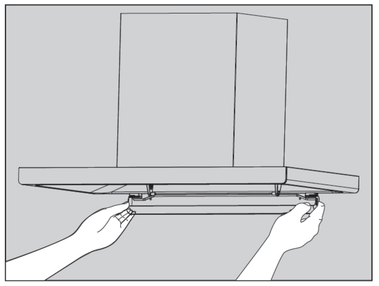

a.安装前先取下风机外罩；

b.根据钻孔地方的具体情况选定钻头。

⚠ 警告 禁止吸油烟机排出的气体排到用于排出燃烧燃气或其他燃料的烟雾使用的热烟道中。

安装后的调试

1. 轻触 ⏻ 键，检查吸油烟机是否开启，再轻触 ☼ 键，检查照明是否正常工作。
2. 再轻触 Ⓐ 键或 ๑ 键，检测电机转动是否正常，如出现下列异常情况，应立即切断电源，停止运转，并检查是否安装缘故(若确定吸油烟机发生故障，请致电方太授权的服务中心)。
   (1) 机体震动剧烈　(2) 膨胀管松动　(3) 叶轮不转动
   (4) 叶轮转动时明显的摩擦声　(5) 电机出现异常声响
3. 按照操作说明，检查所有按键功能是否正常。（若确定吸油烟机发生故障，请致电方太授权的服务中心）。

正确处理本产品	
	此标记表示本产品不应与其他家庭垃圾一起处理。为防止不合理的废品处理可能会对环境或人类健康造成危害，需要对本产品合理回收利用，以促进材料、资源的可持续利用发展。如您需要退回使用过的机器，请使用回收采集系统或联系相关零售商，他们会把机器环保、安全的回收利用。

清洗保养

I. 清洁维护注意事项

为了更加舒适地使用，请经常对吸油烟机表面进行清洁，这有利于吸油烟机的正常使用。

1. 只用中性皂或者中性洗涤剂进行清洁，清洁后用柔软的布擦干机体表面。
2. 如果吸油烟机表面有污点，使用中性清洁剂清洁，并避免清洁剂接触各按键。把清洁剂滴至污点处并短暂停留（清洁剂不要在机体上停留过长时间，那样将造成损害），使用柔软的抹布将污点擦去，用微湿的毛巾将清洁剂除去，然后再用柔软的干毛巾将机体擦干。
3. 不要让污渍在吸油烟机表面停留时间过长。
4. 如不小心将含盐的溶液、消毒剂、漂白粉以及其他清洁剂沾到不锈钢面板，应立即用湿布擦拭。

a.如果不按说明书规定的方法清洁，吸油烟机有起火的危险。

b.当清洁、维修吸油烟机前，务必先拔掉电源线插头，以免触电。

c.清洁时应防止电机、各控制键等电气部件进水。

d.当风机在使用时，禁止将手放入风机运行区域。

e.切勿使用汽油、酸性物质、苯、溶剂或任何其他化学药剂清洗吸油烟机。

f.请不要使用清洁球、刷子以及粗布等粗糙物进行清洁，以防止划伤机体表面。

II. 常规清洁

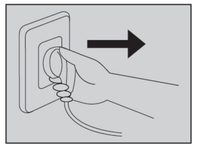

1.进行清洁之前断开电源。

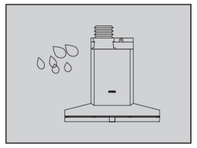

2.所有电子元件(包括电机和开关等)均需远离水源。

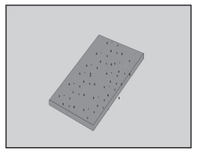

3.请勿使用粗糙材料(例如钢丝球、刷子或粗布等)清洁产品表面。否则将严重划伤表面。

4.请勿使用汽油、酸性物质、苯、溶剂和其他化学试剂进行清洁。如需清洁产品，请使用中性清洁剂并在清洁后使用软布将产品表面擦干。

5.如不锈钢面板沾有含盐液体、消毒剂、漂白粉和其他清洁剂，请立即使用湿布将其擦净，然后使用干布将其擦干。

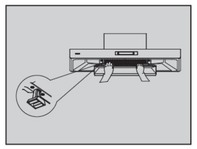

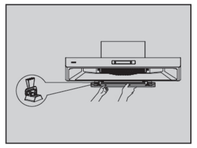

6.首先，用双手抓住蝶翼板前沿，向下翻转，使蝶翼板卡爪脱离，然后向下翻转一定角度，最后双手平端着蝶翼板向外取出。

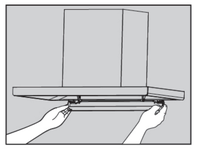

7.用双手拖住油杯两端，保持水平向正面移出倒去积油，将油杯、整流板放入加有中性洗涤剂的温水中浸泡，用软刷进行清洁。

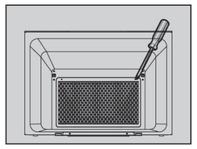

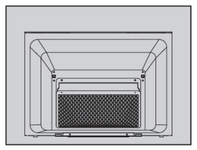

8.用左手拖住油网，右手用十字螺丝刀打开固定油网的两颗螺钉，取下油网。

a.当清洁、维修吸油烟机前，务必先拔掉电源线插头，以免触电。
b.每次使用吸油烟机后，请擦拭吸油烟机外表面并将挡烟板关闭。

使用方法

主要技术参数

电参数

型号	电压/频率	整机输入功率	电机功率	LED灯功率
EMG9063-GR	220V-240V~/50Hz	363W	358W	5W

性能参数

型号	EMG9063-GR	产品尺寸	895mm(L)×473mm(W)×525mm(H)	
最大静压(Pa)		1110		
档位		自动档	强档	弱档
风量(m^3/h)		1400	890	765
噪音(dB(A))		56	51	43

a. 所示噪音值为声压级噪音，对应声功率级噪音为：弱档56 dB(A)，强档64 dB(A)和自动挡68 dB(A)。
b. 风量测试按照IEC 61591标准。噪音测试按照IEC 60704标准。
c.所用灯为LED灯：灯功率为5W，电压范围为9—10V，灯尺寸为宽度474mm；深度15mm；高度37mm。

操作说明

■ **电源键**

轻触⏻，进入待机状态，此时可操作其他按键；
(2分钟内无其他按键操作，则自动关闭吸油烟机)
风机运行状态下，轻触⏻，⏻闪烁，进入延时关闭吸油烟机状态，2分钟后自动关闭吸油烟机；延时关闭吸油烟机状态下，再轻触⏻，则直接关闭吸油烟机。
(延时关闭吸油烟机过程中，如果轻触其他风量键，则退出延时)

■ **手势感应功能**

挥手 快速经过两端感应窗口，开启/关闭吸油烟机（包括风机&照明灯）。



手势感应功能示意图

以下按键只在电源键开启时有效：

■ **常态模式键（强/弱档）**

轻触，强档运行，按键全亮；再轻触，弱档运行，按键半亮；第三次轻触，风机停止运转。

■ **自动键**

轻触，亮，短时升速运行60秒后进入自动巡航模式运行，再轻触，风机停止运转。

■ **灯键**

轻触，开启照明灯，再轻触，关闭照明灯。

关于吸油烟机与烹饪器具一体控制的说明

如果您同时购买了方太公司的具有烟烹联动功能的吸油烟机和灶具，那么您可以享用我们的吸油烟机和灶具联动功能！

使用方法：

1. 对码连接（实现联动之前需要进行吸油烟机和烹饪器具的对码连接）
   (1) 吸油烟机和烹饪器具安装好并通电，同时确保灶具都处于关闭状态；
   (2) 轻触，启动吸油烟机，使其处于待机状态或工作状态，长按照明灯键5秒，油烟机“嘀”一声，同时烟灶联动指示图标闪烁，进入配对状态。在此状态下打开灶具旋钮，等待片刻，当油烟机“嘀”一声，同时常亮，表示对码完成。

⚠**注意**: 如果您的吸油烟机或灶具的电控板维修或更换，请重新对码，操作方法同上述。

2. 对码成功后，可以实现吸油烟机与烹饪器具的联动功能
   当烹饪器具点火后，吸油烟机自动开启，风机自动挡运行，同时照明灯开启；
   当烹饪器具关闭后，吸油烟机进入延时状态。
3. 解除烟烹联动配对
   (1) 使吸油烟机和烹饪器具通电，并确保灶具旋钮都处于关闭状态；
   (2) 轻触，启动油烟机，长按灯键5s，油烟机“滴”一声，同时烟烹联动指示图标闪烁，此时再轻触，关闭油烟机，则完成解除操作。

提示:

⚠1.待机状态下2分钟没有操作，油烟机会自动关机；
2.建议蒸煮时开启吸油烟机，保持厨房空气清新，否则较多水蒸气经过感应窗口可能会触发手势功能。

常见故障的识别和处理

故障现象	可能原因	检修方法
按开关，吸油烟机不工作，LED灯不亮	未接通电源	检查电源插头是否插好
		检查插座是否有电
电机转动但LED灯不亮	LED灯损坏	更换LED灯（本项必须由专业人员进行）
有机械振动噪声	螺钉松动	检查吸油烟机表面螺钉是否拧紧
吸力不强	吸油烟机与灶面的安装距离太大	降低吸油烟机安装高度（本项必须由专业人员进行）
	吸油烟机周围环境门窗通风太多，对流太大	关闭部分门窗
噪声太大	出风管表面凹陷变形	重新安装出风管（本项必须由专业人员进行）

a.更换LED灯，请联系方太授权的服务中心。
b.上述故障排除后，吸油烟机仍不能正常工作，请联系方太授权的服务中心。
c.保修期内保修需提供以下信息:
1.购买日期　2.产品型号
3.序列号　4.购买相关凭证
d.其他人员不得擅自维修吸油烟机，以免造成严重后果，而且产品将不享受保修服务。
e.以下情况不提供保修服务:
1.用户搬运、安装、使用、维护、保管不当而损坏的。
2.超出正常使用条件，强行使用本产品造成的故障和损伤（例如电压超出264V或低于189V而损坏的）。
3.自行或非方太指定服务人员或服务机构安装和拆修的产品。
4.购买凭证和保修卡信息与产品不符的。
5.因不可抗拒力造成产品损坏的（如自然灾害、战争等）。
6.不根据“使用说明书”的规定使用，造成产品故障或损伤的。

FOTILE

RANGE HOOD

User Manual | EMG9063-GR

Any needs,please contact FOTILE service center. Some pictures in this manual are sketch map,only for reference. If there are some discrepancies, please subject to real object.

WWW.FOTILEGLOBAL.COM

Dear User, thank you for purchasing the Fotile Range Hood. At Fotile, we manufacture exquisite appliances that are expertly crafted with the finest materials. Before using the Fotile Range Hood, please take some time to read through this Product Manual (manual). It will familiarize you with important safety, operation and maintenance instructions, as well as help maximize your culinary experience.

Before using the Fotile Range Hood, you must follow the instructions, as specified in this manual. Any damage resulting from the improper operation and/or maintenance of the appliance may result in the loss of warranty. The warranty will become invalid, and your warranty application,whether direct or indirect, will not be accepted by authorized service center of Fotile. If you require warranty or post-warranty after-sale service, please contact the local authorized service center of Fotile nearest you.

Your satisfaction with the Fotile brand is important to us. Our after-sales service centers provide assistance in resolving issues with Fotile appliances.

If you need service, please provide the product model and serial number on the product nameplate. Refer to diagram A below to locate the nameplate on your product.

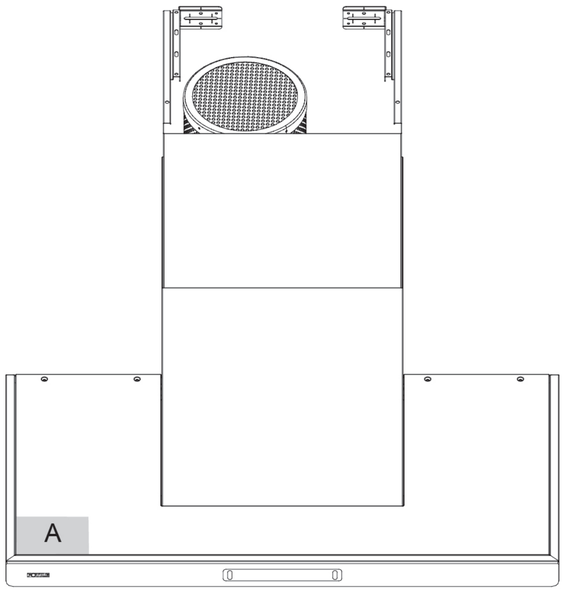

CONTENTS

Warning and Safety Instructions ---- 1

Installation ---- 5

- Packing List ---- 5
- Installation Warning ---- 6
- Product Basic Conditions ---- 7
- Installation Suggestions ---- 7
- Installation Steps ---- 9
- Debugging ---- 13

Cleaning and Maintenance ---- 14

Usage ---- 16

- Main Technical Specifications ---- 16
- Operation Instruction ---- 16
- Introduction to Hood-hob Linkage Function ---- 18

Normal Malfunction and Trouble Shooting ---- 19

Product features and specifications are subject to change, at any time, without notice and may be different from those in this material. Please visit our website at www.fotileglobal.com for the most up-to-date information.

Warning and Safety Instructions

Special version:

Please properly use the appliance, strictly complying with the user manual. FOTILE company will not bear responsibility for property loss and personal injury due to improper use.

⚠***Warning:***

This appliance is not intended for use by persons (including children) with reduced physical,-sensory or mental capabilities, or lack of experience and konwledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

The appliance can be used by children aged from 8 years and above and persons with reduced physical.sensory or mental capabilities or lack of experience and konwledge if they have been given supervision or instruction concerning use of the appliance in safe way and understand the hazards involved (only for EU market).

Children shall not play with appliance.

Cleaning and user maintenance shall not be made by children without supervison.

CAUTION: Accessible parts may become hot when used with cooking appliances.

a. Pour out the gathering oil periodically; please wipe the range hood surface once after every using the range hood.
b. Please frequently clean the range hood surface and oil cup.
c. There is a fire risk if cleaning is not carried out in accordance with the instructions.

⚠ Strictly execute

Ground Connection	The plug should be connected with reliable ground wire to ensure safety. The ground wire should not be connected with gas pipe, tap water pipe, lightening rod and telephone line. Bad ground connection may cause electric shock or other accidents.
	This appliance incorporates an earth connection for functional purposes only.
	Because the installation procedure of the range hood is complex, and the weight is heavier, it should be installed by professional person according to the instructions. Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
	If the new range hood is damaged obviously before using, please don't install and contact FOTILE service center soon.
	Please comply with the safety guideline provided by the heating equipment manufacturer priorly and safety regulations published by the fire authority simultaneously.

	The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the thickness of its solid part should be no less than 30mm. For drywalls, the range hood shall be fixed onto the wooden pillar at the back, mounting holes can be drilled directly into concrete walls. The range hood should be firmly fixed on the wall.
	When drilling on the roof or ceiling, please make sure not damage the electric wires and any other hidden devices.
	The range hood is for family use only, and don't use it in special environment (e.g. outdoor), and it also can't be used to exhaust dangerous or explosive substance or gas. Fotile assumes no responsibility if you use it in special environment.
	There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
	When the cooking pots catch fire, turn off the range hood immediately (It will stimulate the fire if the range hood is working). Effective fire extinguishing measures must be taken at once, such as covering the open flame with metal cover, turning off the general gas valve and keeping flammable substance away from the open flame, etc.
	Make sure the exhausting pipe can reach outdoors to avoid the fire and keep the fresh air in the room. Please don't make the waste gas stay indoor, loft, garage, etc. (This is only for ducted range hood)
	The working temperature should not be more than 40℃.
	Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers.
	Please clean the oil cup timely to avoid overflowing when the oil reaches the very scale in the oil cup. Please don't use the waste oil.
	Before install, clean or repair the range hood, please make sure cut off the power to avoid the electric shock. And wear protective golves to avoid your hands being hurt by range hood metal panel.

	The plug shall be accessible after the appliance has been installed.Cut off the power if you are not going to use range hood for a long time.
	If the supply cord is damaged, it must be replaced by the manufacturer,its service agent or similarly persons in order to avoid a hazard.
	If there is abnormality, please turn off the range hood and cut off the main power supply, contact FOTILE service center to repair it. It will easily cause dangers like electric shock, fire, if the range hood still working under abnormal conditions.
	Please don't let children use range hood by themselves and don't place it where infants can touch, otherwise, it will cause burning injury, electric shock or other accidents.
	Please keep the product plastic package away from the infants, to avoid suffocation, etc. Children should be supervised to ensure that they do not play with the appliance.

⚠ Forbidden

	Please clean the range hood according to the user manual, otherwise, it may catch fire or cause other dangers.
	Don’t transform, stretch, tie, ballast or extrude the power cord, or it may cause electric shock or fire.
	Don’t change the internal wiring by yourself, otherwise, it will cause possible abnormality and personal injury; and the improper repair leads to electric shock, fire or other dangers.
	The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.Regulations concerning on the discharge of air have to be fulfilled.
	It is strictly forbidden to let the stove working without pot otherwise it will damage the above range hood.Do not flame under the range hood.

	Don’t touch the bulb that is still working or finish working for a short while, to avoid scalding.
	Don’t put your hands or other things into impeller when it is working to avoid hurting.
	All electrical parts including motor, switch and connections, etc. should be away from water. Don’t rinse range hood directly with water. Don’t use the range hood when it is wet to prevent electric shock.
	Never touch the power plug, power switch or other electric parts with wet hand, otherwise, it may cause electric shock.

a. Services guaranteed under warranty must be performed by Fotile certified service provider or personnel. The warranty is not effective for products removed for repair without authorization.

b. Adhere to the voltage and frequency settings listed in this manual to avoid possible damages to the range hood.

c. When the range hood and appliances supplied with enegy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa(4 x 10^{-5} bar) (only for GERMANY).

d. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.

e. Tempered glass is applied to the products of the company and the tempering treatment of the glass determines the extremely little possibility of spontaneous explosion.If the occurrence of spontaneous explosion is not due to improper use, our company promises free replacement of the accessories.The possibility of tempered glass breaking can be significantly increased in the following situations, which should be avoided: For instance, hitting the glass, especially the corners of the glass, with cooking utensils or other hard objects; The glass is impacted when you open a cabinet door around the Range Hood; Put the glass in an extremely hot or cold environment or an environment where heat and cold are excessively alternated.

Installation

Packing List

Main body (axonometric drawing)	1
Sealing tape + Recirculation kit	1
	1
Hook	1
Warranty card	1
Expansion tube Φ10×60	8
Wood screw ST4.5×60	8
Screw for outlet housing M4×18mm	8
Screw for fan frame M4×6mm	2

Left decorative cover hook	1
Right decorative cover hook	1
Hook bracket	2
Mounting cardboard for decorative cover hooks	1
Wing plate	1
Outlet housing + Upper gasket	1
	1
Product instruction manual	1
Fixing screws for decorative cover hooks	2
Screw for exhaust duct ST3.9×9.5mm	4

Decorative cover	1
Fan cover	1
Grease Cup	1

Installation Warning

Caution	
It is recommended to install a range hood after the kitchen decoration is completed.	If the gas stove needs to be moved before installing the range hood, please close the gas valve before moving or close the power hob.
Ensure that the wall on which the range hood is installed is flat and the range hood must be kept level.	After installing the range hood, please ensure that the machine can operate normally and carefully read and keep the Operation Instruction.
Packaging of new range hood: Please handle these packaging materials in an environmentally friendly manner to maintain a good environment. Do not allow children to play with plastic films and packing boxes, which may cause suffocation accidents. Therefore, please keep packaging materials away from children. Packaging materials are not toys!	To protect the environment, please dispose of old range hoods that cannot be used properly.
	The range hood is heavy and the installation process is complex, so please contact professionals to install it according to the Instructions.
Wear qualified protective gloves to avoid scratches and bruises caused by metal plates and orifices inside the range hood when installing, cleaning or repairing the range hood on account that it may have very sharp edges.	Pay attention not to damage wires and other hidden equipment when excavating or drilling holes in walls or ceilings. Please cut off the power supply of the range hood during installation.
The special power socket shall be applied and grounded reliably.	The wall where the range hood is installed should have sufficient support strength, otherwise the range hood may fall off and be damaged.
It is recommended to use the recirculating range hood with non-combustion appliances. If the recirculating range hood is used with combustion appliances, proper window ventilation shall be ensured.	

Wall Preparation

The wall should be strong enough to support the range hood. As for hollow wall or hollow plate, the minimum thickness of the lumber should be 30mm. As for concrete wall, the installation can be directly operated. The range hood should be firmly fixed on the wall.

Product Basic Conditions

EMG9063-GR

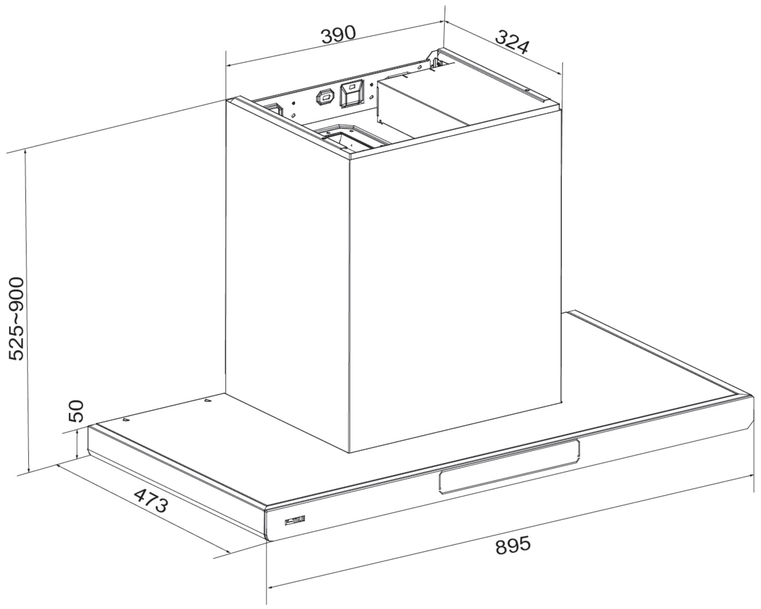

Product Basic Conditions(Unit:mm)

Installation Suggestions

Installation Position

1.The range hood is only for family use only; Please do not use the range hood under other conditions.

2.The range hood should be installed above the stove. Keep the appliance horizontal.

3.The temperature of the range hood should not be more than 40℃.

4.The wall should be none-flammable. Never install the range hood on the flammable wooden wall.

Installation Diagram of Hoods and Cabinets. (Unit: mm)

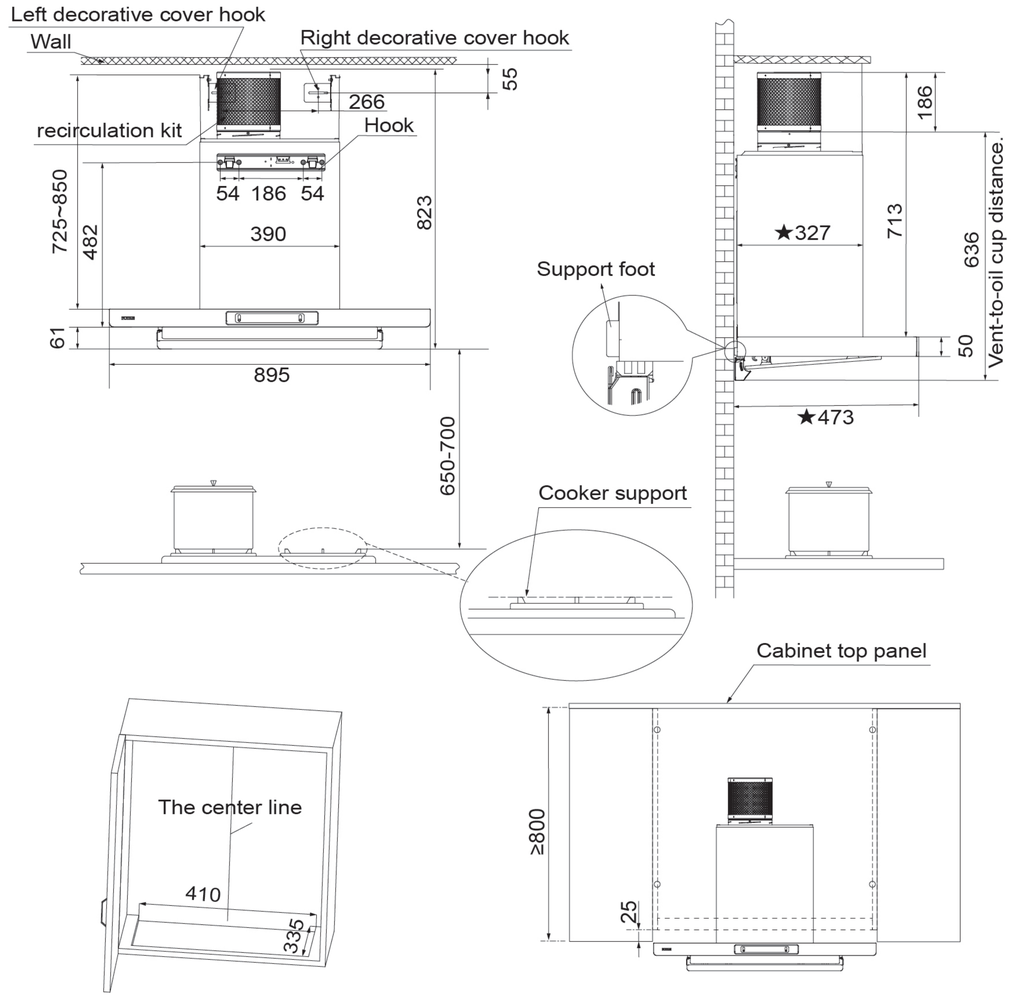

EMG9063-GR Installation diagram
(★ is the distance from the wall)

Notes:
The height for installing the range hood (i.e. the distance between the bearing surface of cooking appliance on the stove and the lowest pa of the range hood) the gas hob must not be less than 650mm, the power hob must not be less than 600mm.
This should be considered when the installation instructions for gas stove specify a large installation distance. In order to ensure the effect of oil fume suction, please install the range hood within the recommended height for installation. If the actual height for installation exceeds the recommended height, the product's oil fume suction effect may be affected to a certain extent. If relevant local laws specify the height for installation of range hood, it is recommended to comply with the laws accordingly.

Preparation before installation

1. Warning：

(1) Please don't make sundries into exhaust pipe to avoid damaging the range hood. Estimate the exhaust pipe position.

(2) Estimate the location between the range hood and the outdoor exhaust duct. Refer to the Installation Diagram.

(3) A straight and short exhaust pipe makes smoke extraction more smooth.

(4) A curving and long ducting run should be avoided, as it will lower the performance of the range hood.

(5) The joint between exhaust pipe and wall hole should be sealed with tape, and ensure firm connection between exhaust pipe and exhaust cover.

(6) Too small wall hole will affect smoke extraction, therefore, please broaden the wall hole to fit exhaust pipe size under safety condition.

2. Tool preparation

Please prepare the following tools before range hood installation (include but not limited to the following tools).

(1) Impact electric drill (with drillbit of Φ 8mm) (2) Cross screwdriver

(3) Measuring tape (4) Gradienter

Installation Steps

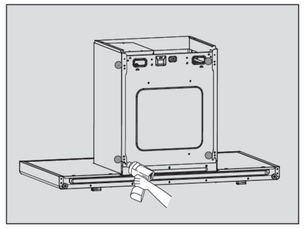

1.The electric impact drill shall be equipped with impact drill bit.

2.Lift the whole machine out of the packing case, unscrew the 4 screws used for fixing the fan cover on the back of the range hood, and remove the fan cover and decorative cover.

3.Securing the main unit hook and decorative cover hood

(1) As shown in Installation Diagram 1, drill a Φ10mm hole at the marked spot, and embed a Φ10×60mm expansion tube. Secure the hook with an ST4.5×60mm wood screw, and use a level to ensure the hook is level.

Note:Two of the screws that secure the hooks of the range hood must be fixed on the wood columns behind the wall.

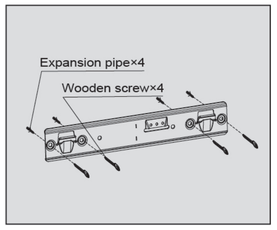

Fig.1

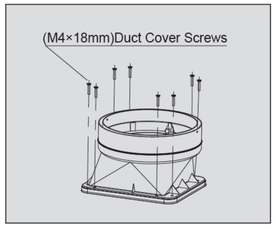

Fig.2

(2) Assemble the left decorative cover hook with the hook bracket and fix them with 1 stainless steel screw; fix the right hook and hook bracket in the same way: the hook brackets are universal;

(3) Install the mounting cardboard for decorative cover hooks against the wall in the specified direction;

(4) Drill holes according the pre-drilled positions marked on the mounting cardboard for decorative cover hooks;

Drill a Φ10mm hole at the marked spot and embed a Φ10×60mm expansion tube. Secure it with an ST4.5×60mm wood screw. Note: Ensure the hooks for both left and right decorative covers are secure and free from rotation.

4.As shown in Fig. 2, use 8(M4×18mm) outlet housing screws to fix the outlet housing and sealing ring on the top of the main body.

5.Lift the main body, hang the hook holes at the back into the hooks, use the level ruler to confirm that the main body is horizontal, and use the fan frame screws M4×6mm to fix the fan frame and the hooks.

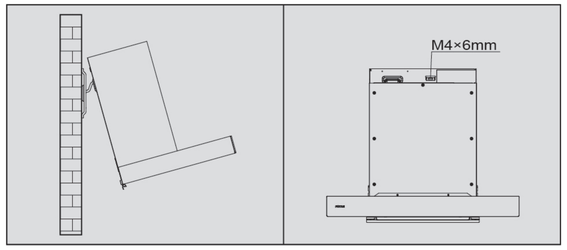

6.Install recirculation kit: Insert the recirculation kit into the exhaust cover,and seal the exhaust cover to the bottom of the kit with sealing tape.

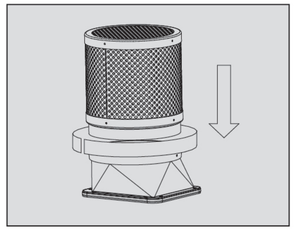

7.Installation of fan cover and decorative cover:

(1) Place the decorative cover into the fan cover;

(2) Pick up the fan cover and the decorative cover at the same time, first clip the decorative cover into the decorative cover hook, and then push the decorative cover and fan cover to the end along the decorative cover hook assembly at the same time;

(3) After pushing the decorative cover and the fan cover to the end, the fan cover slowly slips down, clamp the fan cover locking tab into the fan frame, and then insert the fan cover into the gap between the top plate and the fan frame.

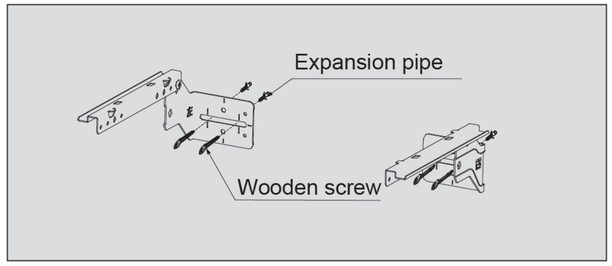

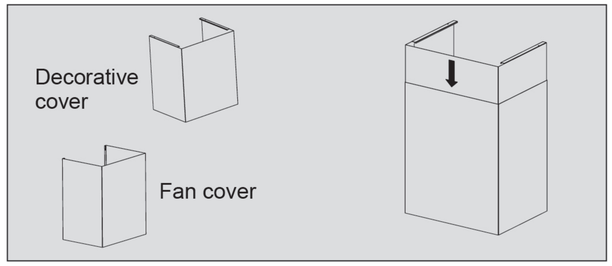

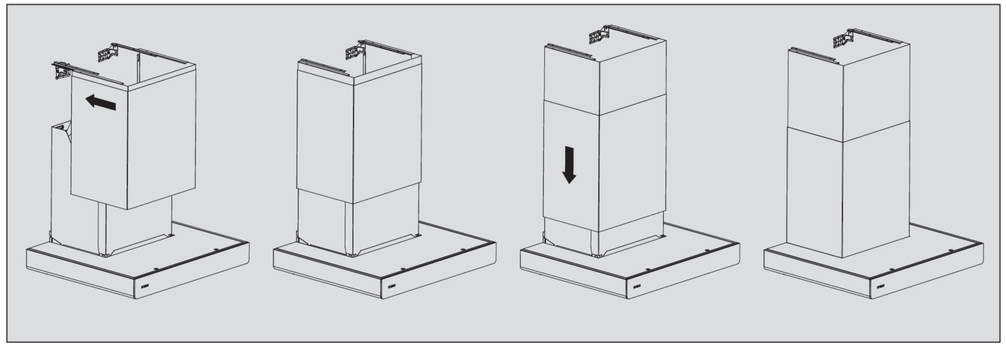

8.Install the wing plate:

(1) Hold the front side of the wing plate tightly with both hands, and put the left and right hooks on the rear side of the wing plate into the hook frame at the bottom of the fume hood;

(2) Hold the wing plate with both hands, rotate it upward, and then clamp the wing plate locking tab into the touch tab in the fume hood.

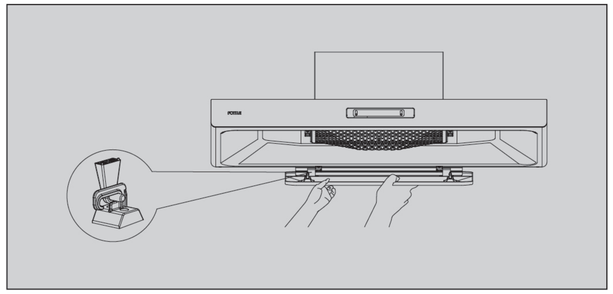

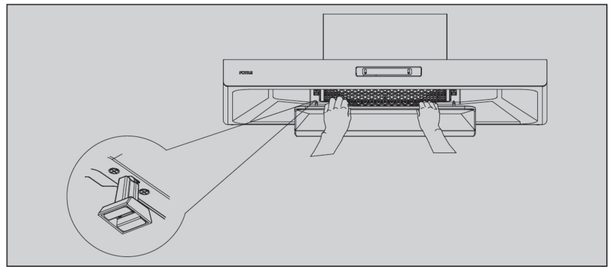

9.Installing the Grease Cup:

Hold both ends of the grease cup with both hands. Maintain horizontal alignment while pushing steadily until a distinct click is heard. This confirms the detent ball on the grease cup hook has engaged with the positioning hole, indicating proper installation.

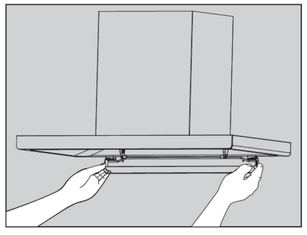

a. First take down the fan cover prior to installation;

b. Select the drill bit according to the specific conditions of the drilling place.

⚠ Warning: Don't exhaust the waste gas from the range hood to the hot flue for exhausting combustion gas or smoke of other fuels.

Debugging

1. Press , check whether smoke baffle turns up. Press , check whether light works normally.
2. Press or , check whether motor turns normally. In the following cases, cut off power, stop turning and check whether it is reason of installation (if range hood breaks down, please contact our service center).
   (1) Machine shakes violently (2) Expansion pipe looses (3) Impeller doesn't turn
   (4) Impeller with obvious grating when turning (5) Motor with abnormal noise
3. Check whether buttons are functioning normally according to the operation instructions. (If it is determined that the rangehood is faulty, please call the Fotile authorized service center)

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal,recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Cleaning and Maintenance

I. Precautions for cleaning and maintenance

For convenient use, please clean the surface of the range hood frequently, which is good for the normal use of range hood.

1. Clean with neutral soap or neutral detergent, and dry the surface of machine body with a soft cloth after cleaning.
2. Clean the stains on the surface of range hood with neutral detergent, and keep the detergent away from all buttons. Drop the detergent to the stains and keep it there for a moment (the detergent should not be kept on the machine body for a long time, otherwise it will damage the machine), and wipe the stains with soft cleaning cloth; remove the detergent with a damp towel, and then wipe the machine body with a soft dry towel.
3. Do not allow stains to remain on the surface of the range hood for too long.
4. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.

a.There is a fire risk if cleaning is not carried out in accordance with the instructions.
b.Please cut off the power first before cleaning and replacing components so as not to get an electric shock.
c.Prevent the electrical parts such as motor and all control buttons from water while cleaning.
d.Do not put your hand into the impeller operating area during operation of the impeller.
e.Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents.
f.Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface.

II. Routine Cleaning

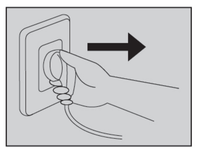

1. Cut off the power before cleaning.

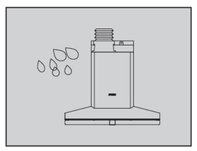

2. All electric parts, include motor, switch, etc. should be away from water.

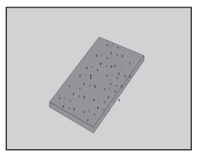

3. Please don't clean the surface with rough material like steel wire ball, brush or coarse cloth, etc. It will greatly scratch the surface.

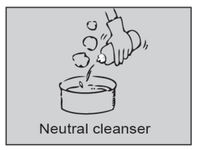

4. Please don't clean with gasoline, acidic substance, benzene, solvent and other chemical agents. If you need to clean, please use neutral cleanser, and wipe dry the appliance surface by soft cloth after cleaning.

5. If the stainless steel panel is stained with salty liquor, disinfectant, bleaching powder and other cleanser, please wipe it by wet cloth at once and dry it by dry cloth.

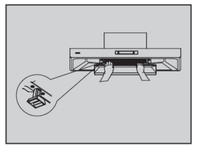

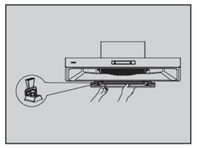

6. First, grasp the front edge of the wing plate with both hands, flip it downward to make the wing plate claw detach, then flip it downward by a certain angle, and finally take out the wing plate with both hands holding it smoothly.

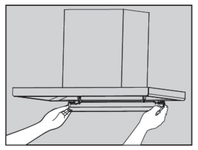

7. Hold both ends of the grease cup with both hands. Remove it straight out while maintaining horizontal alignment to drain accumulated grease. Immerse both the grease cup and flow straightener plate in warm water with neutral detergent, then clean using a soft brush.

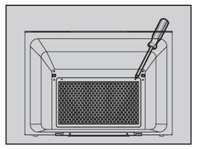

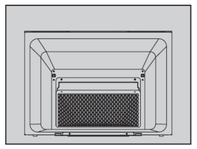

8. Drag the oil screen with the left hand and loosen the two screws that secure the oil screen with a Phillips screwdriver in the right hand to remove the oil screen.

a.After cleaning, restore the smoke baffle shield before powering off.
b.Please wipe surface of range hood and surface of air inlet net then close smoke baffle shield after using range hood every time.

Usage

Main Technical Specifications

Electrical parameter

Model	Voltage/Frequency	Input Power	Motor Power	LED Light Power
EMG9063-GR	220V-240V~/50Hz	363W	358W	5W

Exhaust model (exhaust pipe)

Model	EMG9063-GR	Product size	895mm(L)×473mm(W)×525mm(H)	
Max static pressure(Pa)		1110		
Gear		Auto mode	High mode	Low mode
Air flow(m^3/h)		1400	890	765
Noise(dB(A))		56	51	43

a.Noise shown in table is sound pressure level. The corresponding sound power level is: 56 dB(A) for low,64 dB(A) for high and 68 dB(A) for turbo.
b.The air flow in the table are tested in accordance with IEC 61591 standard. The noise in the table are tested in accordance with 60704 standard.
c.Use type lamp is self-ballasted flourescent reflector lamp-Interral induction type ballast.
1.Max wattage:5W
2.Voltage range:9-10V
3.Dimensions:width 474mm/depth 15mm/height 37mm

Operation Instruction

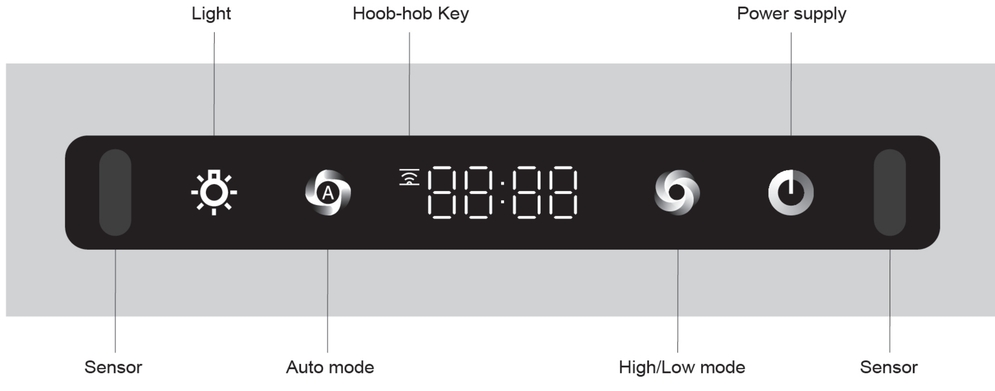

■ **Power supply**

Gently touch to enter the standby mode. In this case, other buttons can be operated (if no other buttons are pressed within 2 minutes, the range hood will automatically turn off)

When the fan is operating, gently touch ; will flash to enter the delayed shutdown mode, and the range hood will automatically turn off after 2 minutes; in the delayed shutdown mode, gently touch again to directly turn off the range hood.

(In the process of delayed shutdown of the range hood, if any other air volume button is touched gently, exit from the delayed shutdown mode)"

■ **Sensor**

Wave your hand quickly to pass through the induction windows at both ends to turn on/off the range hood (including the fan & LED lamp).



Schematic Diagram of the Gesture Recognition Function

The following buttons are only effective when the power button is turned on.

■ **Normal mode button (high/low mode)**

Gently touch to make the range hood operate in the strong gear, with all button indicators fully lit; gently touch again to make the range hood operate in the weak gear, with button indicators half-lit; gently touch a third time, the fan stop operating.

■ **Automatic mode**

Gently touch to turn it on. It will run at an increased speed for 60 seconds, then enter automatic cruise mode; after gently touching again, the fan stops operating.

■ **Indicator light button**

Gently touch to turn on the light, and gently touch again to turn it off.

Instructiong on linkage control of the range hood and cooktops

If you have purchased FOTILE Range hood, and Gas Hob which have Hoob-hob Key at the same time, you can enjoy their linkage function!

How to use:

1. Code-matching connection (code-matching between the range hood and cooktops is required before their connection)
   (1) Install the range hood and cooktops properly and power them on; meanwhile, ensure that all knobs of the hob are in the off state.
   (2) Gently touch to start the range hood, making it in the standby or operating state; press and hold the LED Lamp button for 5 seconds until the range hood beeps once, and meanwhile, the hob-to-hood connection icon flashes to enter the code-matching state. In this state, turn on the hob knob and wait for a moment until the range hood beeps once; meanwhile, is normally on, indicating that code-matching is completed.

⚠**Caution:** If the electrical control panel of your range hood or hob is repaired or replaced, please conduct code matching again according to the above-mentioned operating steps.

2. After code matching is successful, the connection function of the range hood and cooktops can be realized.
   After cooktops is ignited, the range hood will automatically be turned on and the fan will operate in auto gear; meanwhile, the LED Lamp will be turned on;
   After cooktops is turned off, the range hood will enter the delay state.
3. Unmatching the Hoob-hob Key connection
   (1) Power on the range hood and cooktops and ensure that all knobs of the hob are in the off state;
   (2) Gently touch to start the range hood,press and hold the LED Lamp button for 5seconds until the range hood beeps once,while the Hoob-hob Key connection icon flashes.Then gently touch again to turn off the range hood,unmatching is completed.

Hints:

⚠1.The range hood will be turned off automatically if it is not operated for 2 minutes in the standby state;

2.It's suggested that the range hood be turned on during steaming to keep the kitchen air fresh, otherwise, too much steam passing by the Sensor Window may trigger the GESTURE function.

Normal Malfunction and Trouble Shooting

Malfunctions	Possible reasons	How to check
Range hood can't work, light can't lighten	Haven't connected with power supply	Check whether the plug is well inserted or not
		Check whether there is electricity or not in the plug
Motor can working, but light can't lighten	LED light is damaged	Replace LED light (done by professional people)
There is machinery shaking noise	Screw is loosed	check whether the surface screws are tightened or not
Suction power is weak	Too long distance between range hood and stove	Lower the range hood installation height (done by professional people)
	Too much ventilation near the range hood leads to strong convection	Close some doors and windows
Noisy	Exhaust pipe surface is distorted	Reinstall exhaust pipe (done by professional people)

a.Change the LED light: please contact FOTILE after-sale service center.

b.If the range hood still can't work after getting rid of the above malfunctions,please contact FOTILE service center.

c.The following information is required for the warranty period:

1.Date of purchase 2.Product model

3.Serial number 4.Relevant vouchers for purchase

d.The ventilator shall be not allowed to be repaired by any party other than Fotile's appointed technicians.Otherwise it may cause serious consequences and exempt the product from warranty.

e.The following circumstances do not fall into the scope of free warranty, and a fee will be charged for repair.

1.Damage resulting from improper handling, installation, use, maintenance and safekeeping conducted by customer.

2.Failure and damage caused by using the product beyond the normal operating conditions(damage caused in the case that the voltage is higher than 264V or lower than 189V).

3.The product installed, dismantled or repaired by customer or any party other than Fotile's appointed service staff or agency.

4.Discrepancy between the information on the purchase voucher and the warranty card and the product.

5.Product damage caused by force majeure (such as natural disaster and war, etc.).

6.Product failure or damage arising from use not in conformity with the "instructions".